

Operating Manual UFR1001E

updated: 2018-04-06/Ba
from Firmware: 0-08

- NA-protection according to VDE-AR-N 4105, in-plant power generators on the low voltage grid
- For use in in-plant power generators on the medium voltage grid according to BDEW
- With selectable vector shift detection
- With selectable Rate of Change of Frequency (ROCOF, df/dt) protection



New, Firmware 0-08:
new program 15 with default settings for Switzerland
to VSE/EEA-CH 2014,
Pr 20-23 (GB) vector shift ($\mu 5r$) up to 65°


(Display of the firmware version: **I n F o** → **F n r** or press "Set" for >10s)

Table of contents

1	Display and controls	3
2	Default settings and firmware version, VDE-AR-N 4105 + BDEW	4
3	Default settings and firmware version, ÖVE/ÖNORM E 8001-4-712, G83/2+G59/3	6
4	Application and brief description	8
5	Summary of the functions	8
6	Connection diagrams	9
6.1	1x PV, 2x section switch (= Standard low voltage)	9
6.2	Multiple PV with section switch and with a series-switched NC's as feedback contacts	10
6.3	Multiple PV with section switch and with a parallel-switched closing contacts as feedback	11
6.4	1x PV, 1x section switch with nc/normally closed contacts (medium voltage)	12
6.5	Generator operation, suppression of the feedback contacts	13
7	Important information	14
8	Assembly	14
9	Detailed description	15
9.1	Description of the connections	15
9.2	Functional characteristics	16
10	Commissioning	17
10.1	Program setup	17
10.2	Control chart	18
10.3	Description of the parameters	20
10.4	Display mode (last decimal point off)	21
10.5	Menu mode (last decimal point on)	21
10.6	Configuration mode (last decimal point flashes).....	21
10.7	Test mode (timekeeping only activated and connected feedback contacts)	21
10.8	Alarm counter	22
10.9	Cumulative alarm time (display in hours)	22
10.10	Alarm memory	22
10.11	Standby counter and standby time	23
10.12	Code lock	23
10.13	Sealing	24
10.14	Simulation	24
10.15	Possible indications in display	25
11	Technical Data	26
12	Maintenance and repair	27
13	Troubleshooting and measures	28
14	Construction form V6	29
15	Certificate of conformity VDE-AR-N 4105	30
16	Certificate of conformity bdeW 2008 + 2013	32
17	Certificate of conformity ÖVE/ÖNORM E 8001-4-712, Pr 10	33
18	Certificate of conformity GB G59/3, Pr 20+21	34
19	Certificate of conformity GB G83/2, Pr 22+23	35
20	Certificate of conformity DIN V VDE V 0126-1-1, GB	36

21	Certificate of conformity DIN V VDE V 0126-1-1, Fr.....	37
22	Adjustment values table VDE-AR-N 4105, Low Voltage Pr 1+2+7	38
23	Adjustment values table BDEW June 2008, acc 3.2.3.3-1, Medium Voltage Pr 3-6	38

1 Display and controls

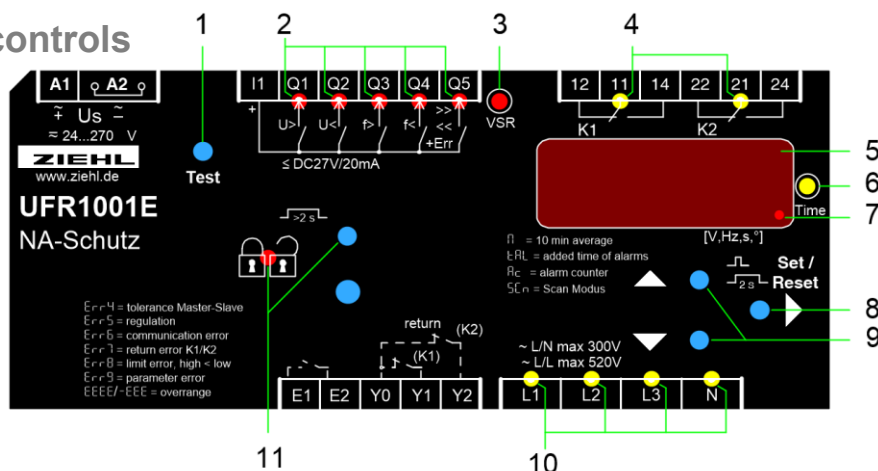

1 Test button

Press briefly	Output relays de-energize immediately. If Y1+Y2 are connected and the feedback signal is activated, the tripping time is displayed until the next time a button is pressed / max 60s
---------------	--

2 LEDs frequency / voltage limit value undercut / exceeded (red)

On, RL or RL n	Limit value undercut / exceeded
FLASHES, RL or RL n	Reset delay doF counting down

3 LED vector surge (VSR, red)

ON, RL	Threshold value for vector shift exceeded
FLASHES, RL	Reset delay doF counting down

4 LEDs relay status (yellow)

OFF	Relay is released
ON	Relay operating

5 Digital display 4-digits (red)

Depending on program, display of current voltage, frequency, vector shift, average value
Displays the alarm signals, e.g. RL, RL n
Displays the errors with error code e.g. Err9

6 LED Time (yellow)

ON	A time is displayed
----	---------------------

7 Last decimal point (red)

OFF	Display mode
Illuminated	Menu mode
Flashes	Configuration mode

8 Set/Reset key (in display mode, normal state)

Press briefly	Display of next measured value / alarm counter
Press for > 2 s	Reset, quit error messages
Press for > 4 s	Displays the program, e.g. Pr 1
Press for > 10 s	Displays the software version, e.g. 0-05

9 Up / Down key (in display mode, normal state)

Press briefly	Change to the menu mode, display of alarm memory (Down) / cumulative time of alarms, standby counter, standby time (Up), pushing Set button for ≥ 2 s resets the stored values
Press for > 2 s	Display of MAX (Up) / MIN (Down) - measured values, additional pushing of Set button for ≥ 2 s deletes the stored values

10 LEDs measurement allocation (yellow)

LEDs	Measured value
Lx and N ON	Voltage value (L1 against N, L2 against N, L3 against N)
Lx and Ly ON	Voltage value (L1 against L2, L2 against L3, L1 against L3)
Lx FLASHING quickly	Vector surge (L1, L2, L3)
L1 FLASHING	Frequency

Sealable button + LED

Press for > 2 s	Lock / Unlock
 LED red	Settings and simulation mode are locked, While attempting to set, Loc is displayed for 3s
LED green	Setting and simulation enabled

2 Default settings and firmware version, VDE-AR-N 4105 + BDEW

When changing programs, all parameters are reset to the default settings.

Menu	Parameter / Unit		Default settings 								Users Data
			Low voltage VDE-AR-N 4105			Medium voltage BDEW					
			3 AC+N 230V	3 AC 400V	2/1 AC+N 230V	3 AC+N 57,7V	3 AC 100V	3/2/1AC +N 230V	3 AC 400V		
			Pr 1 *	Pr 2	Pr 1	Pr 3	Pr 4	Pr 5	Pr 6		
U ⁻⁻⁻	U ⁻⁻⁻ Alarm on/off		-	-	-	on	on	on	on		
	U ⁻⁻⁻ Overvoltage	V	-	-	-	66.4	115	264	458		
	H ⁻⁻⁻ Hysteresis	V	-	-	-	1.0	1.0	3.0	3.0		
	dRL Response time	s	-	-	-	0.10	0.10	0.10	0.10		
	doF OFF-delay	s	-	-	-	60	60	60	60		
U ⁻	U ⁻ Alarm on/off		on	on	on	on	on	on	on		
	U ⁻ Overvoltage	V	264	458	264	62.3	108	249	430		
	H ⁻ Hysteresis	V	5.0	5.0	5.0	1.0	1.0	3.0	3.0		
	dRL Response time	s	0.10	0.10	0.10	60.00	60.00	60.00	60.00		
	doF OFF-delay	s	60	60	60	60	60	60	60		
UN	UN Alarm on/off		on	on	on	oFF	oFF	oFF	oFF		
	UN Overvoltage	V	253	438	253	63.5	110	253	438		
	HN Hysteresis	V	3.0	3.0	3.0	1.0	1.0	3.0	3.0		
	dRL Response time	s	0.10	0.10	0.10	0.10	0.10	0.10	0.10		
	doF OFF-delay	s	60	60	60	60	60	60	60		
U ₋	U ₋ Alarm on/off		on	on	on	on	on	on	on		
	U ₋ Undervoltage	V	184	318	184	46.2	80.0	184	318		
	H ₋ Hysteresis	V	5.0	5.0	5.0	1.0	1.0	3.0	3.0		
	dRL Response time	s	0.10	0.10	0.10	2.70	2.70	2.70	2.70		
	doF OFF-delay	s	60	60	60	60	60	60	60		
U ₋₋	U ₋₋ Alarm on/off		-	-	-	oFF	oFF	oFF	oFF		
	U ₋₋ Undervoltage	V	-	-	-	26.0	45.0	104	180		
	H ₋₋ Hysteresis	V	-	-	-	1.0	1.0	2.0	2.0		
	dRL Response time	s	-	-	-	0.30	0.30	0.30	0.30		
	doF OFF-delay	s	-	-	-	60	60	60	60		
F ⁻⁻⁻	F ⁻⁻⁻ Alarm on/off		-	-	-	oFF	oFF	oFF	oFF		
	F ⁻⁻⁻ Overfrequency	Hz	-	-	-	51.50	51.50	51.50	51.50		
	H ⁻⁻⁻ Hysteresis	Hz	-	-	-	1.45	1.45	1.45	1.45		
	dRL Response time	s	-	-	-	0.10	0.10	0.10	0.10		
	doF OFF-delay	s	-	-	-	60	60	60	60		
F ⁻	F ⁻ Alarm on/off		on	on	on	on	on	on	on		
	F ⁻ Overfrequency	Hz	51.50	51.50	51.50	51.50	51.50	51.50	51.50		
	H ⁻ Hysteresis	Hz	1.45	1.45	1.45	1.45	1.45	1.45	1.45		
	dRL Response time	s	0.10	0.10	0.10	0.10	0.10	0.10	0.10		
	U ⁻⁻⁻ Alarm on/off	s	60	60	60	60	60	60	60		

* default setting

Display of the program: **Info** → **Pr** or when switching on
Display of the firmware version: **Info** → **Fnr**

Menu	Parameter / Unit		Default settings 								Users Data
			Low voltage VDE-AR-N 4105			Medium voltage BDEW					
			3 AC+N 230V	3 AC 400V	2/1AC +N 230V	3AC+ N 57,7V	3 AC 100V	3/2/1AC +N 230V	3 AC 400V		
			Pr 1 *	Pr2	Pr1	Pr3	Pr4	Pr5	Pr6		
F_	F_ Alarm on/off		on	on	on	on	on	on	on		
	F_ Underfrequency	Hz	47.50	47.50	47.50	47.50	47.50	47.50	47.50		
	H_ Hysteresis	Hz	1.00	1.00	1.00	1.00	1.00	1.00	1.00		
	dRL Response time	s	0.10	0.10	0.10	0.10	0.10	0.10	0.10		
	doF OFF-delay	s	60	60	60	60	60	60	60		
F_	F_ Alarm on/off		-	c	-	oFF	oFF	oFF	oFF		
	F_ Underfrequency	Hz	-	-	-	47.50	47.50	47.50	47.50		
	H_ Hysteresis	Hz	-	-	-	1.00	1.00	1.00	1.00		
	dRL Response time	s	-	-	-	0.10	0.10	0.10	0.10		
	doF OFF-delay	s	-	-	-	60	60	60	60		
UonF	UonF on/off		oFF	oFF	oFF	oFF	oFF	oFF	oFF		
	UonF voltage	V	46.0	46.0	46.0	20.0	20.0	46.0	46.0		
uSr	uSr Alarm on/off		StbY	StbY	StbY	StbY	StbY	StbY	StbY		
	uSr Vector shift	°	10.0	10.0	10.0	10.0	10.0	10.0	10.0		
	doF OFF-delay	s	3	3	3	3	3	3	3		
	dEon Suppression time	s	2	2	2	3	3	3	3		
	uSr Number of phases		3Ph	3Ph	3Ph	3Ph	3Ph	3Ph	3Ph		
rocF	rocF Alarm on/off		oFF	oFF	oFF	oFF	oFF	oFF	oFF		
	dFdt delta f / delta t	Hz /s	0.800	0.800	0.800	0.800	0.800	0.800	0.80		
	PER periods		20	20	20	20	20	20	20		
	dRL Response time	s	0.10	0.10	0.10	0.10	0.10	0.10	0.10		
	doF OFF-delay	s	60	60	60	60	60	60	60		
rEL	ErEL Response time Yx	s	5.0	5.0	5.0	oFF	oFF	oFF	oFF		
	doFA Mode		ind	ind	ind	ind	ind	ind	ind		
	doFA Off-delay all	s	0	0	0	0	0	0	0		
ddi	ddi Display delay	s	0.5	0.5	0.5	0.5	0.5	0.5	0.5		
	diE Display duration SCn	s	3.5	3.5	3.5	3.5	3.5	3.5	3.5		
Si	U Voltage	V	230	400	230	57.7	100	230	400		
	F Frequency	Hz	50.00	50.00	50.00	50.00	50.00	50.00	50.00		
	uSr Vector shift	°	0.0	0.0	0.0	0.0	0.0	0.0	0.0		
CoDE	Pin Pincode		504	504	504	504	504	504	504		
Info	Fnr Firmware version		0-08	0-08	0-08	0-08	0-08	0-08	0-08		
	Snr Serial number		xxxx	xxxx	xxxx	xxxx	xxxx	xxxx	xxxx		
	h Operating hours	h	xxxx	xxxx	xxxx	xxxx	Xxxx	xxxx	xxxx		
	Err Error counter		xxx	xxx	xxx	xxx	xxx	xxx	xxx		
	Pr Program		1	2	1	3	4	5	6		

3 Default settings and firmware version, ÖVE/ÖNORM E 8001-4-712, G83/2+G59/3

When changing programs, all parameters are reset to the default settings.

Menu	Parameter / Unit				Default settings 				Users Data
			ÖVE/ ÖNORM E 8001- 4-712	VSE/EE A-CH 2014	G83/2 + G59/3				
			3AC+N 230V	3AC+N 230V	3AC+N 230V *	3AC 400V *	3AC+N 57,7V *	3AC 100V *	
			Pr 10	Pr 15	Pr 20	Pr 21	Pr 22	Pr 23	
U ⁻⁻⁻	U ⁻⁻⁻ Alarm on/off		-	-	on	on	on	on	
	U ⁻⁻⁻ Overvoltage	V	-	-	273	476	68.7	119	
	H ⁻⁻⁻ Hysteresis	V	-	-	5.0	5.0	1.0	1.0	
	dRL Response time	s	-	-	0.50	0.50	0.50	0.50	
	doF OFF-delay	s	-	-	20	20	20	20	
U ⁻	U ⁻ Alarm on/off		on	on	on	on	on	on	
	U ⁻ Overvoltage	V	264	264	262	456	65.8	114	
	H ⁻ Hysteresis	V	5.0	5.0	5.0	5.0	1.0	1.0	
	dRL Response time	s	0.10	0.10	1.00	1.00	1.00	1.00	
	doF OFF-delay	s	30	120	20	20	20	20	
UN	UN Alarm on/off		on	on	oFF	oFF	oFF	oFF	
	UN Overvoltage	V	258	253	262	456	65.8	114	
	HN Hysteresis	V	3.0	3.0	5.0	5.0	1.0	1.0	
	dRL Response time	s	0.10	0.10	1.00	1.00	1.00	1.00	
	doF OFF-delay	s	30	120	20	20	20	20	
U ₋	U ₋ Alarm on/off		on	on	on	on	on	on	
	U ₋ Undervoltage	V	184	184	200	348	50.2	87.0	
	H ₋ Hysteresis	V	5.0	23.0	5.0	5.0	1.0	1.0	
	dRL Response time	s	0.10	0.10	2.50	2.50	2.50	2.50	
	doF OFF-delay	s	30	120	20	20	20	20	
U _{..}	U _{..} Alarm on/off		-	-	on	on	on	on	
	U _{..} Undervoltage	V	-	-	184	320	46.2	80.0	
	H _{..} Hysteresis	V	-	-	5.0	5.0	1.0	1.0	
	dRL Response time	s	-	-	0.50	0.50	0.50	0.50	
	doF OFF-delay	s	-	-	20	20	20	20	
F ⁻⁻⁻	F ⁻⁻⁻ Alarm on/off		-	-	on	on	on	on	
	F ⁻⁻⁻ Overfrequency	Hz	-	-	52.00	52.00	52.00	52.00	
	H ⁻⁻⁻ Hysteresis	Hz	-	-	1.45	1.45	1.45	1.45	
	dRL Response time	s	-	-	0.50	0.50	0.50	0.50	
	doF OFF-delay	s	-	-	20	20	20	20	
F ⁻	F ⁻ Alarm on/off		on	on	on	on	on	on	
	F ⁻ Overfrequency	Hz	51.50	51.50	51.50	51.50	51.50	51.50	
	H ⁻ Hysteresis	Hz	1.45	1.45	1.45	1.45	1.45	1.45	
	dRL Response time	s	0.10	0.10	90.0	90.0	90.0	90.0	
	doF OFF-delay	s	30	120	20	20	20	20	

* Pr 20 ... Pr 23 for 240/416 V rated voltage change settings of: Voltage x (240V / 230 V)

Display of the program:

Inf0 → Pr or when switching on

Display of the firmware version:

Inf0 → Fnr

Menu	Parameter / Unit					Default setting 				Users Data
				ÖVE/ ÖNORM E 8001- 4-712	VSE/EE A-CH 2014	G83/2 + G59/3				
				3AC+N 230V	3AC+N 230V	3AC+N 230V	3AC 400V	3AC+N 57,7V	3AC 100V	
				Pr 10	Pr 15	Pr 20	Pr 21	Pr 22	Pr 23	
F ₋	F ₋ Alarm on/off		on	on	on	on	on	on		
	F ₋ Underfrequency	Hz	47.50	47.50	47.50	47.50	47.50	47.50		
	H ₋ Hysteresis	Hz	1.00	1.00	1.00	1.00	1.00	1.00		
	dRL Response time	s	0.10	20.0	20.0	20.0	20.0	20.0		
	doF OFF-delay	s	30	120	20	20	20	20		
F _{..}	F _{..} Alarm on/off		-	-	on	on	on	on		
	F _{..} Underfrequency	Hz	-	-	47.00	47.00	47.00	47.00		
	H _{..} Hysteresis	Hz	-	-	1.00	1.00	1.00	1.00		
	dRL Response time	s	-	-	0.50	0.50	0.50	0.50		
	doF OFF-delay	s	-	-	20	20	20	20		
UonF	UonF on/off		oFF	on	oFF	oFF	oFF	oFF		
	UonF voltage	V	46.0	16 1.0	46.0	46.0	20.0	20.0		
uSr	uSr Alarm on/off		StbY	StbY	StbY	StbY	StbY	StbY		
	uSr Vector shift	°	10.0	10.0	12.0	12.0	12.0	12.0		
	doF OFF-delay	s	2	3	20	20	20	20		
	dEon Suppression time	s	2	2	2	2	2	2		
	uSr Number of phases		3Ph	3Ph	1Ph	1Ph	1Ph	1Ph		
rocF	rocF Alarm on/off		oFF	oFF	on	on	on	on		
	dFdE delta f / delta t	Hz /s	0.800	0.800	0.200	0.200	0.200	0.200		
	PEr periods		20	20	20	20	20	20		
	dRL Response time	s	0.10	0.10	0.10	0.10	0.10	0.10		
	doF OFF-delay	s	30	60	20	20	20	20		
rEL	ErEL Response time Yx	s	oFF	oFF	oFF	oFF	oFF	oFF		
	doFA Mode		ind	ind	ind	ind	ind	ind		
	doFA Response time all	s	0	0	0	0	0	0		
ddi	ddi Display delay	s	0.5	0.5	0.5	0.5	0.5	0.5		
	dE t Display duration SCn	s	3.5	3.5	3.5	3.5	3.5	3.5		
Si	U Voltage	V	230	230	230	400	57.7	100		
	F Frequency	Hz	50.00	50.00	50.00	50.00	50.00	50.00		
	uSr Vector shift	°	0.0	0.0	0.0	0.0	0.0	0.0		
CodE	Pin Pincode		504	504	504	504	504	504		
Info	Fnr Firmware version		0-08	0-08	0-08	0-08	0-08	0-08		
	Snr Serial number		xxxx	xxxx	xxxx	xxxx	xxxx	xxxx		
	h Operating hours	h	Xxxx	xxxx	xxxx	xxxx	xxxx	xxxx		
	Err Error counter		xxx	xxx	xxx	xxx	xxx	xxx		
	Pr Program		10	15	20	21	22	23		

4 Application and brief description

The UFR1001E system-disconnection relay monitors voltage and frequency in three-phase current networks. It complies with the conditions for centralized NA-protection according to VDE-AR-N 4105 in in-plant power generators >30kVA, for feeding into the low voltage grid and the BDEW Directive for feeding into the medium voltage grid. When using with generators, the evaluation of feedback contacts for the period of a shut-down and during the synchronization can be suppressed.

The device has two channels which makes it more fail-safe. Input circuitry, evaluation and output relay are provided in duplicate. Two processors monitor each other mutually. Feedback contacts are used to monitor the functioning of both output relays and the section switch. During an alarm both channels shut down, the cause is displayed and it is reported through transistor outputs.

5 Summary of the functions

Applications include monitoring the network in generating plants such as solar and wind turbine generator systems along with mains protection in combined heat and power plants, also with synchronous generators (Vector surge).

The device complies with the requirements of the public utility power providers for conventional protection in low and medium voltage systems >30 kVA.


- Under and overvoltage monitoring 40...520 V
- Measurement 3 / 2 / 1 phases against N and/or phase-phase
- Under and over frequency monitoring 45...65 Hz
- Monitoring the voltage quality (10 minute average value)
- Vector-surge monitoring 2...20° connectible
- Fail-safe, with monitoring of the connected section switch (can be switched off), 2 automatic restarts on error
- Passive autonomous system detection in accordance with Chapter 6.5.3 and Appendix D2
- Monitoring of Rate of Change of Frequency (ROCOF, df/dt) connectible
- Supports the mains synchronization when using generators
- Self-test
- Response time adjustable 0.05 ... 130.0 s, individual setting for each limit
- Reset time adjustable 0 ... 999 s, individual setting for each limit
- Reset time 5s at limit violation < 3s
- Presetting per VDE-AR-N 4105, BDEW, ÖVE/ÖNORM E 8001-4-712, G83/2, G59/3, VSE/EEA-CH 2014
- Alarm counter for 100 alarms (with trip value, cause and rel. time stamp)
- Record of the cumulative time of alarms
- Standby input with counter and time memory
- Test button, simulation function, measurement of the shut-down times
- LEDs for alarm signals, measurement value allocation and relay status
- Sealing facility and code protection for settings, values can also be read in the sealed state
- Simple commissioning and programming through 6 basic programs with preset limits
- Message outputs for general alarm and for forwarding the cause of switching to the upstream controller (transistor, max. DC 27 V, 20 mA)

Medium voltage:

- Per 2x2 limits for voltage and frequency: $U_{<}, U_{<}, U_{>}, U_{>}, F_{<}, F_{<}, F_{>}, F_{>}$
- Hysteresis, response and reset value individually adjustable
- Control voltage AC/DC 24-270 V
- Distributor housing V6, 6 TE 105 mm wide, front-to-back size 55 mm

6 Connection diagrams


6.1 1x PV, 2x section switch (= Standard low voltage)

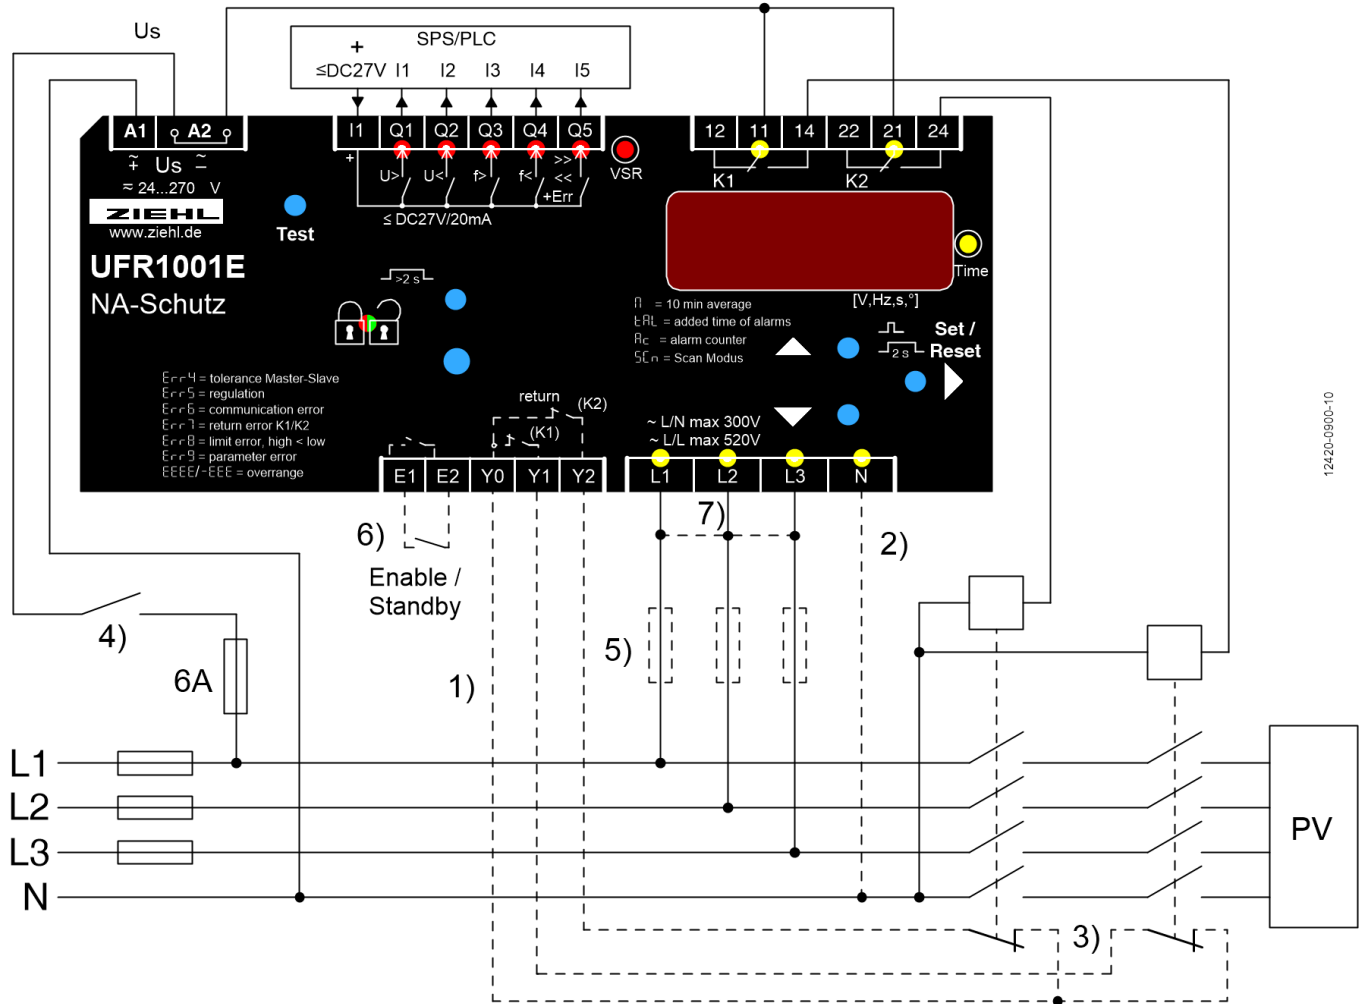

12420-0900-10


- 1) Feedback contacts Y1/Y2 not connected set **rEL .** → **tEL.** → **oFF.**
- 2) N connected set **Pr 1** , **Pr 3** or **Pr 5**
- 3) Nc- or no-contacts can be connected, automatic detection when switching on
- 4) Switch off the plant without recording an alarm, e.g. with output contact of a ripple control receiver
- 5) Fuses only when line protection necessary, e.g. 3x16A
- 6) Contact closed suppresses evaluation of feedback contacts and vector shift
(**u5r .** → **on.**) suppresses feedback contacts (**u5r .** → **y1y2.**) or switches device into standby (**u5r .** → **5tb4.** = default setting) e.g. through ripple control receiver or timer
- 7) 1 phase Application connect L1-L2-L3, 2 phase Application L1 / L2+L3 (only Pr 5, 7, 10, 20)

6.2 Multiple PV with section switch and with a series-switched NC's as feedback contacts (expanded inventory plant)

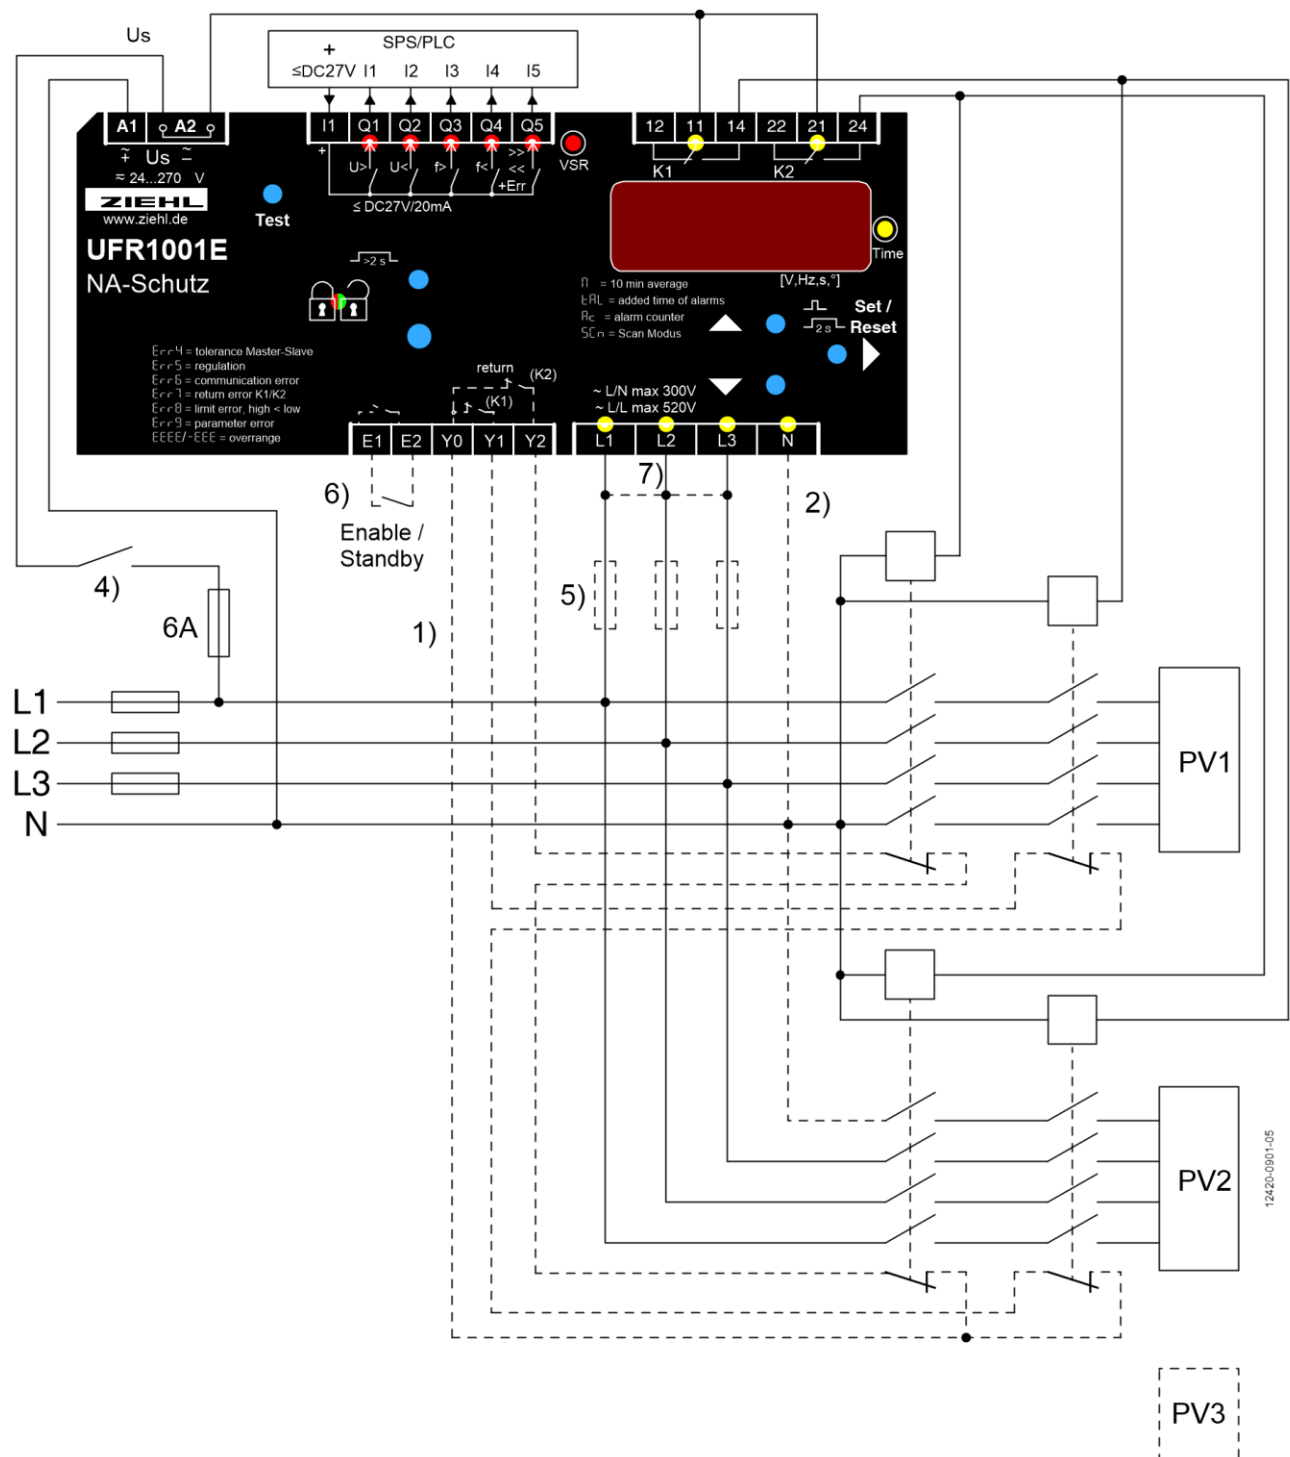


6.3 Multiple PV with section switch and with a parallel-switched closing contacts as feedback

(expanded inventory plant)

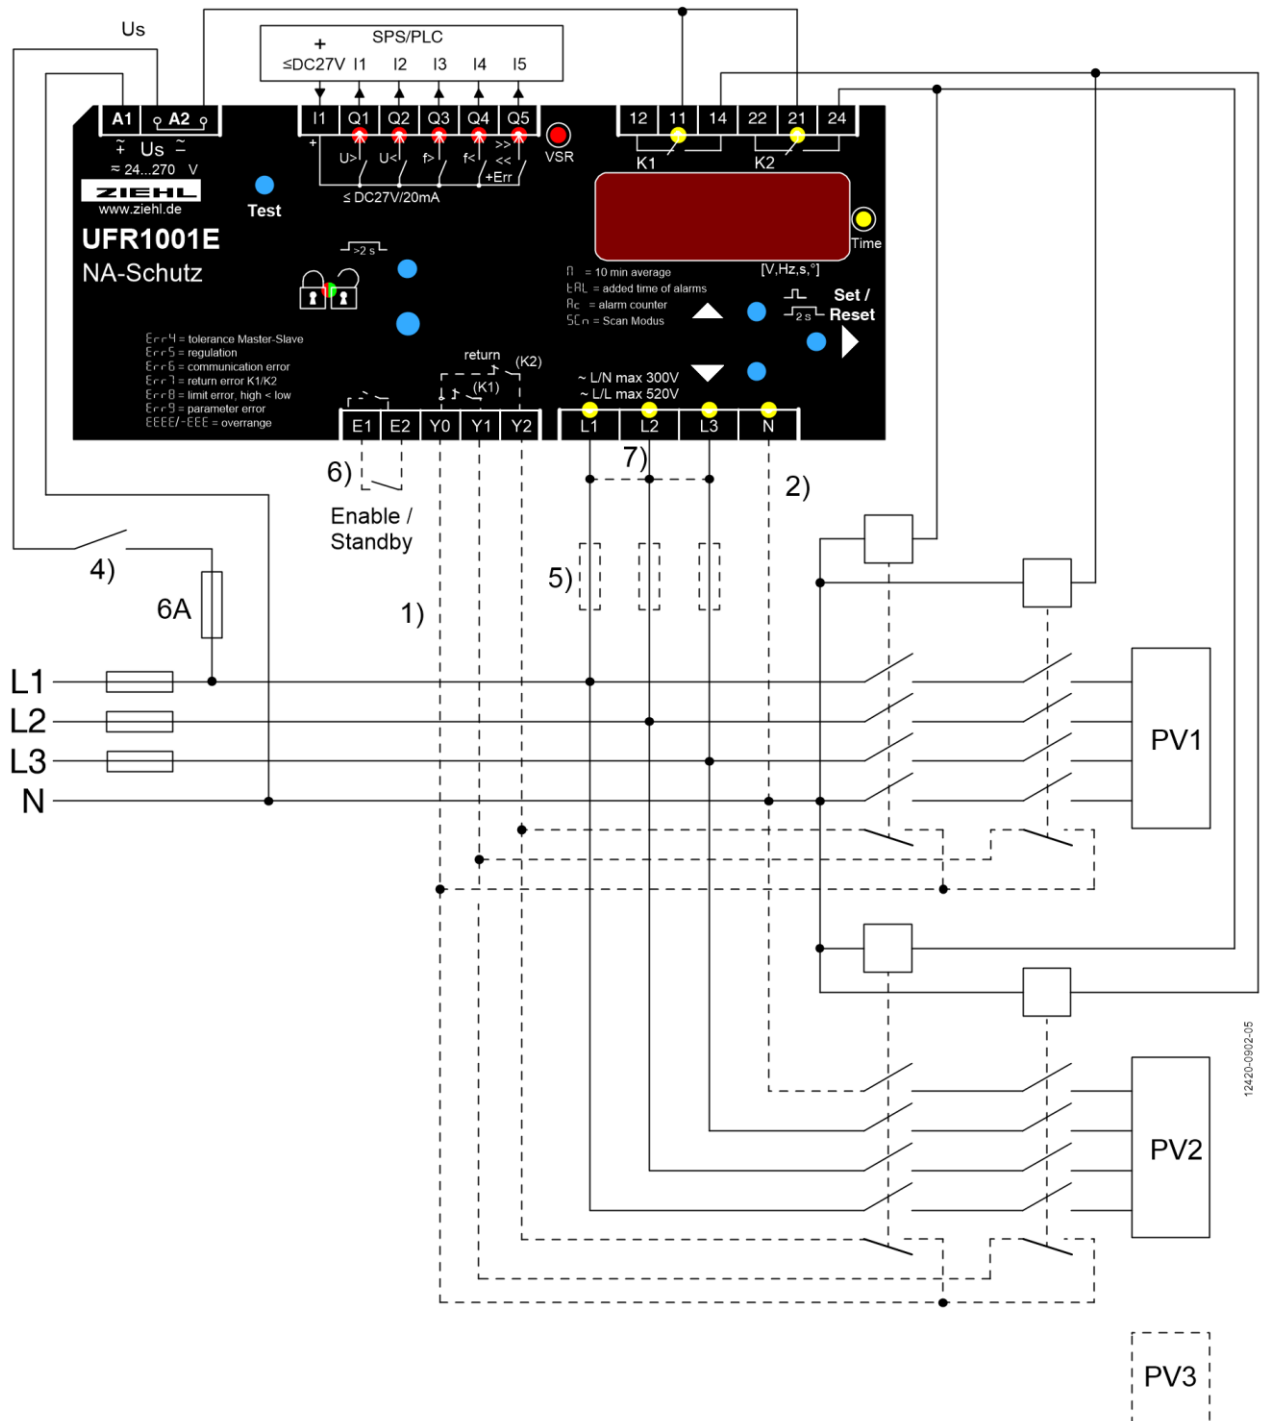

- 1) Feedback contacts Y1/Y2 not connected set rEL → tEL → **OFF**.
- 2) N connected set $Pr 1$, $r Pr 3$ or $Pr 5$
- 4) Switch off the plant without recording an alarm, e.g. with output contact of a ripple control receiver
- 5) Fuses only when line protection necessary, e.g. 3x16A
- 6) Contact closed suppresses evaluation of feedback contacts and vector shift
($u5r$ → **on**) suppresses feedback contacts ($u5r$ → **Y1Y2**) or switches device into standby ($u5r$ → **Stby** = default setting) e.g. through ripple control receiver or timer
- 7) 1 phase Application connect L1-L2-L3, 2 phase Application L1 / L2+L3 (only Pr 5, 7, 10, 20)


6.4 1x PV, 1x section switch with nc/normally closed contacts (medium voltage)

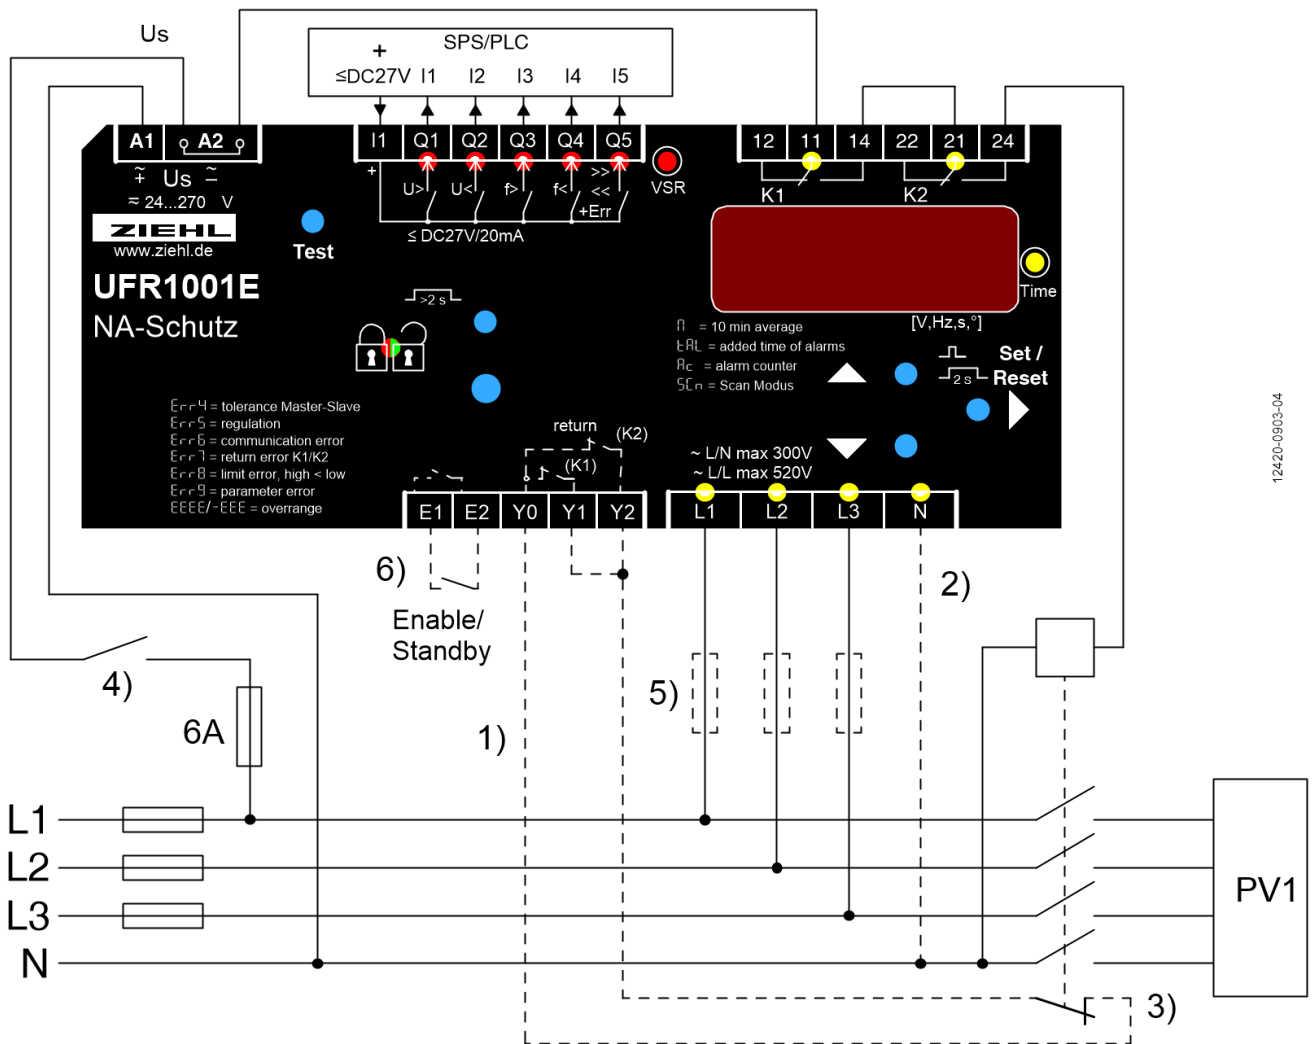

12420-0903-04

- 1) Feedback contacts Y1/Y2 not connected set **rEL** → **tEL** → **off**.
- 2) N connected set **Pr 1**, **Pr 3** or **Pr 5**
- 3) Nc- or no-contacts can be connected, automatic detection when switching on
- 4) Switch off the plant without recording an alarm, e.g. with output contact of a ripple control receiver
- 5) Fuses only when line protection necessary, e.g. 3x16A
- 6) Contact closed suppresses evaluation of feedback contacts and vector shift
 (**uSr** → **on**) suppresses feedback contacts (**uSr** → **Y1/Y2**) or switches device into standby (**uSr** → **Stby** = default setting) e.g. through ripple control receiver or timer

6.5 Generator operation, suppression of the feedback contacts (with external shut-down and mains synchronization)

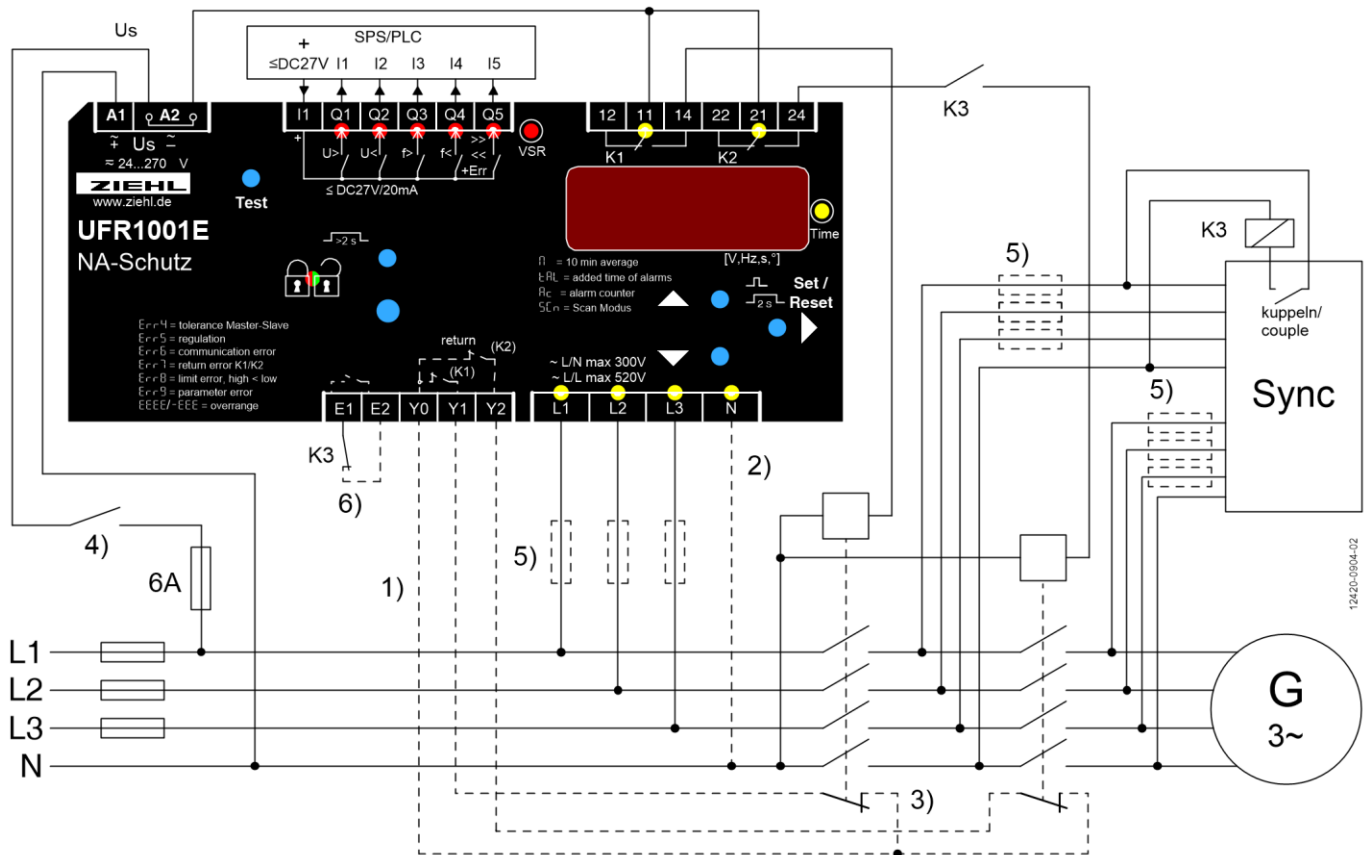

12420-0904-02

- 1) Feedback contacts Y1/Y2 not connected set **rEL** → **tEL** → **off**.
- 2) N connected set **Pr 1**, **Pr 3** or **Pr 5**
- 3) Nc- or no-contacts can be connected, automatic detection when switching on
- 4) Switch off the plant without recording an alarm, e.g. with output contact of a ripple control receiver
- 5) Fuses only when line protection necessary, e.g. 3x16A
- 6) Contact closed suppresses evaluation of feedback contacts and vector shift
(**u5r** → **on**) suppresses feedback contacts (**u5r** → **y1y2**) or switches device into standby (**u5r** → **StbY** = default setting) e.g. through ripple control receiver or timer

7 Important information



A marked switch and a protective device must be provided in the supply line in the vicinity of the device (easily accessible) as a disconnecting element (rated current $\leq 6\text{A}$).

Flawless and safe operation of such a device requires proper transport and storage, professional installation and later commissioning along with operation as intended.

Only persons who are familiar with the installation, commissioning and operation of the device and who are correspondingly qualified for their job are permitted to work on the device. They must comply with the contents of the operating manual, the instructions attached to the device and the pertinent safety regulations for the erection and operation of electrical equipment.

The devices are built and certified in accordance with EN 60255 and leave the factory in a safe and technically flawless condition. To maintain this condition they must comply with the safety regulations marked in the operating manual with the headline "Caution". Failure to follow the safety regulations can lead to death, bodily injury or property damage to the device itself and to other devices and equipment.

If the information contained in the operating instructions/operating manual are not sufficient, please contact us directly or contact your responsible agency or representative.

Instead of the industrial norms and stipulations stated in the operating manual and applicable in Europe you must comply with the valid and applicable regulations in the country of utilisation if the device is used outside of the area of application.



WARNING

Hazards electrical voltage!

Can lead to an electric shock and burns.

Disconnect and de-energize before working on the system and the device.

Comply with the maximum permissible temperature when installing in a switch cabinet. Ensure sufficient clearance to other devices or heat sources. If cooling is inhibited, e.g., through close proximity to devices with increased surface temperature or interference with the cooling-air current, the permissible ambient temperature is decreased.



Caution!

Before you apply mains voltage to the device, make sure that the permissible control voltage **Us** on the side rating plate matches the mains voltage connected to the device!

8 Assembly

The device can be mounted:

- Distribution panel or control panel on 35 mm rail according to EN 60715

9 Detailed description

9.1 Description of the connections

Connection	Description
A1 and A2	Rated control supply voltage U_s , see Technical Data
11, 12, 14; 21, 22, 24	Relay K1 and K2
E1 – E2 Enable – Input	Volt-free contact
	$u5r \rightarrow oFF$, no function
	$u5r \rightarrow on$, E1-E2 closed: Vector shift active but not evaluated, monitoring of feedback contacts off for use with generator (mains synchronization)
	$u5r \rightarrow Stby$, E1-E2 closed: K1 and K2 off (standby), vector shift off
	$u5r \rightarrow Y192$, E1-E2 closed: Feedback contacts no evaluated, vector shift off, when using with generator (mains synchronization)
Y0, Y1, Y2 Inputs, feedback contacts	Volt-free n/o or n/c contact, self-learning when switching on
	Set value > turn-on time section switch under $rEL \rightarrow t-rEL$ / can switch-off if not connected or if external devices/switches can activate the section switch (oFF)
I1	Supply voltage for digital outputs, max. 27 V DC
Q1...Q4	Digital output over-/under voltage/-frequency, Q3 + Q4 = ROCOF
Q5	Digital output error, in Programs with >> and << additionally the 2nd threshold value
L1, L2, L3, N	Phase L1, L2, L3 and neutral conductor

9.2 Functional characteristics

Functional characteristics	Explanation
VSR display value	The highest measured value is always displayed. The display value is reset to 0 by deleting the max. value and when resetting into the go (good) state.
Delay Enable On time	Runs down when starting the unit and after opening the enable input; during this time there is no evaluation of the vector shift
Reset time	When a reset time doF is running, it is always counted down in the display (shortest one first)
Reset	Use the Reset key or interrupt the control voltage for > 2 s (comply with reset delay)
Display mode Scn	After the last measurement it switches into the scan mode; this is indicated by the display Scn . All measurements will now be displayed cyclically for the time set in dt .
MIN / MAX values	All min and max values are saved zero-voltage maintained (non-volatile).
Tripping time (only with feedback contacts connected)	Connecting the feedback contacts enables measuring the shut-down time. After a tripping time with the test button it is displayed until a button is pressed again with a resolution of up to 1ms. Total shut-down time = Tripping time + Response time dAL . After a shut-down in the simulation mode the total shut-down time is displayed until the button is pressed again) The longer time of both channels is always displayed.
Alarm counter	The unit saves max 100 alarms (cause, measurement value, at operating time). The LEDs indicate the cause; the tripping value that led to the alarm each stands in the 7-segment display. Alternately the time difference, current operating time – tripping operating time is displayed. (how long ago the alarm triggered)
Cumulative alarm time tAL	The cumulative alarm time TAL indicates how long the relay was switched off due to an alarm. It is recorded with a resolution of 1 minute and only when the control voltage is applied. Query: In the display mode ▶ button to Rc is displayed. 1x ▲ button = Cumulative alarm time tAL .
Standby mode uSr → Stby	If E1-E2 are closed (e.g., by ripple control receiver, timer, dimmer), Relays K1 and K2 are switched off. The number and duration of the shut-downs is recorded. Query: In the display mode ▶ button to Rc is displayed. 2x ▲ button = Standby counter Stby . 1x ▲ button = Standby time Stby .
synchronization mode uSr → SYN	If E1-E2 are closed, the evaluation of the feedback contacts is suppressed. That means when using generators, a section switch can be used for mains synchronization.
Automatic restart attempts	If there is an error by the feedback contacts Err1 , 2 restart attempts are automatically performed in an interval of 10s. False triggering by undervoltage trips (e.g. during a thunderstorm) do not lead to permanent shut-down.
Frequency undervoltage protection UonF	If one of the measured voltages less than UonF , the frequency evaluation is interrupted until all voltages have exceeded UonF . (does not apply to device start / apply of the control voltage)

10 Commissioning

10.1 Program setup

The suitable program must be set on the UFR1001E in accordance with the application. If the UFR1001E is sealed/locked (red LED illuminated), the sealing has to be deactivated first.

Pr	Connection	Threshold Values	Voltage	Country / Standard
*1	3 AC with N	<u>Low voltage</u> 1x over voltage, 1x under voltage 1x over frequency, 1x under frequency 10 min average value, 1x vector shift 1x ROCOF	230V	 VDE-AR-N 4105
2	3 AC without N		400V	
7	2/1 AC with N		230V	
3	3 AC with N	<u>Medium voltage</u> 2x over voltage, 2x under voltage 2x over frequency, 2x under frequency 10min mean value, 1x vector shift 1x ROCOF	57,7V	 BDEW Juni 2008 nach 3.2.3.3-1
4	3 AC without N		100V	
5	3/2/1 AC with N		230V	
6	3 AC without N		400V	
10	3/2/1 AC with N	1x overvoltage, 1x under voltage 1x over frequency, 1x under frequency 10 min average value, 1x vector shift 1x ROCOF	230V	 ÖVE/ÖNORM E 8001-4-712
15	3 AC with N		230V	 VSE/EEA-CH 2014
20	3/2/1 AC with N	2x over voltage, 2x under voltage 2x over frequency, 2x under frequency 10min mean value, 1x vector shift 1x ROCOF	230V	 G83/2 + G59/3
21	3 AC without N		400V	
22	3 AC with N		57,7V	
23	3 AC without N		100V	

* default setting

Adjustment process:

If present, remove seal (only authorised person)


- Apply control supply voltage at A1-A2
- Slightly lift the key cover and turn 180°
- Actuate the small blue button by firmly pressing the button cover (LED starts flashing) until the green LED  is illuminated.

Sealing is deactivated

- Press ▲ button 1x → display **I n F a.**
 - Press ► button 5x → display **P r l.**
 - Set the program with the buttons ▲ ▼
 - Press ► button 1x → display **n a.**
 - Press ▼ button 1x → display **9 E 5.**
 - Press ► button
- ⇒ Device resets and starts with the newly selected program

Hint: When changing programs, all parameters of the selected program are reset to “default settings” (see table „Default settings“). **Only change the parameters after having selected the correct program.**

10.2 Control chart

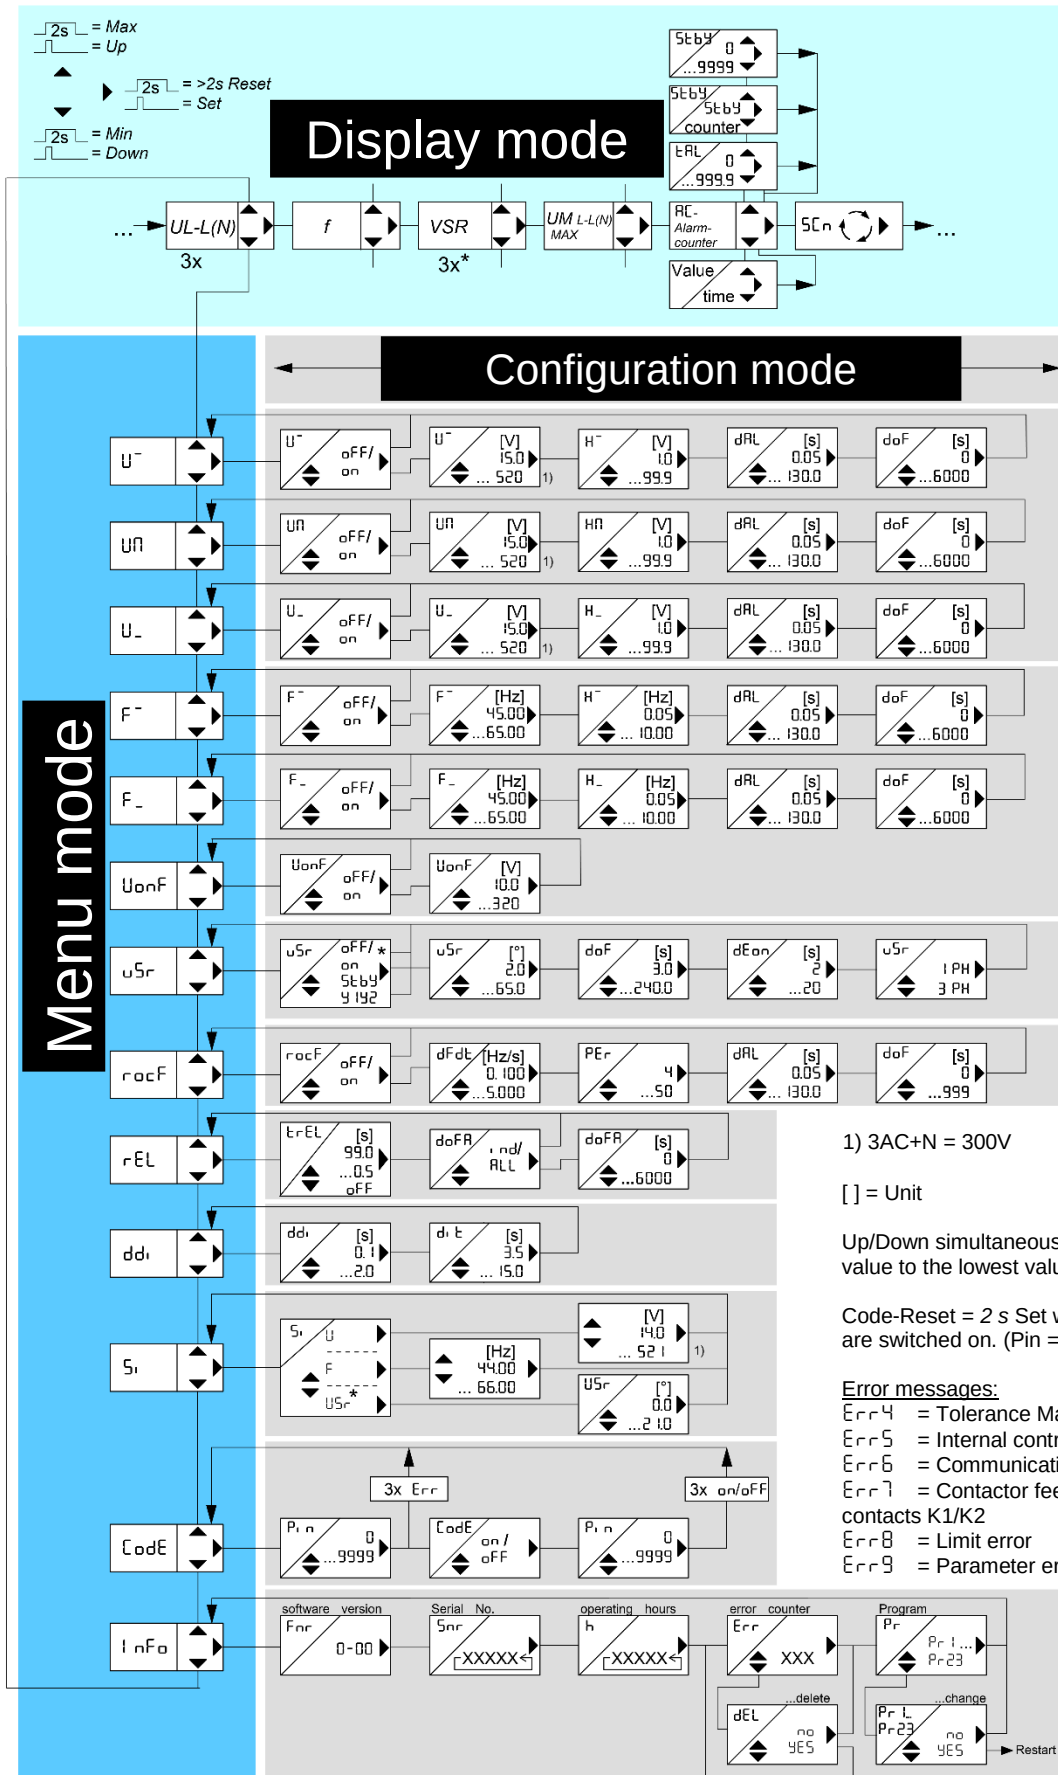

Pr	Connection	Country / Standard
1	3 AC + N	 VDE-AR-N 4105
2	3 AC	
7	2/1 AC + N	
10	3/2/1 AC + N	 ÖVE/ÖN ORM E 8001-4-712
15	3 AC + N	 VSE/EEA -CH 2014

1) 3AC+N = 300V


[] = Unit

Up/Down simultaneously sets the value to the lowest value.

Code-Reset = 2 s Set when mains are switched on. (Pin = 504)

Error messages:

Err 4 = Tolerance Master Slave
Err 5 = Internal control
Err 6 = Communication
Err 7 = Contactor feedback contacts K1/K2
Err 8 = Limit error
Err 9 = Parameter error

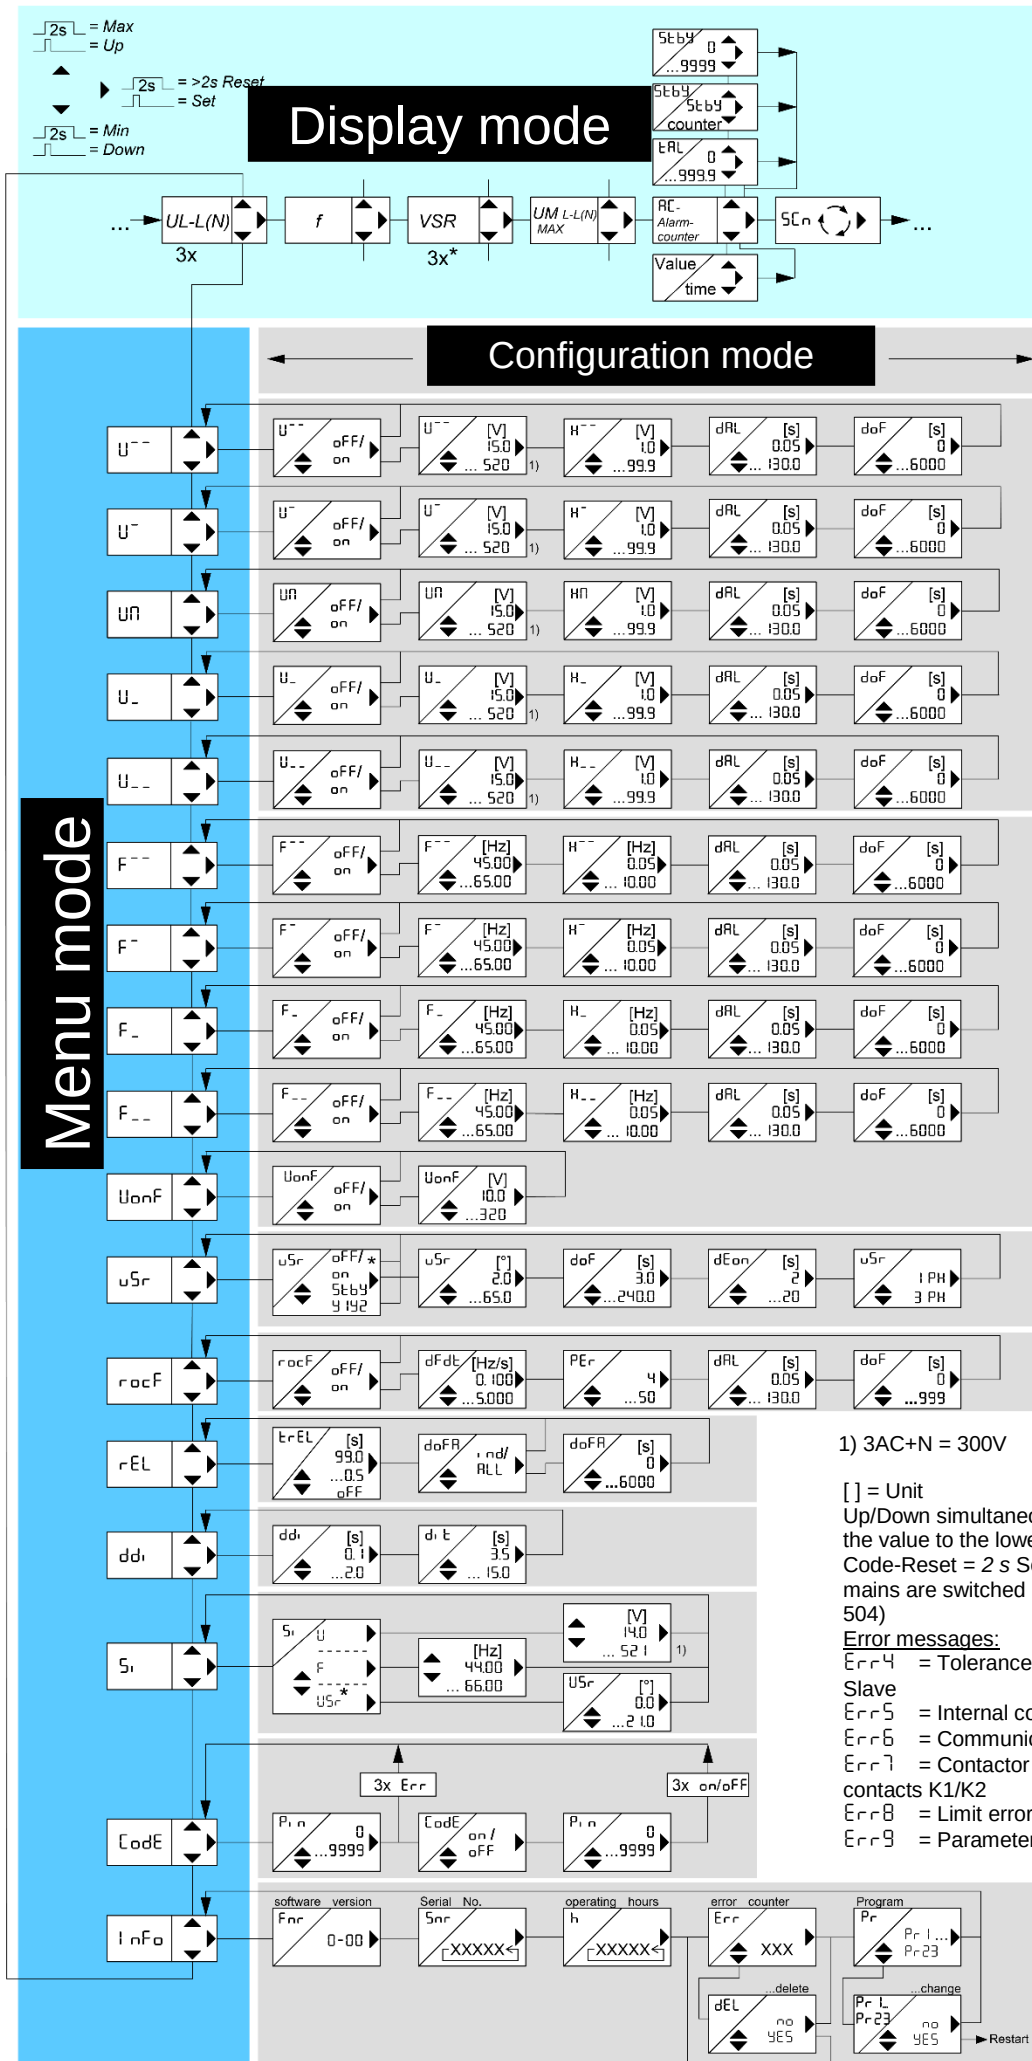

Pr	Connection	Country / Standard
3	3 AC + N	 BDEW Juni 2008 nach 3.2.3.3-1
4	3 AC	
5	3/2/1 AC + N	
6	3 AC	
20	3/2/1 AC + N	 G83/2 + G59/3
21	3 AC	
22	3 AC + N	
23	3 AC	

1) 3AC+N = 300V

[] = Unit

Up/Down simultaneously sets the value to the lowest value. Code-Reset = 2 s Set when mains are switched on. (Pin = 504)

Error messages:

Err4 = Tolerance Master

Slave

Err5 = Internal control

Err6 = Communication

Err7 = Contactor feedback contacts K1/K2

Err8 = Limit error

Err9 = Parameter error

10.3 Description of the parameters

Parameters	Display	Explanation	Adjustment range
Limit value	U ⁻⁻⁻ U ⁻ U ₋ U ₋₋ U _n	Voltage limit value	15.0 ... 300 15.0 ... 520
Limit value	U _{onF}	Limit value for voltage (L1/2/3 < U _{onF} = frequency protection off)	10.0 ... 320
Limit value	F ⁻⁻⁻ F ⁻ F ₋ F ₋₋	Frequency limit value	45.00 ... 65.00
Limit value	dFdt	ROCOF, df/dt limit value	0.10 ... 5.00
Hysteresis	H	253V (Limit) – 3V (Hysteresis) = 250V (Reset value) If the limit value is offset at F ⁻ , the hysteresis also has to be adapted so that the reset point lies at 50.05 Hz again.	1.0 ... 99.0 0.05 ... 10.00
Response time (delay Alarm)	dAL	An alarm is suppressed for the set time (seconds)	0.05 ... 130.0
Turn-on time (delay Off)	d _{oF} d _{oFR}	Reset is delayed for the set time, also during voltage recovery, this time (seconds) is always counted down in the display d _{oFR} : d _{oF} for U+f together	0 ... 999
Enable time (delay On)	dE _{on}	There is no evaluation of the vector shift during this time; starts with the application of the control voltage and when opening the Enable input	2 ... 20
VSR	u _{Sr}	1 Ph : a vector surge on one phase leads to an alarm 3 Ph : a vector surge on all phases simultaneously leads to an alarm	1 Ph ... 3 Ph
Periods	PE _r	Measuring time ROCOF, (4=sensitive, 50=insensitive) Response time= PE _r * Period duration + dAL	4 ... 50
delay Display	dd _i	Interval during which the display is updated in the display mode	0.1 ... 2.0

10.4 Display mode (last decimal point off)

In the display mode, the UFR1001E is in its normal state; here, depending on the program, the actual voltage, the highest actual 10 minute mean value, the frequency or the vector surge is displayed. In addition, the alarm signals (e.g. **RL** , **RL n**) and error codes (e.g. **Err9**) are displayed.

Function button Set / Reset	<u>Press briefly:</u> Switches the measurement, alarm counter
	<u>Press for > 2 s:</u> Resets after error (not possible if doF Reset delay is counting down)
	<u>Press for > 4 s:</u> Displays the program, e.g. Pr 1
	<u>Press for > 10 s:</u> Displays the software version, e.g. 0-05
Function key Up / Down	<u>Press briefly:</u> Change into the menu mode, Display alarm counter: Down = Query the memory Up = Query the cumulative alarm time
	<u>Press for ≥ 2 s:</u> Displays MAX and MIN measurements, additionally pressing the Set key for ≥ 2 s deletes the saved values

10.5 Menu mode (last decimal point on)

The menu mode is used to select the menu items. If no key is pressed for 30 s, one automatically returns to the display mode.

Function button Set / Reset	<u>Press briefly:</u> Change into the configuration mode
	<u>Press for ≥ 2 s:</u> Returns to the display mode (the most recently set values are then applied)
Function key Up / Down	<u>Press briefly:</u> Select menu item; changes into the display mode

10.6 Configuration mode (last decimal point flashes)

In the configuration mode you can set the value of a parameter. The display alternates between the parameter relation and the currently set value until one of the Up/Down buttons is pressed, which changes the value of the parameter. If no key is pressed for 2 s the display starts alternating again.

If no key is pressed for 30 s (simulation mode 15 min) one automatically returns to the display mode (the most recently set value is applied during this)

Function button Set / Reset	<u>Press briefly:</u> The settings are taken over; continue to next parameter. Changes into menu mode after the last parameter
	<u>Press for ≥ 2 s:</u> Returns to the display mode (the most recently set values are then applied)
Function key Up / Down	<u>Press briefly/long:</u> Value change of the parameter (slow/fast)

Hint: Simultaneously pressing the Up and Down keys resets the adjustable value to zero. If the Up or Down button is kept pressed while setting the value the change in the display is accelerated.

10.7 Test mode (timekeeping only activated and connected feedback contacts)

By pressing the Test button, the trip circuit can be tested. If additionally feedback contacts of the section switch are connected to the UFR1001E and activated (value > set turn-on time of section switch, e.g. 5.0s), the triggering time is measured automatically.

To do that, the measurement voltage has to be connected and no alarm is allowed to be present!

After pressing the Test button the UFR1001E triggers. The tripping time of the internal relay + section switch are measured through the feedback contacts. After successful tripping, the tripping time of the slower switch remains shown in the display for 60s or until any key is pressed.

10.8 Alarm counter

The alarm counter **Rc** is increased by 1 with every shut-down. Up to 100 shut-downs are counted. That allows quick detection of how often the UFR1001E has shut down since the last delete of the alarm counter (see cumulative alarm time).

Query the alarm counter:

• Change into the display mode
• Press the ▶ button several times until → display Rcxx

10.9 Cumulative alarm time (display in hours)

The cumulative alarm time **EARL** indicates how long the relay was switched off due to an alarm. It is recorded with a resolution of 1 minute and only when the control voltage is applied.

Query the cumulative alarm time:

• Change into the display mode
• Press the ▶ button several times until → display Rcxx
• Press the ▲ button 1x → display EARL / x.xx

Delete the alarm counter and cumulative alarm time (only together):

• Display alarm counter Rcxx
• Press the ▲ button 1x → display EARL / x.xx
• Keep the ▶ button pressed for 2s until → display EARL / 0.00

10.10 Alarm memory

Independent of the alarm counter, the UFR1001E stores the most recent 100 shut-down causes (cause, measurement value, at operating time). Simulated alarms are also registered. The LEDs indicate the cause; the tripping value that led to the alarm each stands in the 7-segment display. Alternative to that the time is shown in hours which have passed since the last tripping (with applied control voltage). These values remain saved even after the power has been turned off.

Query alarm memory:

• Change into the display mode
• Press the ▶ button several times → display Rcxx
• Press the ▼ button 1x → display x.xx / x.xx (tripping value or error no. / time that has passed in hours)
• Press the ▼ button 1x, go to next alarm

The alarm memory is only deleted during a program change.

10.11 Standby counter and standby time

The standby counter **5tby**, is increased by 1 with every standby shut-down. Up to 9999 shut-downs are counted. That lets the UFR1001E quickly detect how often, e.g., shut-down was performed through a ripple control receiver.

Query the standby counter:

• Change into the display mode
• Press the ▶ button several times until → display Rcxx
• Press the ▲ button 2x → display 5tby / xxxx

The standby time **5tby** indicates how long the relay was switched off by the standby mode. It is recorded with a resolution of 1 minute and only when the control voltage is applied and if no alarm is present.

Query the standby time:

• Change into the display mode
• Press the ▶ button several times until → display Rcxx
• Press the ▲ button 3x → display 5tby / x.xx (Time LED is illuminated)

Delete the standby counter and standby time (only together):

• Display alarm counter Rcxx
• Press the ▲ button 2x → display 5tby / xxxx
• Keep the ▶ button pressed for 2s until → display 5tby / 0

10.12 Code lock

You can protect the set parameters by enabling the code lock here.

The device acknowledges an incorrect entry with **Err** (flashes three times).

Adjustment process:

• Select the menu item with the ▲▼ buttons until → display Code.
• Press the ▶ button 1x → display Pin / 0
• Set the saved pin code with the ▲▼ buttons (default setting is 504)
• Press the ▶ button 1x → display Code / oFF
• Use the ▲▼ buttons to set the desired code lock: ○ oFF off, all parameters can be changed ○ on on, no parameters can be changed
• Press the ▶ button 1x → display Pin / 504
• Use the ▲▼ buttons to set the new, desired pin code (caution: write down the pin code)
• Press the ▶ button 1x
⇒ Code lock on, display on flashes three times
⇒ Code lock off, display oFF flashes three times
⇒ Return to menu mode, menu item code lock

If there are any problems with the code lock (pin forgotten), the lock can be switched off and the pin can be reset to 504 by keeping the Set key pressed while switching on the mains until **Code** / **oFF** appears in the display.

10.13 Sealing

All the settings and the simulation mode can be locked.

If the  LED is illuminated, the UFR1001E is locked.

If an attempt is made to change a setting in the locked state, for 3s the display shows **Loc**.

Adjustment procedure Sealing/Lock ON (OFF):

• If present, remove seal (only authorised person)
• Apply control supply voltage at A1-A2
• Slightly lift the key cover and turn 180°
• Actuate the small blue button by <u>pressing the button cover very firmly</u> (LED starts flashing) until the green LED  is illuminated.

10.14 Simulation

Here, the voltage, frequency or a vector surge can be simulated and the setting can be tested. All 3 phases plus the 10 minute mean value are always simulated. All functions of the device operate as if this value is actually being measured. Alarm and error messages are only indicated with the LEDs and not in the display. The set values are simulated until the menu item **S_r** is exited with the ▲ or ▼ button. If the UFR1001E is sealed/locked, simulation is not possible.

If the section switch feedback contacts are connected to the UFR1001E and enabled, (set value > section-switch turn-on time under **ErEL**), after a shut-down, the tripping time (dAL + time of slowest section switch) is displayed.

Adjustment process:

• Select the menu item with the ▲ ▼ buttons until → display S_r
• Press the ► button 1x → display S_r / U
• Use the ▲ ▼ buttons to set the measurement factor for simulation: ○ U Voltage + 10min mean value (frequency = last simulated value) ○ F Frequency (voltage = last simulated value) ○ uSr Vector shift
• Press the ► button 1x → display 230 (selected measurement factor is simulated)
• Use the ▲ ▼ buttons to set the desired value

After exiting the Simulation menu item with the ▲ ▼ buttons, the unit switches over to monitoring the limits. The unit automatically returns to the display mode if no button is pressed for 15 minutes.

Hint: A limit value should be tested that is higher than the set 10min mean value. If the 10min mean value has to be temporarily switched off, set (**Un** → **oFF**) since otherwise it will trip first. The same applies, for example, for **U⁻**, during a simulation of **U⁻** in Pr3 and Pr4. (Medium voltage)

10.15 Possible indications in display

Display mode

AL , AN	Alarm , Alarm 10min mean value
Err4 ... Err9	Error messages (see Error messages and measures)
Ac , tAL	Alarm counter, cumulative alarm time
Scn , n	Scan mode, 10min mean value

Menu mode / configuration mode

U ⁻⁻⁻ , U ⁻ , U ₋₋₋ , U ₋	Voltage limit value
UN	Limit value 10min mean value
H ⁻⁻⁻ , H ⁻ , H ₋₋₋ , H ₋ , HN	Hysteresis (if a limit value is changed, the reset value also shifts; that means it might be necessary to adapt it)
F ⁻⁻⁻ , F ⁻ , F ₋₋₋ , F ₋ , dFdE	Frequency limit value, ROCOF (df/dt) limit value
dAL	Response time
doF , doFA	Reset time; is always counted down in the display
i nd , ALL	Turn-on time adjust individual / all together (e.g. for Testing)
uSr	Vector surge
StbY	Standby mode, standby-time, standby-counter
y lY2	Evaluation of the feedback contacts is suppressed when E1-E2 are closed
dEon	Delay Enable On, suppression time when switching on and after opening the enable input
1 Ph , 3 Ph	Single phase, three-phase vector shift evaluation
rocF , PE _r	ROCOF (df/dt), Periods
rEL	Relay
t _r EL	Section switch turn-on time, oFF no feedback contacts
dd _i	Delay display, to calm down the display
d _i t	Display duration scan mode (each measurement is displayed for this duration)
S _i , F , U	Simulation, Frequency, voltage
CoDE , PL _o , uSr	Code lock / sealing, vector shift
Pi n , I nFo	Pin code (default 504), Device information, program change
Fnr , Snr	Firmware version, serial number
h	Operating hours
Err , dEL	Error counter, delete error counter
YES , no	Yes, no query for acknowledgement
Pr , on , oFF	Program, On, Off
UonF	Frequency protection off if voltage < UonF

11 Technical Data

Control voltage Us:

Rated connection

AC/DC 24-270 V, 0/40...70 Hz, < 5 VA
DC: 20.4...297 V, AC: 20.4...297 V

Output relay:

Switching voltage

2 x change-over contact

Conventional thermal current I_{th}

Max. AC 440 V

Inrush current (at 10 % ED)

6 A

Nominal operating current I_e (AC 15)

25 A max. 4 s / 50 A max. 1 s

Rated operational current

I_e = 6 A U_e = 250 V

Rated operational voltage

DC-13 I_e = 2 A U_e = 24 V

DC-13 I_e = 0,4 A U_e = 120 V

DC-13 I_e = 0,2 A U_e = 240 V

Recommended series fuse

gG/gL/B 6 A

Contact service life, mech.

30 x 10⁶ switching cycles

Contact service life, electr.

1 x 10⁶ operating cycles at AC 250 V / 6 A

2 x 10⁵ operating cycles at AC 250 V / 10 A cos φ 0.6

Voltage measurement:

Measurement voltage phase – phase

AC 15...530 V (< 5 V: 0 is displayed)

Adjustment range phase – phase

AC 15...520 V

Measurement voltage phase – N

AC 10...310 V (< 5 V: 0 is displayed)

Adjustment range phase – N

AC 15...300 V

Measurement principle

Real root mean square measurement both half waves

Hysteresis

Adjustable 1.0...99.9 V

Measurement error (with N)

± 0.6 % of the measurement value

Measurement error (without N)

± 0.8 % of the measurement value

Display accuracy

>100V: -1 digit (res. 1 V), <100V: -1 digit (res. 0.1V)

Measurement function

3-phase with/without N

Response time

Adjustable 0.05 (±15ms)...130.0 s

Reset time

Adjustable 0(>200ms) ... 999 s

Input resistance Phase-N

454 kΩ

Frequency measurement

Frequency range

40...70 Hz

Adjustment range

45.00...65.00 Hz

Hysteresis

0.05...10.00 Hz

Measurement accuracy

± 0.04Hz ± 1 digit

Response time

Adjustable 0.05 (±15ms)...130.0 s

Reset time

Adjustable 0 (>200ms) ... 999 s

Frequency undervoltage protection

off / 10,0...320 V

Vector surge

Measurement range

0...90.0°

Adjustment range

2.0...65.0°

Response time

< 50 ms

Reset time

Adjustable 3...240 s

Delay at U_s on

Adjustable 2...20 s

ROCOF (df/dt)

Frequency range

40...70 Hz

Adjustment range

0,100...5,000 Hz/s, 4...50 Periods

Hysteresis

fixed 0,05Hz

Measurement error

± 0,04Hz ± 1Digit

Response time

adjustable 0,05 (±15ms) ... 130,0 s

Reset time

adjustable 0 (>200ms) ... 999 s

Measurement time

Number of adjusted Periods * Periods duration + Response time

Digital outputs (galvanic isolated)

Switching voltage I1	DC 4.5...27 V
Current Q1...Q5	Max 20 mA / output

Contactor feedback inputs

Voltage / Current Y0 – Y1/2	DC 15...35 V / ca. 4mA
Voltage / Current E1 – E2	DC 15...35 V / ca. 6mA
Contactor response time (section switch)	Adjustable 0.5...99.0 s

Test conditions

	IEC/EN 60255	
Rated impulse voltage	4000 V	
Overvoltage category	III	
Pollution degree	2	
Rated insulation voltage Ui	300 V	
Operating time	100 %	
Operating temperature	-20 °C... +55 °C	
Storage temperature	-25 °C ... +70 °C	
Climatic conditions (IEC/EN 60721-3-3)	3K5 (except condensation and formation of ice)	
Tests IEC/EN 60255-1		
Storage tests		
Dry heat	IEC 60068-2-2	+ 70 °C 16 h
Cold	IEC 60068-2-1	- 25 °C 16 h
Operational tests		
Dry heat	IEC 60068-2-2	+ 55 °C 16 h
Cold	IEC 60068-2-1	- 20 °C 16 h
Cyclic temperature	IEC 60068-2-14	- 25 °C / + 55 °C 5 cycle 3 + 3 h
Damp heat steady state	IEC 60068-2-78	+ 40 °C 95 % RH 21 days
Cyclic temperature with humidity	IEC 60068-2-30	+ 25 °C 97% RH / + 55 °C 93 % RH 6 cycle 12 + 12 h
IEC 60255-21-1	vibration	class 1
IEC 60255-21-2	shock	class 1
IEC 60255-21-3	seismic test	class 1
EMC - immunity	EN 61000-6-2	
EMC - emission	EN 61000-6-3	

Housing:

Construction form	V6
Front-to-back size	55 mm
Dimensions (W x H x D)	90 x 105 x 69 mm
Wiring connection single strand	each 1 x 4mm ²
Finely stranded with wire end ferrule	each 1 x 2.5mm ²
Protection class, housing	IP 30
Protection class, terminals	IP 20
Weight:	Mounting snap-on fastening on 35 mm mounting rail acc EN 60 715 or with M4 screwed attachment (additional bar not included in the scope of delivery) approx. 250 g

We reserve the right to make technical changes

12 Maintenance and repair

The UFR1001E is maintenance-free. Periodically test for proper functioning.


13 Troubleshooting and measures

Error	Cause	Remedy
EEEE or -EEE appears in the display	Measurement is above/below range	Measured voltage, frequency or the vector surge is too large or too small; comply with measurement range
Err4 appears in the display	Tolerance error, internal measurement value deviation of both channels	Perform a reset → interrupt control voltage for >5s *
Err5 appears in the display	Error internal interface	
Err6 appears in the display	Communication error, internal interface	
Err7 also appears in the display after 2 automatic reconnection attempts, LED K1 and / or K2 illuminated	Feedback contacts connected	<u>Feedback contacts not connected</u> Set - rEL. → ErEL. → oFF <u>Feedback contacts not connected</u> - Check for correct connection - Set turn-on time of section switch under ErEL. - Perform a reset → interrupt control voltage for >5s
Err8 appears in the display	Hysteresis error	Upper threshold value must be higher than the lower threshold value, check the threshold values
Err9 appears in the display	Parameter error	Reset to factory settings, see "Program setup" *
A time expires in the display	Always when an OFF-delay time doF is running, it is counted down in the display (shortest one first)	Wait until the time has expired (depending on the setting, several times may elapse one after the other)
Device cannot be configured / only the limits can be configured	Code lock / Sealing activated	If there are any problems with the code lock (pin forgotten), the lock can be switched off and the pin can be reset to 504 by keeping the Set key pressed while switching on the mains until CoDE / oFF appears in the display.
Implausible voltage values	Pr selected with N, but N not connected	Select Pr without N or connect N
Loc appears in the display	Seal is active	See Sealing
CoDE appears in the display	Code lock is active	See „Code lock“
StbY appears in the display	Standby mode, E1-E2 closed	Check parameter u5r.
RL and LED Q3 (f>) is on, reading in good range	hysteresis for F~ incorrectly	Check hysteresis for reset point 50,05 Hz

* If the error cannot be patched by a reset, send back to factory for repair.

14 Construction form V6

Dimensions in mm

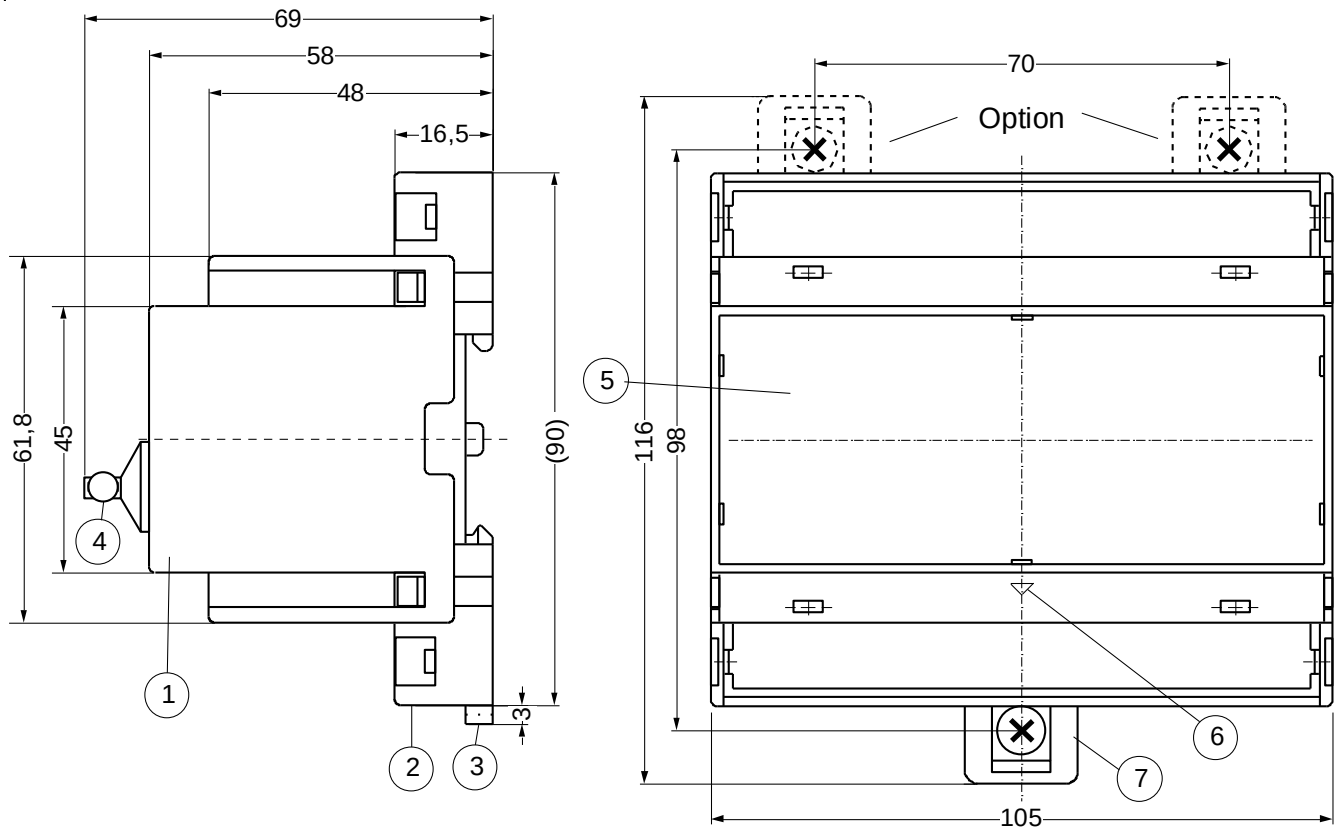

- 1 Oberteil / cover
- 2 Unterteil / base
- 3 Riegel / bar for snap mounting
- 4 Sealing max. Ø 1.8 mm
- 5 Frontplatteneinsatz / front panel
- 6 Kennzeichen für unten / position downward
- 7 Bar for wall attachment with screws. Riegelbohrung Ø 4,2 mm / Bolt hole for fixing to wall with screws, Ø 4.2 mm.



Konformitätsnachweis NA-Schutz

Hersteller / Antragsteller: ZIEHL industrie-elektronik GmbH + CO KG
Daimlerstr.13
74523 Schwäbisch Hall
Deutschland

Typ NA-Schutz:	Zentraler NA-Schutz UFR1001E
----------------	------------------------------

Firmwareversion: 0-0x
 Netzanschlussregel: VDE-AR-N 4105:2011-08 – Erzeugungsanlagen am Niederspannungsnetz
 Technische Mindestanforderungen für Anschluss und Parallelbetrieb von Erzeugungsanlagen am Niederspannungsnetz
 Mitgeltende Normen / Richtlinien: DIN VDE V 0124-100 (VDE V 0124-100): 2012-07 – Netzintegration von Erzeugungsanlagen – Niederspannung
 Prüfanforderungen an Erzeugungseinheiten vorgesehen zum Anschluss und Parallelbetrieb am Niederspannungsnetz

Der oben bezeichnete NA-Schutz wurde nach der Prüfrichtlinie VDE 0124-100 geprüft und zertifiziert. Die in der Netzanschlussregel geforderten elektrischen Eigenschaften werden erfüllt:

- Einstellwerte und die Abschaltzeiten
- Technische Anforderungen der Schalteinrichtung
- Passive Inselnetzerkennung
- Einfehlersicherheit

Das Zertifikat beinhaltet folgende Angaben:

- Technische Daten des NA-Schutz
- Einstellwerte der Schutzfunktionen
- Auslösewerte der Schutzfunktionen

BV Projektnummer: 11TH0501
 Zertifikatsnummer: U14-0647
 Ausstellungsdatum: 2014-12-03

Zertifizierungsstelle

Dieter Zitzmann

(Eine auszugsweise Darstellung des Zertifikats bedarf der schriftlichen Genehmigung der BV CPS GmbH)



Zertifizierungsstelle der Bureau Veritas Consumer Products Services Germany GmbH
 Akkreditiert nach EN 45011 - ISO / IEC Guide 65

F.4 Anforderungen an den Prüfbericht zum NA-Schutz

Auszug aus dem Prüfbericht für den NA-Schutz
„Bestimmung der elektrischen Eigenschaften“

Nr. 11TH0501

NA-Schutz als integrierter NA-Schutz

Hersteller / Antragsteller:	ZIEHL industrie-elektronik GmbH + CO KG Daimlerstr.13 74523 Schwäbisch Hall Deutschland
Typ NA-Schutz:	Zentraler NA-Schutz UFR1001E
Firmwareversion:	0-0x*

* Die Prüfungen wurden mit Firmwareversion 0-00 durchgeführt. Die Änderungen der Firmwareversion auf 0-0x hat keinen Einfluss auf die in der Netzanschlussregel geforderten elektrischen Eigenschaften.

x = beliebige Zahl oder Zeichen

Messzeitraum: 2012-01-26 – 2012-02-02

Schutzfunktion	Einstellwert	Auslösewert	Auslösezeit NA-Schutz ^a
Spannungsrückgangsschutz U<	184 V	183,9 V	98 ms
Spannungssteigerungsschutz U>	253 V	---	536 s ^b
Spannungssteigerungsschutz U>>	264 V	263,8 V	98 ms
Frequenzrückgangsschutz f<	47,50 Hz	47,51 Hz	80 ms
Frequenzsteigerungsschutz f>	51,50 Hz	51,51 Hz	93 ms

^a Die Auslösezeit umfasst den Zeitraum von der Grenzwertverletzung U/f bis zum Auslösesignal an dem Kuppelschalter.

^b längste Abschaltung des Spannungssteigerungsschutz als gleitender 10-min-Mittelwert, geprüft gemäß Punkt 5.4.5.3.3 Messung a) der VDE 0124-100

Bei der Planung der Erzeugungsanlage ist die Eigenzeit des Kuppelschalters zum höchsten oben ermittelten Zeitwert zu addieren.

Die Abschaltzeit (Summe der Auslösezeit NA-Schutz zzgl. Eigenzeit des Kuppelschalters) darf 200 ms nicht überschreiten. Der oben genannte NA-Schutz erfüllt die Anforderungen zur Synchronisation.



Konformitätsnachweis

Antragsteller: ZIEHL industrie-elektronik GmbH + CO KG
Daimlerstr.13
74523 Schwäbisch Hall
Deutschland

Typ:	Zentraler NA-Schutz	UFR1001E
Technische Daten:	Anschlussspannungsbereich:	AC/DC 24 - 270V, 0 / 40 - 70 Hz (<5 VA)
	Arbeitsspannungsbereich:	15 – 520 (P-P) 15 – 300 (P-N)
	Nennfrequenz:	50 Hz

Firmwareversion: 0-xx (0-xx mit xx = 08 und höher)
Netzanschlussregel: BDEW-Richtlinie „Erzeugungsanlagen am Mittelspannungsnetz“
 Richtlinie für Anschluss und Parallelbetrieb von Erzeugungsanlagen am Mittelspannungsnetz, 2008 und Ergänzung bis einschließlich 1/2013
Mitgeltende Normen / Richtlinien: DIN EN 61400-21:2008
 Technische Richtlinien: FGW TR 3 Rev. 24, FGW TR 8 Rev. 7

Der im Zertifikat aufgeführte zentrale NA-Schutz wurde nach den, in der Netzanschlussregel referenzierten, technischen Richtlinien geprüft und zertifiziert. Die in der Netzanschlussregel geforderten elektrischen Eigenschaften an einen NA-Schutz werden erfüllt:

- Schutzeinrichtung auf Einheitenebene (Kap. 4.4. und 4.5 in TR3) (Hinweis im Anhang S.11)*

Der Hersteller hat die Zertifizierung seines Qualitätsmanagementsystems nach ISO 9001 nachgewiesen.

* Eine Prüfklemmleiste ist bei Bedarf separat nachzurüsten.

Das Zertifikat beinhaltet folgende Angaben:

- Technische Daten und schematischen Aufbau des Schutzgeräts
- Auslösewerte der Schutzfunktionen
- Einstellwerte der Schutzfunktionen

BV Projektnummer: 11TH0501
Zertifikatsnummer: 18-0063_0
Ausstellungsdatum: 2018-02-26

Zertifizierungsstelle

Holger Schaffer

(Eine auszugsweise Darstellung des Zertifikats bedarf der schriftlichen Genehmigung der Bureau Veritas Consumer Products Services Germany GmbH.)



Zertifizierungsstelle der Bureau Veritas Consumer Products Services Germany GmbH
 Akkreditiert nach EN 45011 - ISO / IEC Guide 65

(S. 1 von 14)



Unbedenklichkeitsbescheinigung

Antragsteller: ZIEHL industrie-elektronik GmbH + CO KG
Daimlerstr.13
74523 Schwäbisch Hall
Deutschland

Erzeugnis: Selbsttätige Schaltstelle zwischen einer netzparallelen
Eigenerzeugungsanlage und dem öffentlichen
Niederspannungsnetz

Modell: UFR1001E

Bestimmungsgemäße Verwendung:

Selbsttätige Schaltstelle mit dreiphasiger Netzüberwachung gemäß ÖVE/ÖNORM E 8001-4-712, ÖVE/ÖNORM E 8001-4-712/A1 sowie den Abweichungen nach TOR D4 für Photovoltaikanlagen mit einer dreiphasigen Paralleleinspeisung über Wechselrichter in das Netz der öffentlichen Versorgung.

Prüfgrundlagen:

ÖVE/ÖNORM E 8001-4-712:2009-12

Errichtung von elektrischen Anlagen mit Nennspannungen bis AC 1000V und DC 1500V – Teil 4-712:
Photovoltaische Energieerzeugungsanlagen- Errichtungs- und Sicherheitsanforderungen

ÖVE/ÖNORM E 8001-4-712:2014-05, Änderung 1

Errichtung von elektrischen Anlagen mit Nennspannungen bis AC 1000V und DC 1500V – Teil 4-712:
Photovoltaische Energieerzeugungsanlagen- Errichtungs- und Sicherheitsanforderungen, Änderung 1

TOR D4 V2.3:2016-07

Technische und organisatorische Regeln für Betreiber und Benutzer von Netzen
Teil D: Besondere technische Regeln
Hauptabschnitt D4: Parallelbetrieb von Erzeugungsanlagen mit Verteilernetzen

Ein repräsentatives Testmuster des oben genannten Erzeugnisses entspricht den zum Zeitpunkt der Ausstellung dieser Bescheinigung geltenden sicherheitstechnischen Anforderungen der aufgeführten Prüfgrundlagen für die bestimmungsgemäße Verwendung.

Bericht Nummer: 11TH0501-TORD4_0
Zertifikat Nummer: U16-0662
Datum: 2016-12-05



Zertifizierungsstelle der Bureau Veritas Consumer Products Services Germany GmbH
Akkreditiert nach DIN EN ISO/IEC 17065



Type test certificate

Applicant: ZIEHL industrie-elektronik GmbH+Co KG
Daimlerstraße 13
74523 Schwäbisch Hall
Germany

Product: Automatic disconnection device between a generator and the public low-voltage grid

Model: UFR1001E

Use in accordance with regulations:

Automatic disconnection device with three-phase mains surveillance in accordance with Engineering Recommendation G59/3 for generation systems with a parallel coupling in the public mains supply. The automatic disconnection device is an integral part of the aforementioned inverter. This serves as a replacement for the disconnection device with isolating function that can access the distribution network provider at any time.

Applied rules and standards:

Engineering Recommendation G59/3:2013

Recommendation for the Connection of Generating Plant to the Distribution Systems of licensed Distribution Network Operators.

DIN V VDE V 0126-1-1:2006-02 (Functional safety)

Automatic disconnection device between a generator and the public low-voltage grid

At the time of issue of this certificate the safety concept of an aforementioned representative product corresponds to the valid safety specifications for the specified use in accordance with regulations.

The aforementioned product does not provide direct current injection monitoring and residual current monitoring. Therefore these protection functions need to be installed externally if required.

Report number: 11TH0501-G59/3_1
Certificate number: U16-0665
Date of issue: 2016-12-08



Certification body of Bureau Veritas Consumer Products Services Germany GmbH
Accredited according to DIN EN ISO/IEC 17065



Type test certificate

Applicant: ZIEHL industrie-elektronik GmbH+Co KG
Daimlerstraße 13
74523 Schwäbisch Hall
Germany

Product: Automatic disconnection device between a generator and the public low-voltage grid

Model: UFR1001E

Use in accordance with regulations:

Automatic disconnection device with three-phase mains surveillance in accordance with Engineering Recommendation G83/2 for generation systems with a parallel coupling in the public mains supply. The automatic disconnection device is an integral part of the aforementioned inverter. This serves as a replacement for the disconnection device with isolating function that can access the distribution network provider at any time.

Applied rules and standards:

Engineering Recommendation G83/2:2012

Recommendations for the Connection of Type Tested Small-scale Embedded Generators (Up to 16A per Phase) in Parallel with Low-Voltage Distribution Systems

DIN V VDE V 0126-1-1:2006-02 (Functional safety)

Automatic disconnection device between a generator and the public low-voltage grid

At the time of issue of this certificate the safety concept of an aforementioned representative product corresponds to the valid safety specifications for the specified use in accordance with regulations.

The aforementioned product does not provide direct current injection monitoring and residual current monitoring. Therefore these protection functions need to be installed externally if required.

Report number: 11TH0501-G83/2_1
Certificate number: U16-0664
Date of issue: 2016-12-08



Certification body of Bureau Veritas Consumer Products Services Germany GmbH
Accredited according to DIN EN ISO/IEC 17065



**BUREAU
VERITAS**

**Bureau Veritas
Consumer Products Services
Germany GmbH**
Businesspark A96
86842 Türkheim
Germany
+ 49 (0) 40 740 41 – 0
cps-tuerkheim@de.bureauveritas.com

Certification body of BV CPS GmbH
Accredited according to EN 45011 -
ISO / IEC Guide 65

Certificate of compliance

Applicant: **ZIEHL industrie-elektronik GmbH+Co KG**
Daimlerstraße 13
74523 Schwäbisch Hall
Germany

Product: **Automatic disconnection device between a generator and
the public low-voltage grid**

Model: **UFR1001E**

Use in accordance with regulations:

Automatic disconnection device with three-phase mains surveillance in accordance with DIN V VDE V 0126-1-1/A1:2012-02 for systems with a parallel coupling via an inverter in the public mains supply. This serves as a replacement for the disconnection device with insulating function which the distribution network provider can access at any time.

Applied rules and standards:

DIN V VDE V 0126-1-1 (VDE V 0126-1-1):2006-02

Automatic disconnection device between a generator and the public low-voltage grid

DIN V VDE V 0126-1-1/A1 (VDE V 0126-1-1/A1):2012-02

Automatic disconnection device between a generator and the public low-voltage grid; Amendment 1.

The safety concept of an aforementioned representative product corresponds at the time of issue of this certificate to the valid safety specifications for the specified use in accordance with regulations.

Report number: **11TH0501-VDE0126**

Certificate number: **U14-0064**

Date of issue: **2014-02-04**

Certification body

Dieter Zitzmann



Deutsche
Akkreditierungsstelle
D-ZE-12024-01-01



QUALITY



HEALTH



SAFETY



ENVIRONMENT



SOCIAL
ACCOUNTABILITY



**BUREAU
VERITAS**

Bureau Veritas
Consumer Products Services
Germany GmbH
Businesspark A96
86842 Türkheim
Deutschland
+ 49 (0) 4074041-0
cps-tuerkheim@de.bureauveritas.com

Organisme de certification BV CPS GmbH
accrédité par EN 45011 -
ISO / IEC Guide 65

Certificat de conformité

Demandeur: ZIEHL industrie-elektronik GmbH+Co KG
Daimlerstraße 13
74523 Schwäbisch Hall
Allemagne

Produit: Dispositif de déconnexion automatique entre un
générateur et le réseau public à basse tension

Modèle: UFR1001E

À utiliser conformément aux réglementations:

Dispositif de coupure automatique avec une surveillance du réseau triphasé, conformément à DIN V VDE V 0126-1-1/A1:2012-02 VFR2013/VFR2014 (Protections des installations de production raccordées Identification au réseau public de distribution, ERDF-NOI-RES_13E, Version 5, 30/06/2013) pour des systèmes avec un couplage parallèle via un convertisseur à alimentation électrique publique. Il remplace l'appareil de déconnexion avec une fonction isolante, auquel le fournisseur du réseau de distribution peut accéder à tout moment.

Réglementations et normes appliquées:

DIN V VDE V 0126-1-1 (VDE V 0126-1-1):2006-02

Dispositif de déconnexion automatique entre un générateur et le réseau public à basse tension

DIN V VDE V 0126-1-1/A1 (VDE V 0126-1-1/A1):2012-02

Dispositif de déconnexion automatique entre un générateur et le réseau public à basse tension;
Amendement 1

ERDF-NOI-RES_13E:2013-06

Protections des installations de production raccordées Identification au réseau public de distribution,
ERDF-NOI-RES_13E, Version 5, 30/06/2013

Un échantillon représentatif des produits mentionnés ci-dessus correspond aux exigences de sécurité technique en vigueur à la date d'émission de ce certificat pour l'usage spécifié et conformément à la réglementation.

Numéro de rapport: 11TH0501-VDE0126

Numéro de certificat: U14-0063

Délivré le: 2014-02-04

Organisme de certification


Dieter Zitzmann




Deutsche
Akkreditierungsstelle
D-ZE-12024-01-01



QUALITY



HEALTH



SAFETY



ENVIRONMENT



SOCIAL
ACCOUNTABILITY

22 Adjustment values table VDE-AR-N 4105, Low Voltage Pr 1+2+7

Protective function	AR 4105	ZIEHL	in * Un	in % Un	Adjustment value	Tripping time dAL	OFF-delay time doF
Voltage decrease protection	U<	U ₋	0.8 * Un	80 % Un	184 V	100 ms	60 s
Voltage increase protection (10-minutes mean value)	U>	U _∞	1.1 * Un	110% Un	253V	100 ms	60 s
Voltage increase protection	U>>	U ⁻	1.15 * Un	115% Un	264V	100 ms	60 s
Frequency decrease protection	f<	F ₋			47.5Hz	100 ms	60 s
Frequency increase protection	f>	F ⁻			51.5Hz	100 ms	60 s

23 Adjustment values table BDEW June 2008, acc 3.2.3.3-1, Medium Voltage Pr 3-6

Function	BDEW	ZIEHL	Adjustment range of the protective relay	Default settings	
Voltage increase protection	U>>	U ⁻	1.00 – 1.30 U _n	1.15 U _n	100 ms
Voltage increase protection	U>	U ⁻	1.00 – 1.30 U _n	1.08 U _n	60 s
Voltage decrease protection	U<	U ₋	0.15 – 1.00 U _n	0.80 U _n	2.7 s
Voltage decrease protection *	U<<	U ₋	0.15 – 1.00 U _n	0.45 U _n	300 ms
Frequency increase protection	f>	F ⁻	50.0 – 65.0 Hz	51.5Hz	100 ms
Frequency decrease protection	f<	F ₋	45.0 – 50.0 Hz	47.5Hz	100 ms
* Not enabled in as delivered condition					