

Operating Instruction SPI1021

updated: 130716 Ba
from Firmware: 0-0

- Grid- and Plant Protection According to CEI 0-21
- with selftest for < 6kW
- with integrated vector shift relay
- Pr3 = default



1. Application and brief description	3
2. Summary of the functions	3
3. Display and controls	4
4. Detailed description	5
4.1 Description of the connections	5
4.2 functional characteristics	6
5. Important information	7
6. Assembly	7
7. Connection diagrams	8
7.1 1x PV, 2x section switch	8
8. Commissioning	9
8.1 Program Setup	9
8.2 Control chart	10
8.3 description of the parameters	11
8.4 Display mode (last decimal point off)	11
8.5 Menu mode (last decimal point on)	12
8.6 Configuration mode (last Decimal point flashes)	12
8.7 Selftest execute	12
8.8 Display Selftest result	12
8.9 Alarm counter	12
8.10 Cumulative alarm time (display in hours)	13
8.11 Alarm Memory	13
8.12 Standby counter and standby time	13
8.13 Code lock	13
8.14 Sealing	14
8.15 Simulation	15
8.16 Possible indications in display	16
9. Default settings and firmware version	17
10. Technical Data	19
11. Maintenance and repair	20
12. Troubleshooting an measures	21
13. Construction form V6	22
14. Verification in conformity	23

1. Application and brief description

The SPI1021 monitors voltage and frequency in plants for own generation of electricity. It fulfills the requirements of CEI 0-21.

3 selectable programs allow measuring, 3 phases to neutral (4-wire mode), 3 phases phase-phase (3-wire mode) and single phase to neutral (2-wire).

The SPI1021 can monitor all decentralized power plants, photovoltaic, wind or thermal, that feed in the low or medium voltage grid. In applications with possible asymmetry >6kVA, power balance has to be monitored extra.

All limits are preset according to CEI 0-21. They can be changed if required and be protected with a code and/or a seal.

A counter for alarms and standbys stores the last 100 events with reason and elapsed time. In addition the time the SPI1021 has interrupted the plant is recorded. All values can be read displayed at the device and give the operator valuable information about the availability of the plant.


The standby input allows a remote shutoff e.g. with a RCR. It can also be used to switch to an energy saving mode by a timer or a twilight switch. Number of standbys and added time are stored and can be read in the display.

2. Summary of the functions

When the device has been installed, a self-test starts automatically. The self-test can be repeated when required. All values of the test are stored and can be read out at the display.

- Monitoring of under- and overvoltage 0/15-520 V
- Measuring of 3 phase with or without neutral or single phase
- Monitoring of over- and underfrequency 45-65 Hz
- Monitoring of quality of voltage (10-minutes-average)
- Monitoring of vector-shift (connectible)
- Input IN2 for selection of frequency window
- Input In3 for selection of mode transitory or definitive
- Input Y0/Y1 for monitoring function of connected switch (automatic detection of nc/no)
- Relay K2 picks up (on time <500ms) only at failure at switch connected to K1
- 2 restarts at switch-on error of connected switch
- Selftest with storing of values
- Switching delays adjustable 0,05...130 s
- Switching-back-delays adjustable 0...999 s
- Different switching time according to type of alarm and selected mode
- Switch-on delay 300 s
- All parameters preset according to CEI 0-21
- Alarm counter for 100 alarms with value, reason and elapsed time
- Recording of added time of alarms
- Input for standby (off time <50ms) with counter and recording of time
- Simulation for testing
- Sealing, all parameters can be read out while sealed
- Easy installation and programming with 3 preset programs
- Supply-voltage AC/DC 24-270 V
- Housing for DIN-rail-mount, 105 mm wide, mounting height 70 mm

3. Display and controls

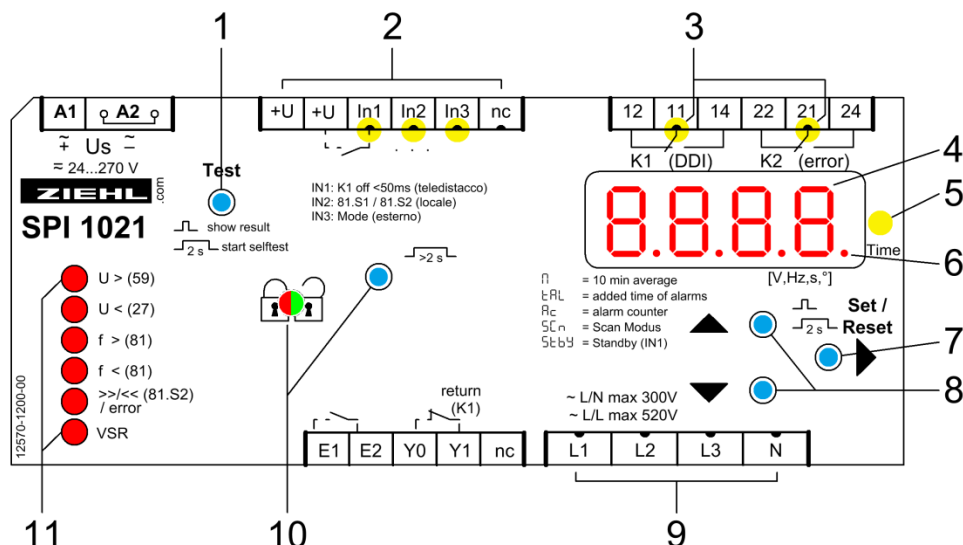

1 Test Button

press briefly	the selftest result is displayed, display next result
Press for > 2 s	Start selftest, K1 de-energize, K2 energize

2 LEDs Inputs status (yellow)

OFF	Input not activ (open)
ON	Input activ (closed)

3 LEDs relay status (yellow)

OFF	Relay is released
ON	Relay is operating

4 Digital display 4-digits (red)

Depending on program, display of current voltage, frequency, vector shift, average value
Displays the alarm signals, e.g. RL , RL π
Displays the errors with error code e.g. Err9

5 LED Time (yellow)

ON	A time is displayed
----	---------------------

6 Last decimal point (red)

OFF	Display mode
Illuminated	Menu mode
Flashes	Configuration mode

7 Set / Reset key (in display mode, normal state)

Press briefly	Display of next measured value / alarm counter
Press for > 2 s	Reset, quit error messages
Press for > 4 s	Displays the program, e.g. Pr 1
Press for > 10 s	Displays the software version, e.g. 0-0


8 Up / Down key (in display mode, normal state)

Press briefly	Change to the menu mode, display of alarm memory (Down) / cumulative time of alarms, standby counter, standby time (Up), pushing Set button for ≥ 2 s resets the stored values
Press for > 2 s	Display of MAX (Up) / MIN (Down) - measured values, additional pushing of Set button for ≥ 2 s deletes the stored values

9 LEDs measurement allocation (yellow)

LEDs	Measured value
Lx and N ON	Voltage value (L1 against N, L2 against N, L3 against N)
Lx and Ly ON	Voltage value (L1 against L2, L2 against L3, L1 against L3)
Lx FLASHING quickly	Vector surge (L1, L2, L3)
L1 FLASHING	Frequency

10 sealable button + LED

Press for > 2 s	Lock / Unlock
 LED red	Settings and simulation mode are locked, While attempting to set, Loc is displayed for 3s
LED green	Setting and simulation enabled

11 LEDs frequency / voltage / VSR Limit value undercut / exceeded (red)

ON, RL or RL Π	Limit value undercut / exceeded
FLASHES, RL or RL Π	Reset delay dof counting down

4. Detailed description

4.1 Description of the connections

Connection	Description
A1 and A2	Rated control supply voltage U_s , see Technical Data
11, 12, 14; 21, 22, 24	Relay K1 (DDI) und K2 (rincalzo, back up)
E1 – E2 Enable – Input	volt-free contact
	u5r . \rightarrow oFF . , no function
	u5r . \rightarrow on . , E1-E2 closed: Vector shift active but not evaluated, monitoring of feedback contacts off for use with generator (mains synchronization)
Y0, Y1 Inputs feedback contacts	Volt-free n/o or n/c contact, self-learning when switching on Set value > turn-on time section switch under rEL . \rightarrow ErEL . / can switch-off if not connected or if external devices/switches can activate the section switch (oFF .)
+U	Supply output for digital outputs, DC 15...35 V
IN1 (teledistacco, RCR)	volt-free contact closed: K1 released <50 ms (Standby mode, Stby .)
IN2 (comando locale)	volt-free contact
	<u>transitory mode</u> open: F⁺ . + F_{...} . = on . ; F⁻ . + F_{...} . = oFF . closed: F⁺ . + F_{...} . = oFF . ; F⁻ . + F_{...} . = on .
	<u>definitiv mode</u> open: F⁺ . + F_{...} . = oFF . ; F⁻ . + F_{...} . = on . closed: F⁺ . + F_{...} . = on . ; F⁻ . + F_{...} . = oFF . ; alternative response time : dAL⁺ . + dAL_{...} . activ
IN3 (segnale esterno)	volt-free contact
	ModE . \rightarrow ErAn . , ModE . \rightarrow dEF . , no function
	ModE . \rightarrow In3 . , closed: Definitiv mode open: Transitory mode
L1, L2, L3, N	Phase L1, L2, L3 and neutral conductor

4.2 functional characteristics

Functional characteristics	Explanation
VSR display value	The highest measured value is always displayed. The display value is reset to 0 by deleting the max. Value and when resetting into the go (good) state.
Delay Enable On time	Runs down when starting the unit and after opening the enable input; during this time there is no evaluation of the vector shift
Reset time	When a reset time doF is running, it is always counted down in the display (shortest one first)
Reset	Use the Reset key or interrupt the control voltage for > 2 s (comply with reset delay)
Display mode Scn	After the last measurement it switches into the scan mode; this is indicated by the display Scn . All measurements will now be displayed cyclically for the time set in dt .
MIN / MAX values	All min and max values are saved zero-voltage maintained (non-volatile).
Alarm counter	The unit saves max 100 alarms (cause, measurement value, at operating time). The LEDs indicate the cause; the tripping value that led to the alarm each stands in the 7-segment display. Alternately the time difference, current operating time – tripping operating time is displayed. (how long ago the alarm triggered)
Cumulative alarm time EAR	The cumulative alarm time TAL indicates how long the relay was switched off due to an alarm. It is recorded with a resolution of 1 minute and only when the control voltage is applied. Query: In the display mode ▶ button to Ac is displayed. 1x ▲ button = Cumulative alarm time EAR .
Standby mode u5r → 5tb9	If IN1 is closed (e.g., by ripple control receiver, timer, dimmer), Relays K1 and K2 are switched off. The number and duration of the shut-downs is recorded. Query: In the display mode ▶ button to Ac is displayed. 2x ▲ button = Standby counter 5tb9 . 1x ▲ button = Standby time 5tb9 .
Automatic restart attempts	If there is an error by the feedback contacts Err1 , 2 restart attempts are automatically performed in an interval of 10s. False triggering by undervoltage trips (e.g. during a thunderstorm) do not lead to permanent shut-down.

5. Important information



A marked switch and a protective device must be provided in the supply line in the vicinity of the device (easily accessible) as a disconnecting element (rated current $\leq 6A$).

Flawless and safe operation of such a device requires proper transport and storage, professional installation and later commissioning along with operation as intended.

Only persons who are familiar with the installation, commissioning and operation of the device and who are correspondingly qualified for their job are permitted to work on the device. They must comply with the contents of the operating manual, the instructions attached to the device and the pertinent safety regulations for the erection and operation of electrical equipment.

The devices are built and certified in accordance with EN 60255 and leave the factory in a safe and technically flawless condition. To maintain this condition they must comply with the safety regulations marked in the operating manual with the headline "Caution". Failure to follow the safety regulations can lead to death, bodily injury or property damage to the device itself and to other devices and equipment.

If the information contained in the operating instructions/operating manual are not sufficient, please contact us directly or contact your responsible agency or representative.

Instead of the industrial norms and stipulations stated in the operating manual and applicable in Europe you must comply with the valid and applicable regulations in the country of utilisation if the device is used outside of the area of application.



WARNING

Hazards electrical voltage!

Can lead to an electric shock and burns.

Disconnect and de-energize before working on the system and the device.

6. Assembly

The device can be mounted:

- Distribution panel or control panel on 35 mm rail according to EN 60715

Comply with the maximum permissible temperature when installing in a switch cabinet. Ensure sufficient clearance to other devices or heat sources. If cooling is inhibited, e.g., through close proximity to devices with increased surface temperature or interference with the cooling-air current, the permissible ambient temperature is decreased.




Caution!

Before you apply mains voltage to the device, make sure that the permissible control voltage **Us** on the side rating plate matches the mains voltage connected to the device!

7. Connection diagrams

7.1 1x PV, 2x section switch

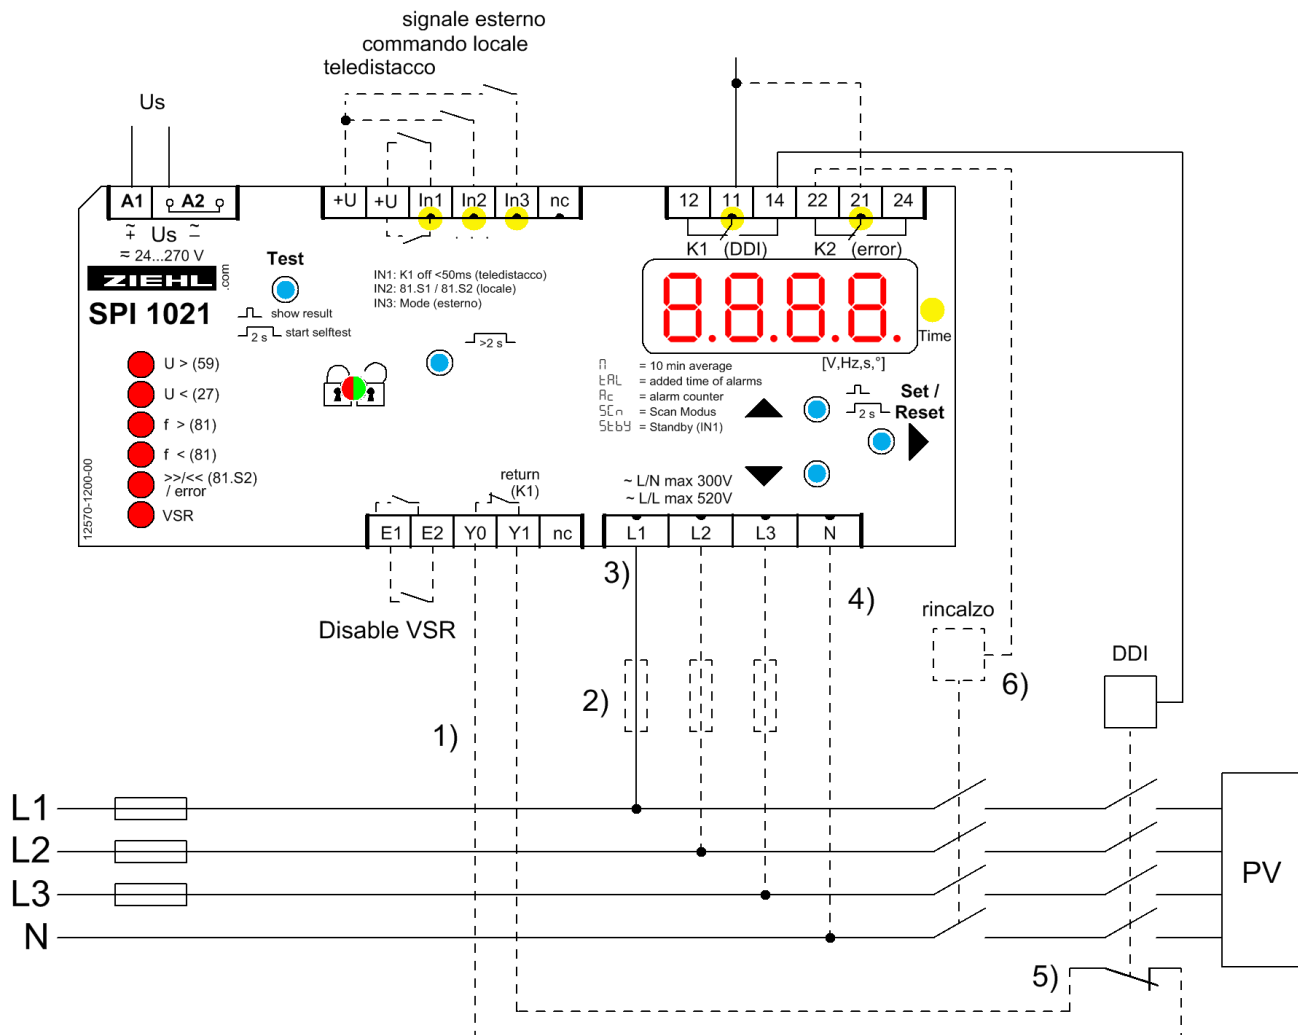

- 1) Feedback contacts not connected set $rEL \rightarrow t_rEL \rightarrow OFF$.
- 2) Fuses only when line protection necessary, e.g. 3x16A
- 3) $P_r \exists$ Phase connect to L1, L2 and L3 are not connected
- 4) N connected set $P_r I$ or $P_r \exists$
- 5) NC- or NO-contacts can be connected, automatic detection when switching on
- 6) must be connected for plants $\geq 20\text{ kW}$

8. Commissioning

8.1 Program Setup


The suitable program must be set on the SPI1021 in accordance with the application. If the SPI1021 is sealed/locked (red LED illuminated), the sealing has to be deactivated first.

Pr	Connection	Limit	Rated voltage
1	3 AC with N	2x overvoltage, 2x undervoltage	230V
2	3 AC without N	2x overfrequency, 2x underfrequency	400V
*3	1 AC with N	10min mean value, 1x vector shift	230V

* default setting

Adjustment process:

If present, remove seal (only authorized person)


- Apply control supply voltage at A1-A2
- Slightly lift the key cover and turn 180°
- Actuate the small blue button by firmly pressing the button cover (LED starts flashing) until the green LED  is illuminated.

Sealing is deactivated

- Press ▲ button 1x → display I n F a.
 - Press ► button 5x → display P r l.
 - Set the program with the buttons ▲ ▼
 - Press ► button 1x → display n a.
 - Press ▼ button 1x → display y E 5.
 - Press ► button
- ⇒ Device resets and starts with the newly selected program

Hint: When changing programs, all parameters of the selected program are reset to “default settings (see table „Default settings“). **Only change the parameters after having selected the correct program.**

8.2 Control chart

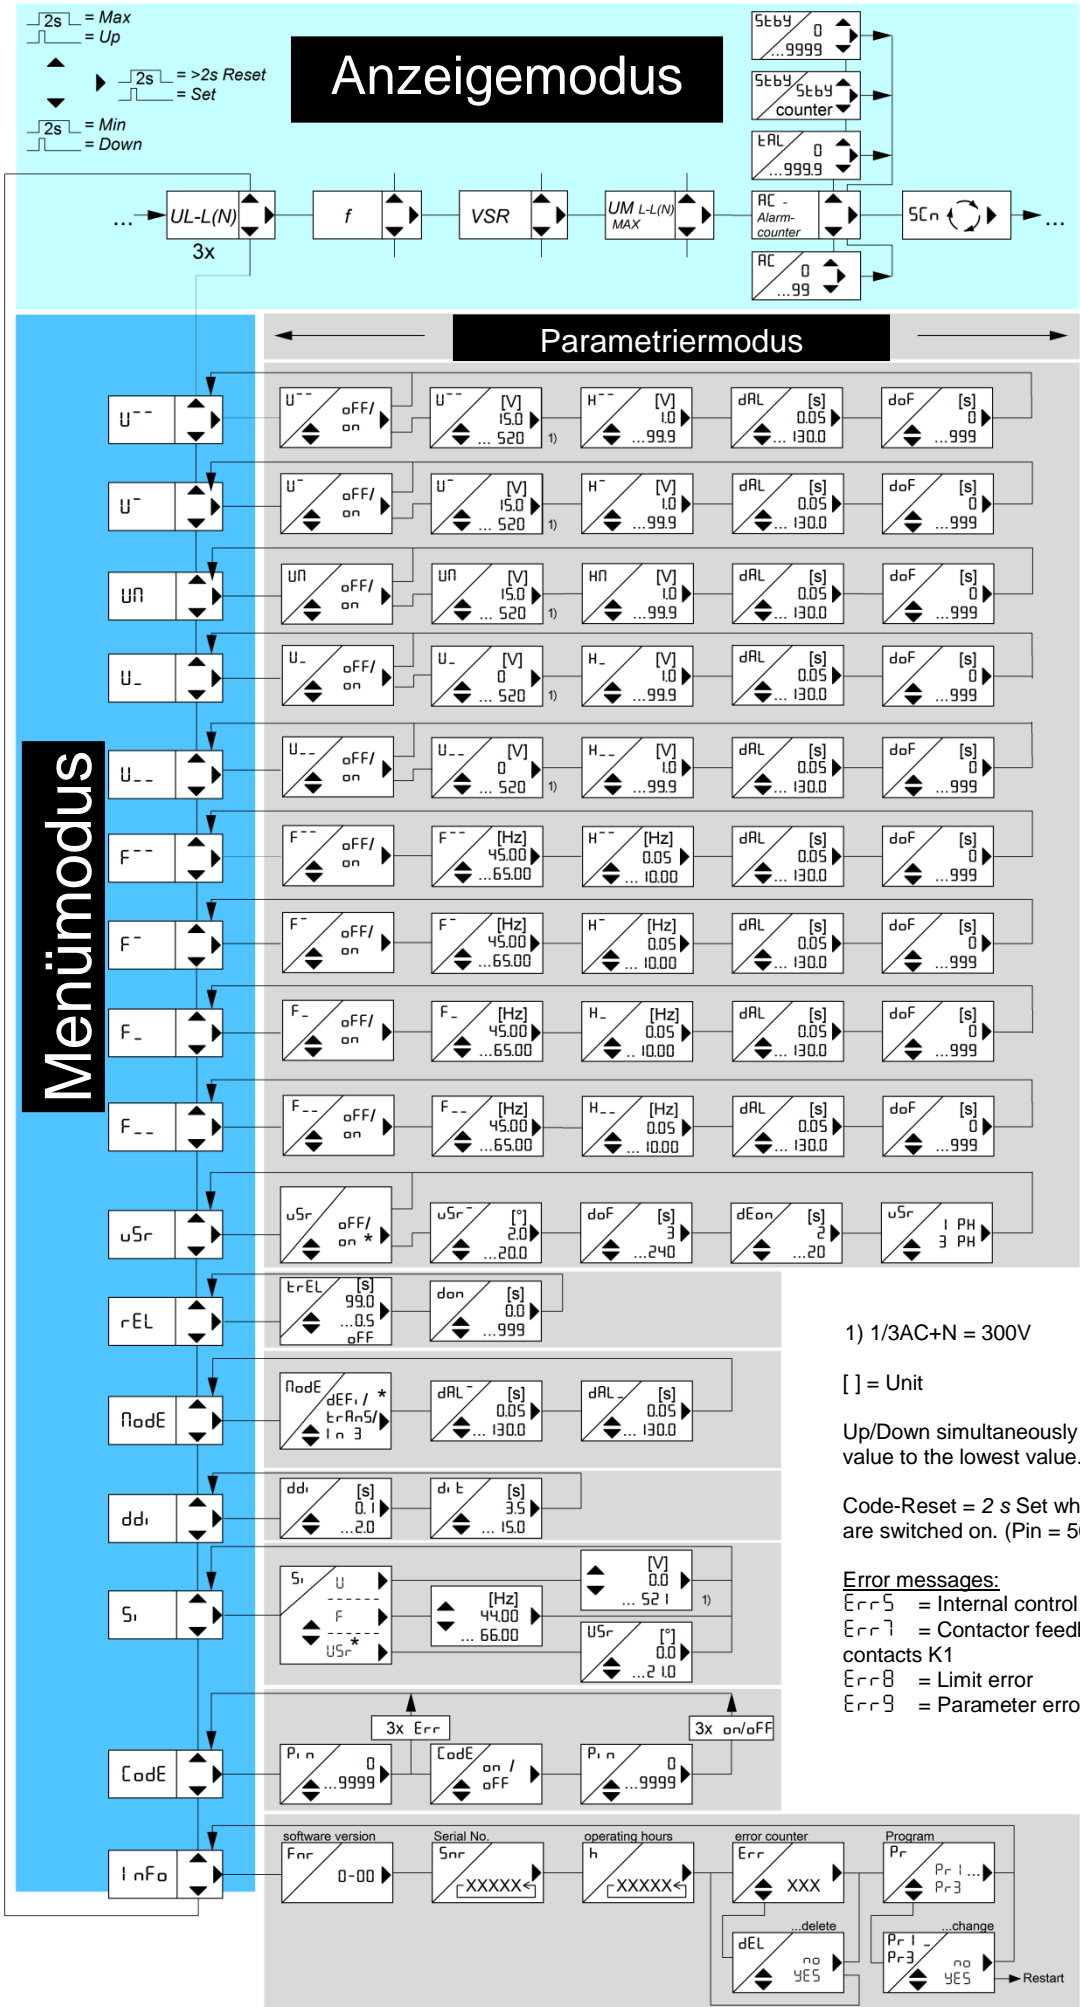

8.3 description of the parameters

Parameters	Display	Explanation	Adjustment range
Power up delay (delay On)	don	Runs once at startup device, adjustable rEL → don	0.0 ... 999
Limit value	U⁻⁻⁻ U⁻ U₋ U₋₋ UN	Voltage limit value	15.0 ... 300 15.0 ... 520
Limit value	F⁻⁻⁻ F⁻ F₋ F₋₋	Frequency limit value	45.00 ... 65.00
Hysteresis	H	253V (Limit) – 3V (Hysteresis) = 250V (Reset value) If the limit value is offset in Pr1 or Pr2 at F⁻ , the hysteresis also has to be adapted.	1.0 ... 99.0 0.05 ... 10.00
Response time (delay Alarm)	dRL	An alarm is suppressed for the set time (seconds)	0.05 ... 130.0
Turn-on time (delay Off)	doF	Reset is delayed for the set time, also during voltage recovery, this time (seconds) is always counted down in the display	0 ... 999
Enable time (delay On)	dEon	There is no evaluation of the vector shift during this time; starts with the application of the control voltage and when opening the Enable input	2 ... 20
VSR	u5r	1 Ph : a vector surge on one phase leads to an alarm 3 Ph : a vector surge on all phases simultaneously leads to an alarm	1 Ph ... 3 Ph
delay Display	ddi	Interval during which the display is updated in the display mode	0.1 ... 2.0

8.4 Display mode (last decimal point off)

In the display mode, the SPI1021 is in its normal state; here, depending on the program, the actual voltage, the highest actual 10 minute mean value, the frequency or the vector surge is displayed. In addition, the alarm signals (e.g. **RL**, **RL n**) and error codes (e.g. **Err9**) are displayed.

Function button Set / Reset	<u>Press briefly:</u> Switches the measurement, alarm counter
	<u>Press for > 2 s:</u> Resets after locked alarm (not possible if doF Reset delay is counting down)
	<u>Press for > 4 s:</u> Displays the program, e.g. Pr 1
	<u>Press for > 10 s:</u> Displays the software version, e.g. 0-03
Function key Up / Down	<u>Press briefly:</u> Change into the menu mode, Display alarm counter: Down = Query the memory Up = Query the cumulative alarm time
	<u>Press for ≥ 2 s:</u> Displays MAX and MIN measurements, additionally pressing the Set key for ≥ 2 s deletes the saved values

8.5 Menu mode (last decimal point on)

The menu mode is used to select the menu items. If no key is pressed for 30 s, one automatically returns to the display mode.

Function button Set / Reset	<u>Press briefly:</u> Change into the configuration mode
	<u>Press for ≥ 2 s:</u> Returns to the display mode (the most recently set values are then applied)
Function key Up / Down	<u>Press briefly:</u> Select menu item; changes into the display mode

8.6 Configuration mode (last Decimal point flashes)

In the configuration mode you can set the value of a parameter. The display alternates between the parameter relation and the currently set value until one of the Up/Down buttons is pressed, which changes the value of the parameter. If no key is pressed for 2 s the display starts alternating again.

If no key is pressed for 30 s (simulation mode 15 min) one automatically returns to the display mode (the most recently set value is applied during this)

Function button Set / Reset	<u>Press briefly:</u> The settings are taken over; continue to next parameter. Changes into menu mode after the last parameter
	<u>Press for ≥ 2 s:</u> Returns to the display mode (the most recently set values are then applied)
Function key Up / Down	<u>Press briefly/long:</u> Value change of the parameter (slow/fast)

Hint: Simultaneously pressing the Up and Down keys resets the adjustable value to zero. If the Up or Down button is kept pressed while setting the value the change in the display is accelerated.

8.7 Selftest execute

The SPI1021 has an automatic selftest as recommended in CEI 0-21.

K1 can pick up only after the selftest has been passed once.

Selftest starts automatically as soon as measuring voltage is connected for the first time to a new device and when there is no alarm! Selftest also starts automatically when program has been changed.

Selftest can be started manually by pressing button Test for ≥ 2 s.

During the Selftest is **EE5E** displayed.

At the end of the test the result **PR55** (passed) or **FR L** (not passed) is displayed for 30 seconds.

Reset stops the test.

During selftest supply- and measuring-voltage may not be disconnected.

8.8 Display Selftest result

The values and times have been measured during selftest can be displayed by pressing button Test shortly.

Kind of limit (**U⁻** , **U₋** , **F⁻** , **F₋**), measured value and switching time are displayed. LEDs (yellow) at the terminals L1...N show the according phase.


By pressing Test shortly display changes to the values of the next phase / kind of limit. At last the result **PR55** (passed) or **FR L** (not passed) is displayed.

Display automatically returns to normal mode 30 s after button Test has been pressed for the last time.

8.9 Alarm counter

The alarm counter **Rc** is increased by 1 with every shut-down. Up to 100 shut-downs are counted. That allows quick detection of how often the SPI1021 has shut down since the last delete of the alarm counter (see cumulative alarm time).

Query the alarm counter:

• Change into the display mode
• Press the  button several times until \rightarrow display Rcxx

8.10 Cumulative alarm time (display in hours)

The cumulative alarm time **⌚RL** indicates how long the relay was switched off due to an alarm. It is recorded with a resolution of 1 minute and only when the control voltage is applied.

Query the cumulative alarm time:

• Change into the display mode
• Press the ▶ button several times until → display Rcxx
• Press the ▲ button 1x → display ⌚RL / x.xx

Delete the alarm counter and cumulative alarm time (only together):

• Display alarm counter Rcxx
• Press the ▲ button 1x → display ⌚RL / x.xx
• Keep the ▶ button pressed for 2s until → display ⌚RL / 0.00

8.11 Alarm Memory

Independent of the alarm counter, the SPI1021 stores the most recent 100 shut-down causes (cause, measurement value, at operating time). Simulated alarms are also registered. The LEDs indicate the cause; the tripping value that led to the alarm each stands in the 7-segment display. Alternative to that the time is shown in hours which have passed since the last tripping (with applied control voltage). These values remain saved even after the power has been turned off.

Query alarm memory:

• Change into the display mode
• Press the ▶ button several times → display Rcxx
• Press the ▼ button 1x → display x.xx / x.xx (tripping value or error no. / time that has passed in hours)
• Press the ▼ button 1x, go to next alarm

The alarm memory is only deleted during a program change.

8.12 Standby counter and standby time

The standby counter **5⌚bY**, is increased by 1 with every standby shut-down. Up to 9999 shut-downs are counted. That lets the SPI1021 quickly detect how often, e.g., shut-down was performed through a ripple control receiver.

Query the standby counter:

• Change into the display mode
• Press the ▶ button several times until → display Rcxx
• Press the ▲ button 2x → display 5⌚bY / xxxx

The standby time **5⌚bY** indicates how long the relay was switched off by the standby mode. It is recorded with a resolution of 1 minute and only when the control voltage is applied and if no alarm is present.

Query the standby time:

• Change into the display mode
• Press the ▶ button several times until → display Rcxx
• Press the ▲ button 3x → display 5⌚bY / x.xx (Time LED is illuminated)

Delete the standby counter and standby time (only together):

• Display alarm counter Rcxx
• Press the ▲ button 2x → display 5⌚bY / xxxx
• Keep the ▶ button pressed for 2s until → display 5⌚bY / 0

8.13 Code lock

You can protect the set parameters by enabling the code lock here.

The device acknowledges an incorrect entry with **Err** (flashes three times).

Adjustment process:

• Select the menu item with the ▲▼ buttons until → display CoDE.
• Press the ► button 1x → display Pin / 0
• Set the saved pin code with the ▲▼ buttons (default setting is 504)
• Press the ► button 1x → display CoDE / oFF
• Use the ▲▼ buttons to set the desired code lock: <ul style="list-style-type: none"> ○ oFF off, all parameters can be changed ○ on on, no parameters can be changed
• Press the ► button 1x → display Pin / 504
• Use the ▲▼ buttons to set the new, desired pin code (caution: write down the pin code)
• Press the ► button 1x
⇒ Code lock on, display on flashes three times
⇒ Code lock off, display oFF flashes three times
⇒ Return to menu mode, menu item code lock

If there any problems with the code lock (Pin forgotten), the lock can be switched off and the pin can be reset to 504 by keeping the Set key pressed while switching on the mains until **CoDE** / **oFF** appears in the display.


8.14 Sealing

All the settings and the simulation mode can be locked.

If the  LED is illuminated, the SPI1021 is locked.

If an attempt is made to change a setting in the locked state, for 3s the display shows **Loc**.

Adjustment procedure Sealing/Lock ON (OFF):

• If present, remove seal (only authorized person)
• Apply control supply voltage at A1-A2
• Slightly lift the key cover and turn 180°
• Actuate the small blue button by <u>pressing the button cover very firmly</u> (LED starts flashing) until the green LED  is illuminated.

8.15 Simulation

Here, the voltage, frequency or a vector surge can be simulated and the setting can be tested. All 3 phases plus the 10 minute mean value are always simulated. All functions of the device operate as if this value is actually being measured. Alarm and error messages are only indicated with the LEDs and not in the display.

The set values are simulated until the menu item **Sr** is exited with the ▲ or ▼ button.

If the SPI1021 is sealed/locked, simulation is not possible.

If the section switch feedback contacts are connected to the SPI1021 and enabled, (set value > section-switch turn-on time under **trEL**), after a shut-down, the tripping time (dAL + time of slowest section switch) is displayed.

Adjustment process:

• Select the menu item with the ▲▼ buttons until → display Sr .
• Press the ► button 1x → display Sr / U
• Use the ▲▼ buttons to set the measurement factor for simulation: <ul style="list-style-type: none">○ U Voltage + 10min mean value (frequency = last simulated value)○ F Frequency (voltage = last simulated value)○ uSr Vector shift
• Press the ► button 1x → display 230 (selected measurement factor is simulated)
• Use the ▲▼ buttons to set the desired value

After exiting the Simulation menu item with the ▲▼ buttons, the unit switches over to monitoring the limits.

The unit automatically returns to the display mode if no button is pressed for 15 minutes.

Hint: A limit value should be tested that is higher than the set 10min mean value. If the 10min mean value has to be temporarily switched off, set (**U₁₀** → **oFF**) since otherwise it will trip first. The same applies, for example, for **U⁻**, during a simulation of **U⁻** in Pr3 and Pr4. (Medium voltage)

8.16 Possible indications in display

display mode

AL , AN	Alarm , Alarm 10min mean value
Err5 ... Err9	Error messages (see 11. Error messages and measures)
Ac , tAL	Alarm counter, cumulative alarm time
Scn , n	Scan mode, 10min mean value

Menu mode / configuration mode

U ⁺ , U ⁻ , U ₊ , U ₋	Voltage limit value
UN	Limit value 10min mean value
H ⁺ , H ⁻ , H ₊ , H ₋ , HN	Hysteresis (if a limit value is changed, the reset value also shifts; that means it might be necessary to adapt it)
F ⁺ , F ⁻ , F ₊ , F ₋	Frequency limit value
dAL	Response time
doF	Reset time; is always counted down in the display
uSr	Vector surge
Stby	Standby mode, standby-time, standby-counter
dEon	Delay Enable On, suppression time when switching on and after opening the enable input
1 Ph , 3 Ph	Single phase, three-phase vector shift evaluation
rEL	Relay
t _r EL	Section switch turn-on time, OFF no feedback contacts
don	Power Up delay, runs once at power up device
ModE , t _r An , dEF _i	Mode, Transitory Mode, Definitiv Mode
dd _i	Delay display, to calm down the display
d _i t	Display duration scan mode (each measurement is displayed for this duration)
S _i	Simulation
F , U	Frequency, voltage
Code , PL _o , uSr	Code lock / sealing, vector shift
P _i n	Pin code (default 504)
Info	Device information, program change
F _{nr} , S _{nr}	Firmware version, serial number
h	Operating hours
Err , dEL	Error counter, delete error counter
YES , no	Yes, no query for acknowledgement
Pr	Program
on , OFF	On, Off

9. Default settings and firmware version

When changing programs, all parameters are reset to the default settings.

Menu item	Parameter / Unit		Default setting				Users data
			3AC+N 230V	3AC 400V	1AC+N 230V		
			Pr1 *	Pr2	Pr3		
U ⁺⁺	U ⁺⁺ Alarm on/off		oFF	oFF	oFF		
	U ⁺⁺ Overvoltage	V	264	458	264		
	H ⁺⁺ Hysteresis	V	10.5	17.5	10.5		
	dRL Response time	s	0.10	0.10	0.10		
	doF OFF-delay	s	0	0	0		
59.S2 U ⁻	U ⁻ Alarm on/off		on	on	on		
	U ⁻ Overvoltage	V	264	458	264		
	H ⁻ Hysteresis	V	10.5	17.5	10.5		
	dRL Response time	s	0.20	0.20	0.20		
	doF OFF-delay	s	0	0	0		
59.S1 U ₀	U ₀ Alarm on/off		on	on	on		
	U ₀ Overvoltage	V	253	438	253		
	H ₀ Hysteresis	V	10.0	17.5	10.0		
	dRL Response time	s	3.00	3.00	3.00		
	doF OFF-delay	s	0	0	0		
27.S1 U ₋	U ₋ Alarm on/off		on	on	on		
	U ₋ Undervoltage	V	196	339	196		
	H ₋ Hysteresis	V	8.0	13.5	8.0		
	dRL Response time	s	0.40	0.40	0.40		
	doF OFF-delay	s	0	0	0		
27.S2 U ₋	U ₋ Alarm on/off		on	on	on		
	U ₋ Undervoltage	V	92	159	92		
	H ₋ Hysteresis	V	3.7	3.7	3.7		
	dRL Response time	s	0.20	0.20	0.20		
	doF OFF-delay	s	0	0	0		
81.S2 F ⁺⁺	F ⁺⁺ Alarm on/off		on	on	on		
	F ⁺⁺ Overfrequency	Hz	51.50	51.50	51.50		
	H ⁺⁺ Hysteresis	Hz	0.10	0.10	0.10		
	dRL Response time	s	0.10	0.10	0.10		
	doF OFF-delay	s	0	0	0		
81.S1 F ⁻	F ⁻ Alarm on/off		oFF	oFF	oFF		
	F ⁻ Overfrequency	Hz	50.50	50.50	50.50		
	H ⁻ Hysteresis	Hz	0.10	0.10	0.10		
	dRL Response time	s	0.10	0.10	0.10		
	doF OFF-delay	s	0	0	0		

Menu item	Parameter / Unit		Default setting				Users data
			3AC+N 230V	3AC 400V	1AC+N 230V		
			Pr1	Pr2	Pr3 *		
F ₋ 81.S1	F ₋ Alarm on/off		oFF	oFF	oFF		
	F ₋ Underfrequency	H	49.50	49.50	49.50		
	H ₋ Hysteresis	H	0.10	0.10	0.10		
	dRL Response time	s	0.10	0.10	0.10		
	doF OFF-delay	s	0	0	0		
F ₋ 81.S2	F ₋ Alarm on/off		on	on	on		
	F ₋ Underfrequency	H	47.50	47.50	47.50		
	H ₋ Hysteresis	H	0.10	0.10	0.10		
	dRL Response time	s	0.10	0.10	0.10		
	doF OFF-delay	s	0	0	0		
uSr	uSr Alarm on/off		oFF	oFF	oFF		
	uSr Vector shift	°	10.0	10.0	10.0		
	doF OFF-delay	s	3	3	3		
	dEon Suppression time	s	2	2	2		
	uSr Number of phases		3Ph	3Ph			
rEL	ErEL response time Y1	s	5.0	5.0	oFF		
	don Delay On	s	300	300	300		
ModE	ModE Mode		rAn	rAn	rAn		
	dRL Response time(<</>)	s	1.00	1.00	1.00		
	dRL Response time(<</>)	s	4.00	4.00	4.00		
ddi	ddi Display delay	s	0.5	0.5	0.5		
	di t Display duration SCn	s	3.5	3.5	3.5		
Si	U Voltage	V	230	400	230		
	F Frequency	H	50.00	50.00	50.00		
	uSr Vector hift	°	0.0	0.0	0.0		
CodE	Pi n Pincode		504	504	504		
I nFo	Fnr Firmware version		0-0d	0-0d	0-0d		
	Snr Serial number		xxxxx	xxxxx	xxxxx		
	h Operating hours	h	xxxxx	xxxxx	xxxxx		
	Err Error counter		xxx	xxx	xxx		
	Pr Program		1	2	3		

* default setting

Display of the program:

Display of the firmware version:

InFo

→

Pr

→

Fnr

or when switching on

10. Technical Data

Control voltage Us:

Rated-Connection	AC/DC 24-270 V, 0/40...70 Hz, <1,8W / <6,5 VA DC: 20,4...297 V, AC: 20,4...297 V
Voltage drop	SPI1021 must be supplied with a UPS (>5s)

Output relay:

Switching voltage	2 x change-over contact Max. AC 440 V
Conventional thermal current I _{th}	6 A
Inrush current (at 10 % ED)	25 A max. 4 s / 50 A max. 1 s
Nominal operating current I _e (AC 15)	6 A AC 250 V
Recommended series fuse	gG/gL 6 A
Contact service life, mech.	30 x 10 ⁶ switching cycles
Contact service life, electr.	1 x 10 ⁶ operating cycles at AC 250 V / 6 A 2 x 10 ⁵ operating cycles at AC 250 V / 10 A cos φ 0.6

Voltage measurement:

Measurement voltage phase – phase	AC 15...530 V (< 5 V: 0 is displayed)
Adjustment range phase – phase	AC 0/15...520 V
Measurement voltage phase – N	AC 10...310 V (< 5 V: 0 is displayed)
Adjustment range phase – N	AC 0/15...300 V
Measurement principle	Real root mean square measurement both half waves
Hysteresis	Adjustable 1.0...99.9 V
Measurement error (with N)	± 0.6 % of the measurement value
Measurement error (without N)	± 0.8 % of the measurement value
Display accuracy	>100V: -1 digit (res. 1 V) <100V: -1 digit (res. 0.1V)
Measurement function	3-phase with/without N
Response time	Adjustable 0.05 (±15ms)...130.0 s
Reset time	Adjustable 0(>200ms) ... 999 s

Frequency measurement

Frequency range	40...70 Hz
Adjustment range	45.00...65.00 Hz
Hysteresis	0.05...10.00 Hz
Measurement accuracy	± 0.04Hz ± 1 digit
Response time	Adjustable 0.05 (±15ms)...130.0 s
Reset time	Adjustable 0 (>200ms) ... 999 s

Vector surge

Measurement range	0...45.0°
Adjustment range	2.0...20.0°
Response time	< 50 ms
Reset time	Adjustable 3...240 s
Delay at U _s on	Adjustable 2...20 s

Digital inputs (INx)

Output voltage +U	DC 15...35 V
Current INx	> 3 mA

Contact feedback inputs

Voltage Y0 – Y1/2	DC 15...35 V
Current	> 3 mA
Contact response time (section switch)	Adjustable 0.5...99.0 s

Selftest

Phases	Pr1,2: all Pr3: L1 only
Slope Rate Voltage	<150V: 2,5V/s, ≥150V: 5,0V/s
Slope Rate Frequency	0,05Hz/s
Permissible tolerance	measured value – trigger value: ≤±5%
	Response time: 80...120ms
Display result	„Pass“ = passed, „Fail“ = failed
Duration	max 175s

Test conditions

Rated impulse withstand voltage	EN 60255 4000 V
Surge category III	
Pollution level 2	
Rated insulation voltage Ui	300 V
Insulation group	II
Operating time	100 %
Permissible ambient temperature	-20 °C... +55 °C
	EN 60 068-2-1 dry heat
EMC - noise immunity	EN 61000-6-2
EMC - noise emission	EN 61000-6-3

Housing:

Construction form	V6
Front-to-back size	55 mm
Dimensions (W x H x D)	90 x 105 x 69 mm
Wiring connection single strand	each 1 x 4mm ²
Finely stranded with wire end ferrule	each 1 x 2.5mm ²
Protection class, housing	IP 30
Protection class, terminals	IP 20
	Mounting snap-on fastening on 35 mm mounting rail acc EN 60 715 or with M4 screwed attachment (additional bar not included in the scope of delivery)
Weight:	approx. 250 g

We reserve the right to make technical changes

11. Maintenance and repair


The SPI1021 is maintenance-free. Periodically test for proper functioning.

12. Troubleshooting an measures

Error	Cause	Remedy
FR.L as selftest result	Selftest failed	Check all measured voltages
EEEE or -EEE appears in the display	Measurement is above/below range	Measured voltage, frequency or the vector surge is too large or too small; comply with measurement range
Err5 appears in the display	Error internal interface	Reset → interrupt control voltage for >5s
Err7 also appears in the display after 2 automatic reconnection attempts, LED K1 flashes, K2 is released	Error when off the section switch, section switch connected wrong, faulty or operated from a third party switch	<u>Feedback contacts not connected</u> Set - rEL. → ErEL. → oFF <u>Feedback contacts not connected</u> - Check for correct connection - Set turn-on time of section switch under ErEL. - Do a reset → interrupt control voltage for >5s
Err7 LED K1 flashes und <u>K2 is operating</u>	Error when off the section switch	- Check the connection - Check for broken section switch - Do a reset → interrupt control voltage for >5s
Err8 appears in the display	Hysteresis error	Upper threshold value must be higher than the lower threshold value, check the threshold values
Err9 appears in the display	Parameter error	Reset to factory settings, see "Program setup"
A time expires in the display	Always when an OFF-delay time doF is running, it is counted down in the display (shortest one first)	Wait until the time has expired (depending on the setting, several times may elapse one after the other)
Device cannot be configured / only the limits can be configured	Code lock / Sealing activated	If there are any problems with the code lock (pin forgotten), the lock can be switched off and the pin can be reset to 504 by keeping the Set key pressed while switching on the mains until ► CoDE / oFF appears in the display.
Implausible voltage values	Pr selected with N, but N not connected	Select Pr without N or connect N
LoC appears in the display	Seal is active	See Sealing
CoDE appears in the display	Code lock is active	See „Code lock“
StbY appears in the display	Standby mode, E1-E2 closed	Check parameter u5r.

13. Construction form V6

Dimensions in mm

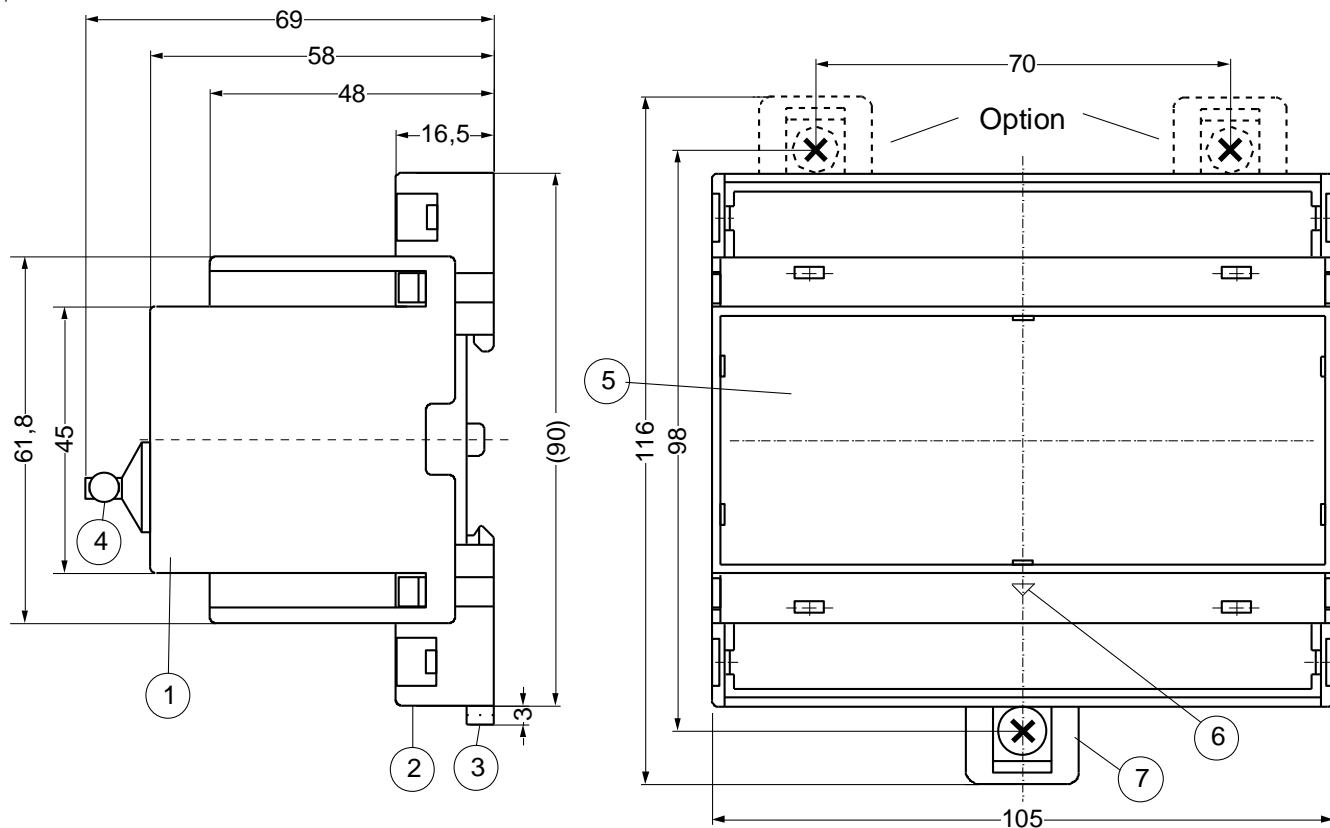

- 1 Oberteil / cover
- 2 Unterteil / base
- 3 Riegel / bar for snap mounting
- 4 Plombierung max. Ø 1,8 mm / sealing max. Ø 1,8 mm
- 5 Frontplatteneinsatz / front panel
- 6 Kennzeichen für unten / position downward
- 7 Riegel bei Wandbefestigung mit Schrauben. Riegelbohrung Ø 4,2 mm / for fixing to wall with screws, Ø 4,2 mm.



**BUREAU
VERITAS**

Bureau Veritas
Consumer Products Services
Germany GmbH
Businesspark A96
86842 Türkheim
Germany
+ 49 (0) 40 740 41 - 0
cps-tuerkheim@de.bureauveritas.com

Organismo di certificazione BV CPS GmbH
Accreditamento a EN 45011 -
ISO / IEC Guide 65

Dichiarazione di conformità alle prescrizioni alla Norma CEI 0-21

NOME ORGANISMO CERTIFICATORE: Bureau Veritas Consumer Products Services Germany GmbH
Accreditamento a DAkkS, D-ZE-12024-01-01, Rif. DIN EN 45011,
Data validità: 19-Agosto-2015

OGGETTO: CEI 0-21:2012-06
Regola tecnica di riferimento per la connessione di Utenti attivi e passivi alle
reti BT delle imprese distributrici di energia elettrica

TIPOLOGIA DI APPARATO CUI SI RIFERISCE LA DICHIARAZIONE:

DISPOSITIVO DI INTERFACCIA	PROTEZIONE DI INTERFACCIA	DISPOSITIVO DI CONVERSIONE STATICA	DISPOSITIVO DI GENERAZIONE ROTANTE
	X		

Indicare con una "X" il campo o i campi cui si riferisce la dichiarazione. Identificare in maniera univoca i dispositivi dichiarati conformi mediante l'indicazione delle seguenti informazioni:

COSTRUTTORE: ZIEHL industrie-elektronik GmbH+Co KG
Daimlerstraße 13
74523 Schwäbisch Hall
Germania

MODELLO: SPI1021
VERSIONE
FIRMWARE: 0-0
NUMERO DI FASI: trifase + monofase

NOTA:

Per impianti superiori a 8kW con asimmetria possibile, l'equilibrio di potere deve essere controllato separatamente.

RIFERIMENTI DEI LABORATORI CHE HANNO ESEGUITO LE PROVE:

Bureau Veritas Consumer Products Services Germany GmbH

Accreditamento a DAkkS, D-PL-12024-03-01, Rif. DIN EN ISO/IEC 17025

Data validità: 19-Agosto-2015

Esaminato il certificato ISO 9001 del costruttore n°FS 529448/4542D, emessi dal British Standards Institution (BSI). Esaminati i Fascicoli Prove n°12TH0488-CEI 0-21, emessi dal laboratorio Bureau Veritas Consumer Products Services Germany GmbH. Si dichiara che il prodotto indicato è conforme alle prescrizioni CEI 0-21:2012-06.

Numero di certificato: U12-1000

Data di emissione: 2012-11-19

Organismo di certificazione

Dieter Zitzmann

