

Operating Instructions SW32V - Archive document

updated: 121112 Fz
from Firmware: 0.12

- voltage relay for monitoring direct, alternating and three-phase networks for overvoltage and/or undervoltage



Table of contents

1.	Application and brief description.....	3
2.	Summary of the functions	3
3.	Display and controls	4
4.	Detailed description	5
4.1	Description of the connections	5
4.2	Functional characteristics.....	5
5.	Important information.....	5
6.	Installation	6
7.	Connection diagram.....	7
8.	Commissioning.....	8
8.1	Program setup.....	8
8.2	Control diagrams Pr1	9
8.2	Control diagrams Pr2.....	10
8.2	Control diagrams Pr3.....	11
8.2	Control diagram Pr4.....	12
8.3	Description of the parameters.....	13
8.4	Display mode.....	14
8.5	Menu mode	14
8.6	Configuration mode	14
8.7	Alarm configuration	15
8.8	Configuring Delay Enable, Delay-Display.....	16
8.9	Simulation	16
8.10	Code lock.....	17
8.11	Possible indications in display	18
9.	Factory settings and software version	19
10.	Maintenance and repair	20
11.	Troubleshooting and measures	20
12.	Technical data	21
13.	Mounting type.....	22

1 Application and brief description

The SW32V voltage relay is a high-quality voltage monitor with a large measurement range for monitoring direct, alternating and three-phase networks for overvoltage and/or undervoltage. In three-phase current networks, phase symmetry and phase sequence can be monitored in addition.

The limits are set in volts. That allows using the unit with various rated voltages.

The digital display is used to display the measurements and to precisely set limits, response times and functions.

2 Summary of the functions

For use as a voltage monitor in energy generation and distribution plants, especially in-plant systems such as PV plants or combined heat and power plants.

Voltage monitoring in machines and plants to prevent errors, damage or failures in sensitive equipment or devices.

- Voltage monitoring in direct current networks DC 10.0...600 V
- Voltage monitoring in alternating current networks AC 15.0...480 V
- Voltage monitoring in three-phase current networks with//without N up to 3AC 830 V, asymmetrical and phase failure monitoring connectible
- Real root mean square measurement (for AC, both half waves)
- 2 Alarms/output relays, 1 each change-over contact
- Alarm and reset delay for every limit value can be individually set
- Setting of limits and hysteresis in volts
- Measurement value simulation to check the settings
- Code lock can be enabled
- Control voltage AC/DC 24-270 V
- Distributor housing for panel mounting, 4 TE (70 mm), front-to-back size 55 mm
- Mounting on 35 mm mounting rails DIN EN 60715

3 Display and controls

1 Last decimal point (red)

Off	Display mode
Illuminated	Menu mode
Flashes	Configuration mode

2 LEDs relay status (yellow)

OFF	Relay is released
ON	Relay operating

3 LED Asymmetry (red)

OFF	Asymmetry surge limit not exceeded
ON, R 1 or R 2	Asymmetry limit exceeded
FLASHES, R 1L or R2L	Ready for reset after exceeding the limit
FLASHES, R 1 or R 2	Reset delay doF counting down

4 LEDs voltage limit undercut / exceeded (red)

ON, R 1 or R 2	Limit undercut / exceeded
FLASHES, R 1L or R2L	Ready for reset after undercutting / exceeding the limit value
FLASHES, R 1 or R 2	Reset delay doF counting down
OFF	Limit value not undercut / exceeded

5 LED phase sequence (red)

OFF	Phase sequence correct (rotating clockwise) or oFF
ON, R 1 or R 2	Phase sequence error (rotating counter-clockwise)
FLASHES, R 1L or R2L	Ready for reset after phase sequence error

6 Up / Down key (in display mode, normal state)

Press briefly	Change into the menu mode (see Point 8.5)
Press for > 2 s	Displays the MAX (Up) and MIN (Down) measurement; additionally pressing the Set key for ≥ 2 s deletes the saved value

7 Set/Reset key (in display mode, normal state)


Press briefly	Displays the next measurement
Press for > 2 s	Reset after locked alarm (manual restart) (not possible if DoF Reset delay is counting down)
Press for > 4 s	Displays the program, e.g. Pr 1
Press for > 10 s	Displays the software version e.g. 000

8 LEDs measurement allocation (yellow)

LEDs	Measurement
Lx and N ON	Voltage value (L1 against N, L2 against N, L3 against N)
Lx and Ly ON	Voltage value (L1 against L2, L2 against L3, L1 against L3)

9 Digital display 3-digits (red)

Depending on the program display, actual voltage, frequency
Displays the alarm messages, e.g. R 1 , R2L , ...
Displays the errors with error code e.g. Er9

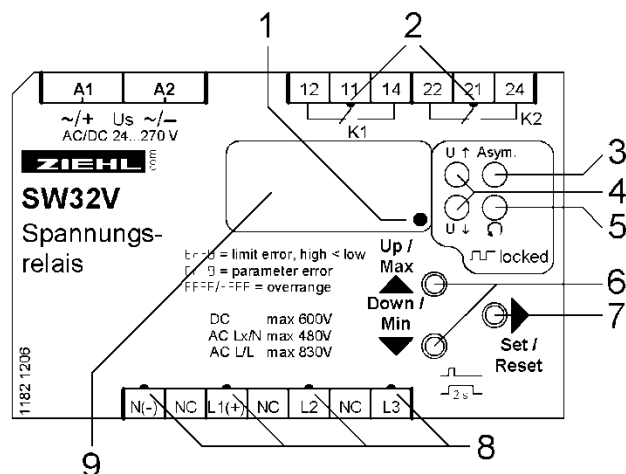

4 Detailed description

4.1 Description of the connections

Connection	Function
A1 and A2	Control voltage U_s , see 12. Technical Data
11, 12, 14	Relay K1, menu item <code>R1_</code> , <code>R1_</code>
21, 22, 24	Relay K2, menu item <code>R2_</code> , <code>R2_</code>
nc	Not used
N (-)	Neutral conductor (DC -)
L1 (+)	Phase L1 (DC +)
L2	Phase L2
L3	Phase L3

4.2 Functional characteristics

Functional characteristics	Explanation
Display mode <code>Scn</code>	In programs with multiple display values, there is a switchover into the automatic display mode after the last display value, which is indicated by the display of <code>Scn</code> . All measurements will now be displayed cyclically for the time set in <code>dte</code> .
MIN / MAX values	All min and max values are saved zero-voltage maintained (non volatile). After triggering, the trip value is still available after the control voltage is switched off.
Reset delay	After applying the control voltage, for K1 the reset delay set in <code>R1_</code> and for K2 the reset delay set in <code>R2_</code> counts down. All alarms, excepting during false phase sequence, are suppressed during this time. During this time, the relay remains dropped out, which excludes a temporary line fault upon starting.
Reset	Use the Reset key or interrupt the control voltage for > 5 s (comply with reset delay)

5 Important Notice



WARNING

Hazardous electrical voltage!

Can lead to electric shock and burns.

Before starting work, switch plant and device voltage-free.

The flawless and safe operation of a device requires that it is shipped and stored appropriately, professionally installed and put into operation and operated according to its intended use.

Only people who are familiar with the installation, commissioning and operation and who have qualifications corresponding to their job are permitted to work on the device. They must comply with the contents of the operating instructions, the notices attached to the device and the relevant safety regulations for constructing and operating electrical plants.

The devices are built and certified in accordance with EN 60255 and leave the factory in a safe and technically flawless condition. To maintain this state you must comply with the safety regulations indicated with "Caution" in the operating instructions. Non-compliance with the safety regulations can lead to death, bodily injury or property damage on the device itself and on other devices and equipment.

If the information in the operating instructions is insufficient at any time, please contact us directly or contact the representation responsible for you.

Instead of the industrial norms and stipulations stated in the operating instructions and applicable in Europe, you must comply with the valid and applicable regulations in the country of utilisation if the device is used outside of the area of application.



Caution! If the operating current execution is programmed for all relays, a failure of the control voltage or the device will not be detected.

When using as a monitoring device, the operator must ensure that this error is detected through periodic performance tests.

We recommend programming and correspondingly evaluating at least one relay in closed-circuit (idle) current execution.

6 Mounting

The device can be mounted:

- Distribution board or switch cabinet on 35 mm rails according to EN 60715

Comply with the maximum permissible temperature when installing in a switch cabinet. Ensure sufficient clearance to other devices or heat sources. If cooling is inhibited, e.g., through close proximity to devices with increased surface temperature or interference with the cooling-air current, the permissible ambient temperature is decreased.




Caution!


Before you apply mains voltage to the device, make sure that the permissible control voltage U_s on the side rating plate matches the mains voltage connected to the device!

7 Connection diagram


3-phase with N (Pr1)

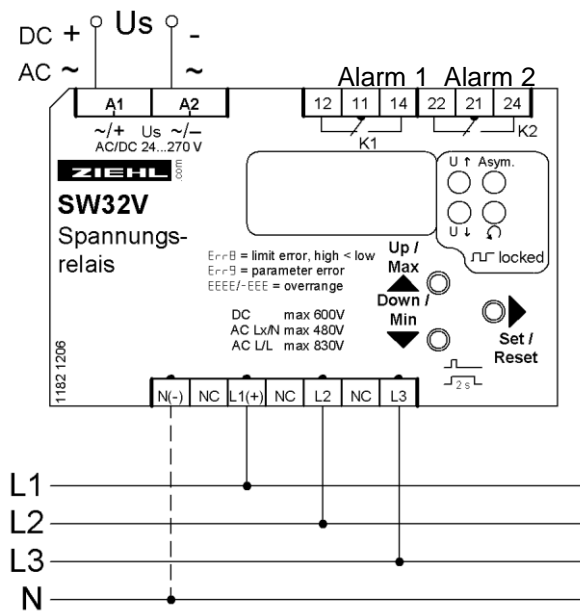


3-phase without N (Pr2)

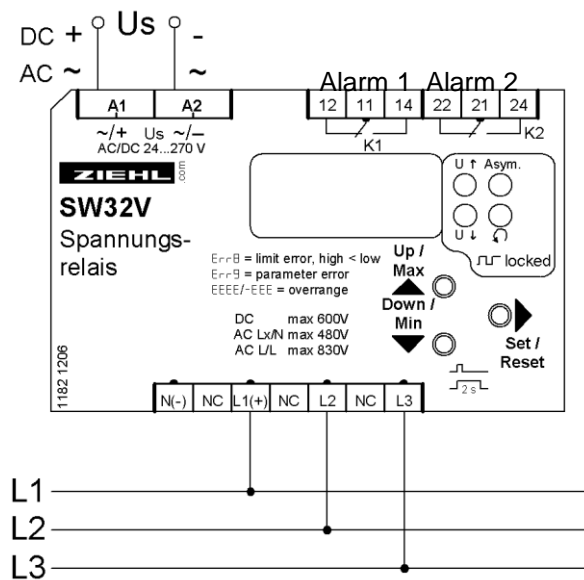

1 phase (Pr3)



DC (Pr4)

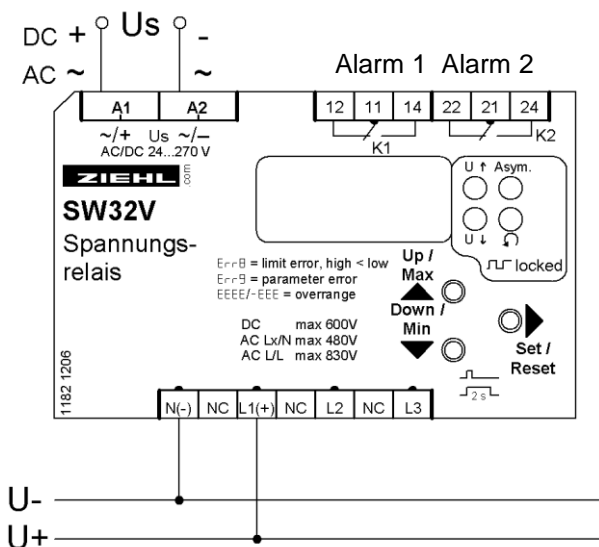

8 Commissioning

8.1 Program setup

The suitable program must be set on the SW32V in accordance with the application (see table). That is taken care of during commissioning.


Pr	Connection	Alarm1 (K1)	Alarm2 (K2)
*1	3 AC with N	Voltage + Asymmetry + Phase sequence	Voltage + Asymmetry + Phase sequence
2	3 AC without N	Voltage + Asymmetry + Phase sequence	Voltage + Asymmetry + Phase sequence
3	1 AC with N	Voltage	Voltage
4	DC	Voltage	Voltage

* factory set


Adjustment process:

• Switch off control voltage on the SW32V
• Keep the Set key pressed and switch the control voltage on again
⇒ Pr I. appears in the display after 10s.
• Release the Set key
• Set the program with the UP/DOWN keys
• Press the Set key
⇒ Device resets and starts

Hint: When changing programs, all parameters of the selected program are reset to "factory settings" (**see table "Factory settings"**) only change the parameters after selecting the correct program.

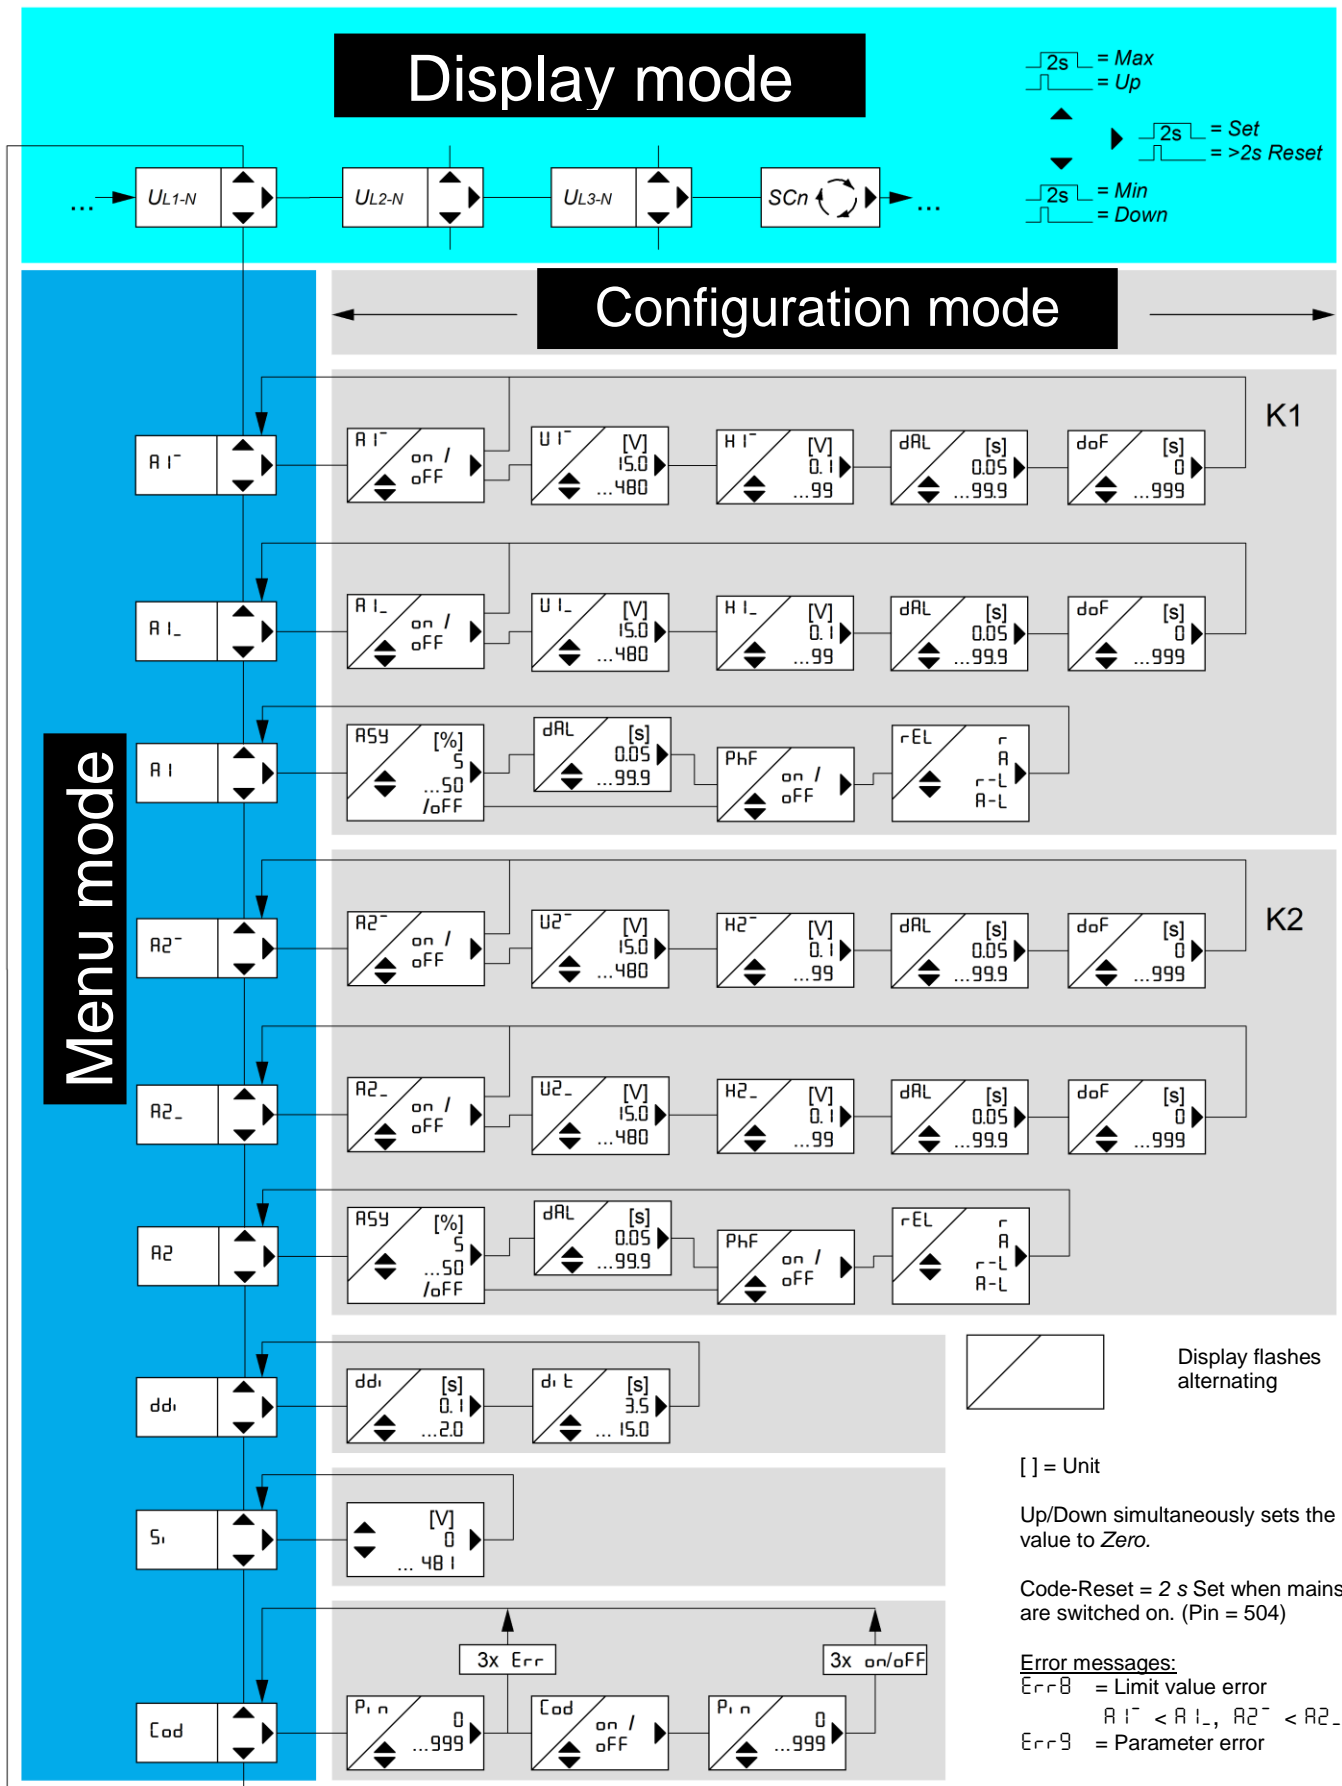


Display mode

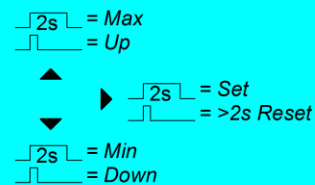


Configuration mode

Menu mode

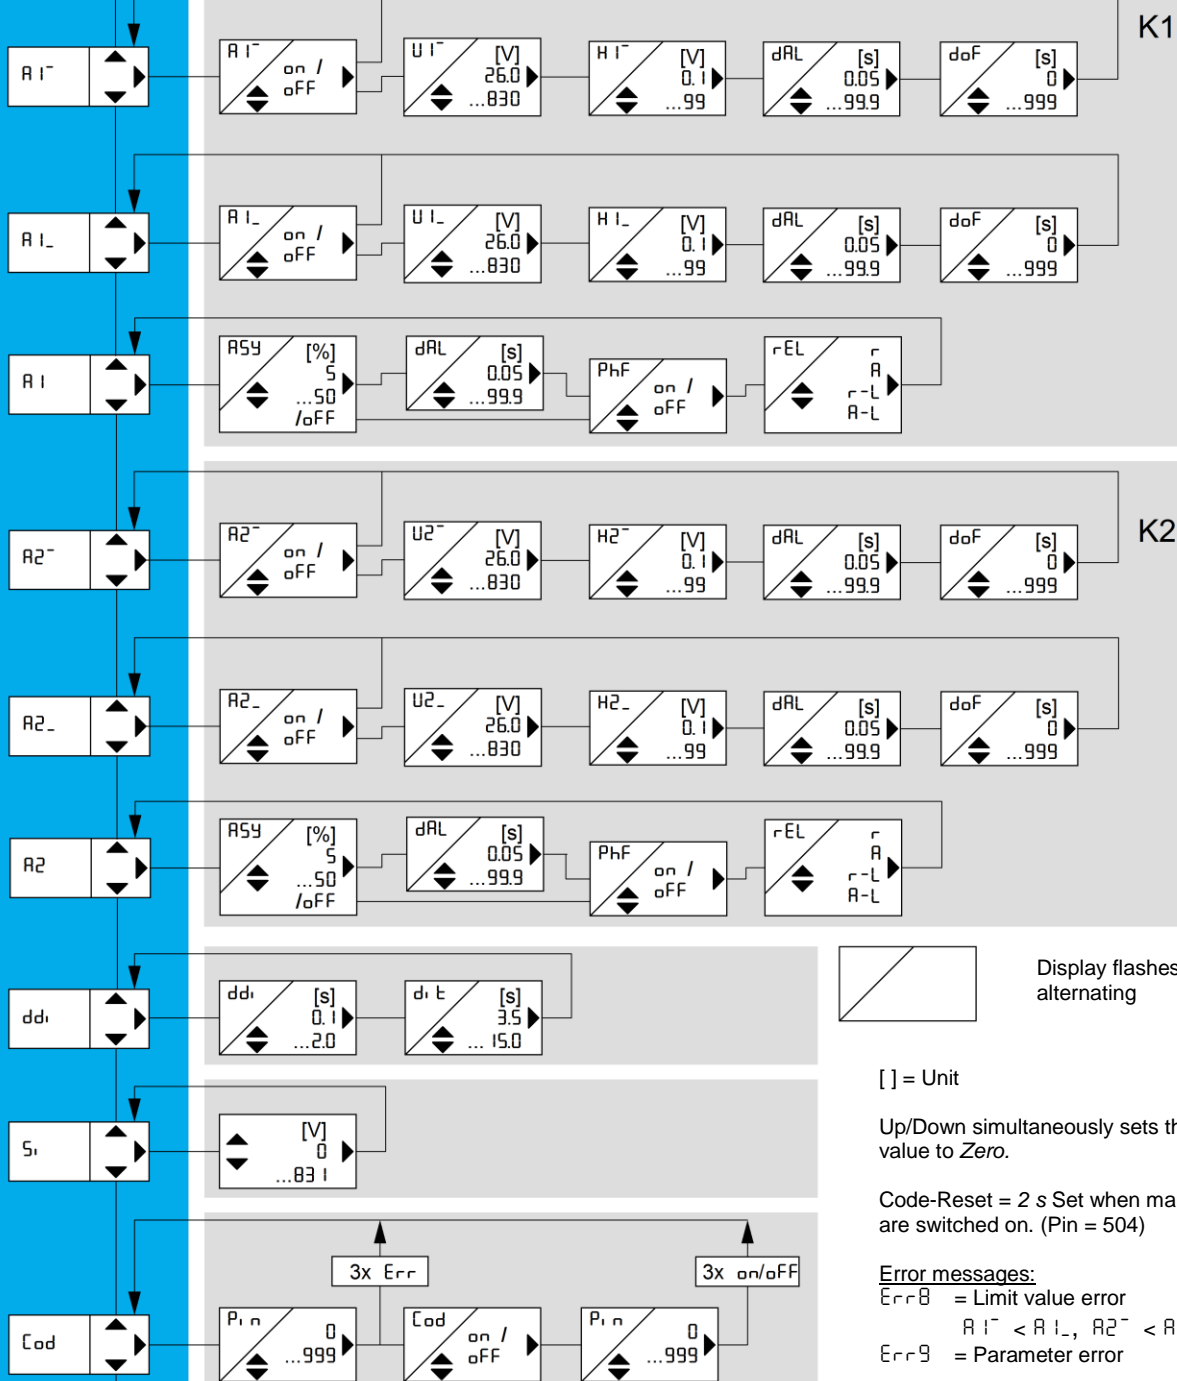


Display flashes alternating

Display mode

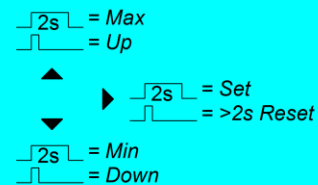


Configuration mode


Menu mode

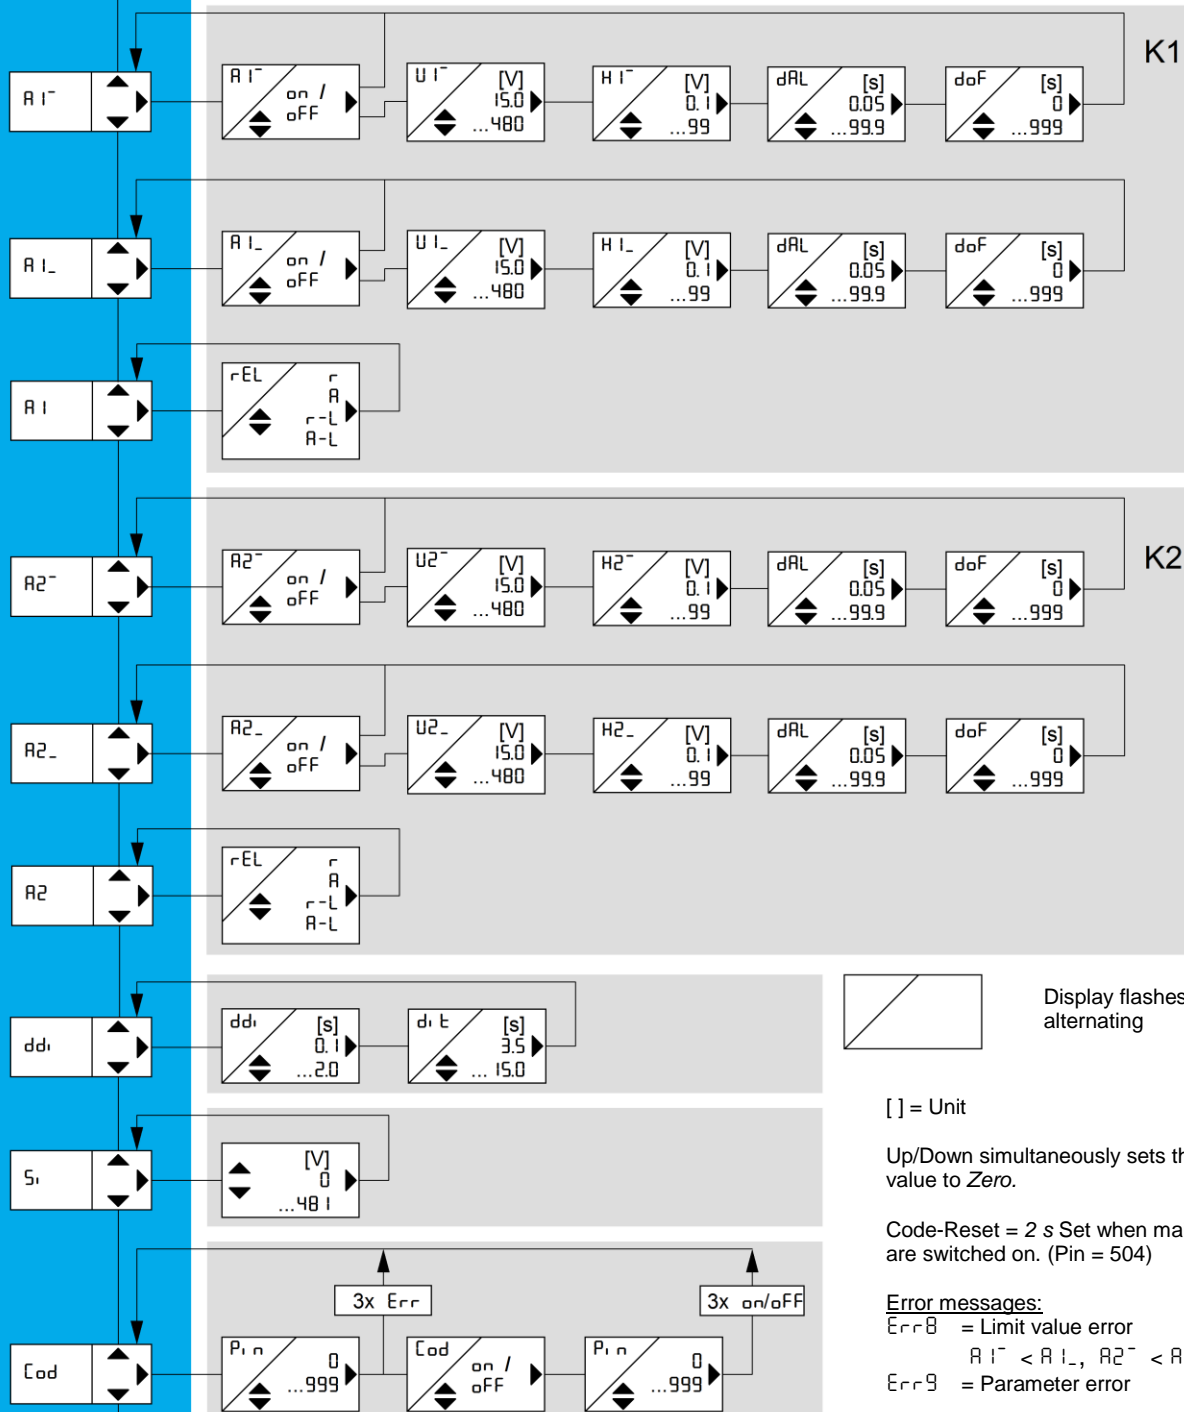

Display mode

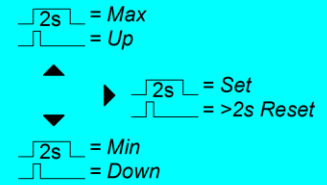

Configuration mode

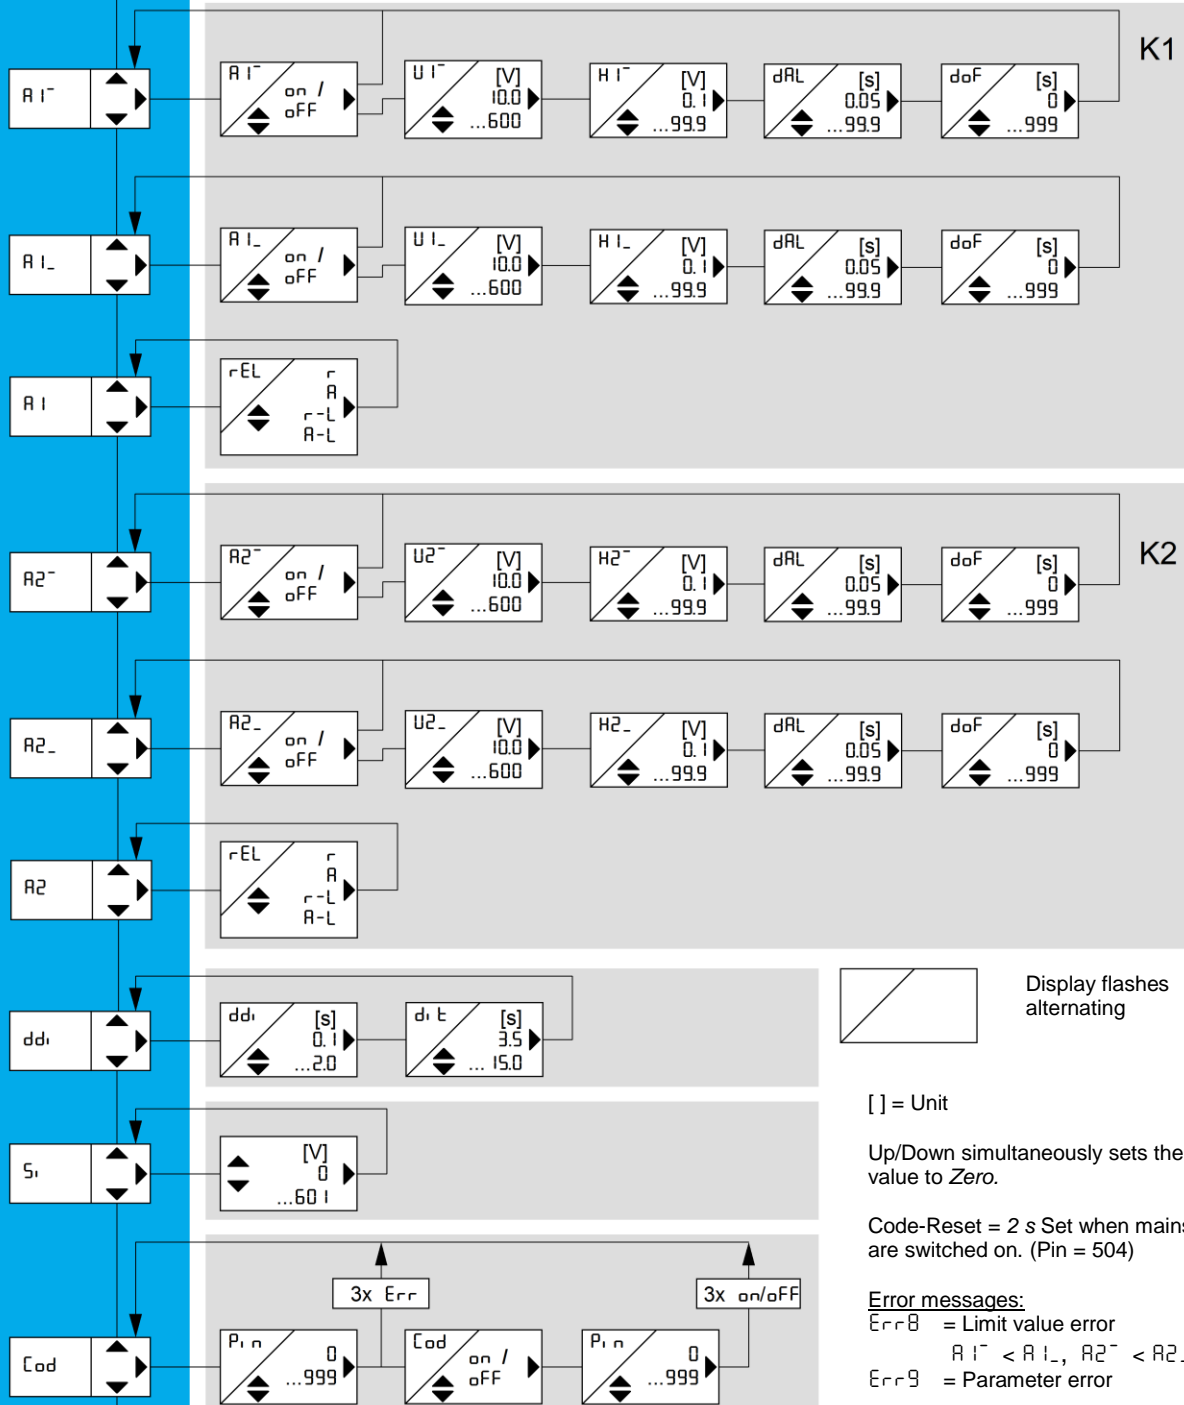

8.3 Description of the parameters

Parameter	Display	Explanation	Adjustment range
Alarms	$\overline{A1}$ $\overline{A2}$ $A1$ $A2$	Alarm 1, 2 Overvoltage (voltage increase) Alarm 1, 2 Undervoltage (voltage decrease)	on , off
Upper limit	$\overline{U1}$ $\overline{U2}$	Upper limit, $\overline{U1} < \overline{U1} \rightarrow Er$ $\overline{U2} < \overline{U2} \rightarrow Er$	15.0 ... 480 26.0 ... 830 10.0 ... 600
Lower limit	$U1$ $U2$	Lower limit, $U1 > \overline{U1} \rightarrow Er$ $U2 > \overline{U2} \rightarrow Er$	15.0 ... 480 26.0 ... 830 10.0 ... 600
Hysteresis upper limit	$\overline{H1}$ $\overline{H2}$	253 (Limit) - 5(Hysteresis) = 248 (Reset value)	0.1 ... 99
Hysteresis lower limit	$H1$ $H2$	196 (Limit) + 5(Hysteresis) = 201 (Reset value)	0.1 ... 99
Alarm delay (delay Alarm)	dAL	An alarm is suppressed for the set time (seconds).	0.05 ... 99.9
Reset delay (delay Off)	doF	Reset is delayed for the set time. On voltage recovery the control voltage, for K1 the reset delay set in $\overline{A1}$ and for K2 the reset delay set in $\overline{A2}$ counts down. All alarms, excepting during false phase sequence, are suppressed during this time.	0 ... 999
Asymmetry	ASY	Maximum phase symmetry, 10 (Limit) - 1(Fixed hysteresis) = 9 (Reset value)	off , 5 ... 50
Phase sequence	PhF	Monitors for clockwise rotating field, alarm will not be delayed	on , off
Relay function	\overline{rEL}	Idle current \overline{r} : Relay is pulled up in good state (= no alarm) and releases when the alarm value is reached. Alarm even when the control voltage is switched off. Locked $\overline{r-L}$: Reset only possible through Reset Operating current \overline{A} : Relay has released in good state and operates (attracts) when the alarm value has been reached. No alarm when the control voltage is switched off and during device faults. Locked $\overline{A-L}$: Reset only possible through Reset	\overline{r} \overline{A} $\overline{r-L}$ $\overline{A-L}$
Delay display	ddi	Interval during which the display is updated in the display mode	0.1 ... 2.0
Display time	di t	Display duration per measurement in the \overline{Scn} mode	3.5 ... 15.0

8.4 Display mode (last decimal point off)

In the display mode, the SW32V is in its normal state; the current voltages are displayed here. In addition, the alarm messages (e.g. **R1**, **R2L**, ...) and error codes (e.g. **Er9**) are displayed.

Function key Set / Reset	<u>Press briefly:</u> Switches over the measurements, after the last measurement value 5cn mode (measurements are cyclically displayed until Set is pressed briefly)
	<u>Press for > 2 s:</u> Resets after locked alarm (not possible if DoF Reset delay is counting down)
	<u>Press for > 4 s:</u> Displays the program, e.g. Pr 1
	<u>Press for > 10 s:</u> Displays the software version e.g. 0-5
Function key Up / Down	<u>Press briefly:</u> Changes into the menus mode
	<u>Press for ≥2 s:</u> Displays MAX and MIN measurements, additionally pressing the Set key for ≥ 2 s deletes the saved values

8.5 Menu mode (last decimal point on)

The menu mode is used to select the menu items. If no key is pressed for 30 s, one automatically returns to the display mode.

Function key Set / Reset	<u>Press briefly:</u> Changes into the configuration mode
	<u>Press for ≥2 s:</u> Returns to the display mode (the most recently set values are then applied)
Function key Up / Down	<u>Press briefly:</u> Selects menu item; switches to the display mode

8.6 Configuration mode (last decimal point flashes)

The value of a parameter can be set in the configuration mode. The display continually alternates between the parameter name and the currently set value until the Up/Down key is pressed, which changes the value of the parameter. If no key is pressed for 2 s, the display starts alternating again.

If no key is pressed for 30 s (simulation mode 15 min), one automatically returns to the display mode (the most recently set value is applied during this)

Function key Set / Reset	<u>Press briefly:</u> The settings are applied; continues to next parameter. After the last parameter, change into menu mode
	<u>Press for ≥2 s:</u> Returns to the display mode (the most recently set values are then applied)
Function key Up / Down	<u>Press short/long:</u> Changes the parameter value (fast/slow)

Hint: Pressing the Up and Down keys simultaneously sets the adjustable value to zero. If you keep the Up or Down key pressed while setting a value, the speed of the change in the display is accelerated.

8.7 Configuring the alarms

Adjustment process:

• Select the menu item with the Up/Down key until ...
⇒ Display 8A I⁻.8
• Press the Set key
⇒ Display 8A I⁻ 8 / 8 on 3 (Alarm / Status) flash alternately
• Use the Up and Down keys to select:
○ 8 off 8 off, limit monitoring inactive
○ 8 on 8 on, limit monitoring active
• Press the Set key
⇒ Display 8U I⁻ / 253 3 (Voltage / Limit value) flash alternately
• Set the desired limit using the Up and Down keys
• Press the Set key
⇒ Display 8H I⁻ / 8 5.0 8 (Hysteresis / Value) flash alternately
• Set the desired value with the Up and Down keys
• Press the Set key
⇒ Display 8dAL. / 0.10 8 (Delay alarm / Time) flash alternately
• Set the desired time using the Up and Down keys
• Press the Set key
⇒ Display 8 doF.8 / 8 0 8 (Delay off / Time) flash alternately
• Set the desired time using the Up and Down keys
• Press the Set key
⇒ Display 8A I⁻.8
• Press Down key
⇒ Display 8A I_L.8
• Press the Set key
⇒ Display 8A I⁻ / 8 on 3 (Alarm / Status) flash alternately
• Use the Up and Down keys to select:
○ 8 off 8 off, limit monitoring inactive
○ 8 on 8 on, limit monitoring active
• Press the Set key
⇒ Display 8U I_L / 253 3 (Voltage / Limit) flash alternately
• Set the desired limit using the Up and Down keys
• Press the Set key
⇒ Display 8H I_L / 8 5.0 8 (Hysteresis / Value) flash alternately
• Set the desired value with the Up and Down keys
• Press the Set key
⇒ Display 8dAL. / 0.10 8 (Delay alarm / Time) flash alternately
• Set the desired time using the Up and Down keys
• Press the Set key
⇒ Display 8 doF.8 / 8 0 8 (Delay off / Time) flash alternately
• Set the desired time using the Up and Down keys
• Press the Set key
⇒ Display 8A I_L.8

• Press Down key
⇒ Display 88 I .8
• Press the Set key
⇒ Display 8854. / 8OFF8 (Asymmetry / Status) flash alternately
• Set the desired limit or switch off the monitoring with the Up and Down keys
• Press the Set key
⇒ Display 8dRL. / 80.108 (Delay alarm / Time) flash alternately
• Set the desired time using the Up and Down keys
• Press the Set key
⇒ Display 8PhF.8 / 8OFF (Phase sequence / Status) flash alternately
• Switch monitoring on or off with the Up and Down keys
• Press the Set key
⇒ Display 8rEL / 8r (Relay / Parameter) flash alternately
• Set the desired parameter using the Up and Down keys
• Press the Set key
⇒ Display 8RL I.8
• Repeat configuration for Alarm 2

8.8 Configure Delay Display, Display Time

Adjustment process:

• Select the menu item with the Up/Down key until ...
⇒ Display 8dd. (Delay display)
• Press the Set key
⇒ Display 8dd.8 / 80.5 (Delay display / Actual time) flash alternately
• Set the desired time using the Up and Down keys
• Press the Set key
⇒ Display 8d. t. (Display time)
• Set the desired time using the Up and Down keys
• Press the Set key
⇒ Display 8dd. (Delay display)

8.9 Simulation

You can simulate a measurement and test the setting here. All 3 phases are simulated simultaneously. All device functions operate as if this value is actually being measured. Alarm and error messages are only indicated with the LEDs and not in the display.

The set values are simulated until the menu item 85. . is exited with the Up or Down key. If the SW32V is locked, simulation is not possible.

Adjustment process:

• Select the menu item with the Up/Down key until...
⇒ Display 5.8 (Simulation)
• Press the Set key
• A voltage value can be simulated with the Up and Down keys (voltage = most recently set value)
• Press the Set key (exits the configuration mode)
⇒ Display 5.8 (Simulation)

After exiting the Simulation menu item with the Up/Down keys, the unit switches over to monitoring the limits.

If no key is pressed for 15 minutes, the device automatically switches back to the display mode.

8.10 Code lock

Here, the set parameters can be protected by activating a code lock.

The device acknowledges an incorrect entry with **Err** (flashes three times).

Adjustment process:

• Select the menu item with the Up/Down key until...
⇒ Display Clod (Code lock)
• Press the Set key
⇒ Display Pin / 0 (Pin / Pin code) flash alternately
• Use the Up and Down keys to set the saved pin code (factory setting is 504)
• Press the Set key
• Set the desired code lock using the Up and Down keys: <ul style="list-style-type: none"> • oFF off, all parameters can be changed • on on, no parameters can be changed
• Press the Set key
⇒ Display Pin / 504 (Pin / Pin code) flash alternately
• Set the desired new pin code with the Up and Down keys (caution: write down the pin code)
• Press the Set key
⇒ Code lock on, display on flashes three times
⇒ Code lock off, display oFF flashes three times
⇒ Return to menu mode, menu item code lock

If there are any problems with the code lock (pin forgotten), the lock can be switched off and the pin can be reset to 504 by keeping the Set key pressed while switching on the mains until **Clod / oFF** appears in the display.

8.11 Possible indications in display

Display mode

A 1 , A 2 , A 1L , A2L , A 1L , A2L	Alarm1, Alarm2, additional "L" locked, Reset required to reset
Er8 ... Er9	Error messages (see 11. Error messages and measures)

Menu mode / Configuration mode

A 1 ⁻ , A 2 ⁻	Alarms for the upper limits
A 1 ₋ , A 2 ₋	Alarms for the lower limits
U 1 ⁻ , U 2 ⁻	Upper limits
U 1 ₋ , U 2 ₋	Lower limits
H 1 ⁻ , H 2 ⁻	Hysteresis upper limit
H 1 ₋ , H 2 ₋	Hysteresis lower limit
dAL	Alarm delay
doF	Reset delay
A 1 , A 2	Alarms
ASY	Asymmetry
PhF	Phase sequence
rEL	Relay function
0 r , 0 A	Zero signal (idle) current, operating current
0 r-L , 0 A-L	Zero signal current locked, operating current locked
0 on , 0 oFF	On, Off
0 dd	Delay display, to calm down the display
0 dt	Display duration per measurement in the 0 Scn mode
0 Si	Simulation
0 Cod	Code lock, locked
0 Pi n	Pin code (factory setting 504)

9 Factory settings and software version

When changing programs, all parameters are reset to the factory settings.

Menu-point	Parameter / Unit		Factory setting				My data
			Pr 1	Pr 2	Pr 3	Pr 4	
R1 ⁺	R1 ⁺ (Alarm)		on	on	on	on	
	U1 ⁺ (upper limit)	V	253	440	253	242	
	H1 ⁺ (Hysteresis)	V	5.0	5.0	5.0	5.0	
	dRL (Alarm delay)	s	0.10	0.10	0.10	0.10	
	doF (Reset delay)	s	0	0	0	0	
RL ₋	RL ₋ (Alarm)		on	on	on	on	
	U1 ₋ (lower limit)	V	196	340	196	19	
	H1 ₋ (Hysteresis)	V	5.0	5.0	5.0	5.0	
	dRL (Alarm delay)	s	0.10	0.10	0.10	0.10	
	doF (Reset delay)	s	0	0	0	0	
R1	ASY (Asymmetry)	%	oFF	oFF			
	dRL (Alarm delay)	s	0.10	0.10			
	PhF (Phase sequence)		oFF	oFF			
	rEL (Relay function)		r	r	r	r	
R2 ⁺	R2 ⁺ (Alarm)		on	on	on	on	
	U2 ⁺ (upper limit)	V	253	440	253	242	
	H2 ⁺ (Hysteresis)	V	5.0	5.0	5.0	5.0	
	dRL (Alarm delay)	s	0.10	0.10	0.10	0.10	
	doF (Reset delay)	s	0	0	0	0	
R2 ₋	R2 ₋ (Alarm)		on	on	on	on	
	U2 ₋ (lower limit)	V	196	340	196	19	
	H2 ₋ (Hysteresis)	V	5.0	5.0	5.0	5.0	
	dRL (Alarm delay)	s	0.10	0.10	0.10	0.10	
	doF (Reset delay)	s	0	0	0	0	
R2	ASY (Asymmetry)	%	oFF	oFF			
	dRL (Alarm delay)	s	0.10	0.10			
	PhF (Phase sequence)		oFF	oFF			
	rEL (Relay function)		r	r	r	r	
dd _i	dd _i (Display delay)	s	0.5				
	d _i t (Display duration)	s	3.5	3.5	3.5	3.5	
S _i	U (Voltage)	V	230	400	230	200	
CodE	on / oFF		oFF	oFF	oFF	oFF	
	P _i n (Pin code)		504	504	504	504	

Display the program: Press the "Set" key for 4 s in the display mode.

Display the software version: Press the "Set" key for 10 s in the display mode.

10 Maintenance and repair

The SW32V is maintenance-free. If necessary, periodically test for proper functioning.

11 Troubleshooting and measures

Fault	Cause	Remedy
EEE or -EE appears in the display	Measurement is above/below range	Measured voltage is too large or too small; comply with measurement range
E-8 appears in the display	Limit error	$U1_{\text{L}} > U1_{\text{H}}$ $U2_{\text{L}} > U2_{\text{H}}$ Upper limit must be larger than lower limit
E-9 appears in the display	Parameter error, internal error	Switch unit on and off, if necessary, rest to factory settings. If the error message continues, send the unit back to the factory for repair.
The device cannot be configured	Code lock	<p>The code lock provides protection against unauthorised manipulations on the device. If the code lock is active, the parameters cannot be changed. The pin can be set by the user.</p> <p><u>Pin code unknown? -> Perform a code reset:</u></p> <ul style="list-style-type: none"> While switching on the control voltage, keep the "Set" key pressed for 2 s <p>⇒ The display alternates 8888 – Cod</p> <p>– 0FF – 8888</p> <p>⇒ Release the Set key</p> <p>Code lock is switched off, Pin code = 504</p>
Implausible voltage value	Pr selected with N, but N not connected	Select Pr without N or connect N

12 Technical Data

Control voltage Us:

Rated connection

AC/DC 24-270 V, 0/45...65 Hz, < 5 VA

DC: 20.4...297 V, AC: 20.4...297 V

Output relay:

Switching voltage

2 x change-over contact
Max. AC 440 V

Conventional thermal current I_{th}

6 A

Inrush current (at 10 % ED)

25 A max. 4 s / 50 A max. 1 s

Nominal operating current I_e (AC 15)

6 A AC 250 V

Recommended series fuse

gG/gL 6 A

Contact service life, mech.

30 x 10⁶ operating cycles

Contact service life, electr.

1 x 10⁶ operating cycles at AC 250 V / 6 A

2 x 10⁵ operating cycles at

AC 250 V / 10 A cos φ 0.6

Voltage measurement:

Measurement voltage DC

DC 10.0...600V

Measurement voltage phase – phase

AC 26.0...830 V (< 5V: 0 is displayed)

Measurement voltage phase – N

AC 15.0...480 V (< 5V: 0 is displayed)

Frequency AC measurement

40...100 Hz

Measurement time DC

DC Mean value over 50ms

Measurement time AC

< 50ms

Measurement accuracy DC

0.5% of measurement ± 1 digit

Measurement accuracy AC (with N)

> 100V: 0.8% of measurement ± 1 digit

< 100V: 0.8% of measurement ± 5 digits (res. 0.1V)

Measurement accuracy AC (without N)

> 100V: 1.0% of measurement ± 1 digit

< 100V: 1.0% of measurement ± 5 digits (res. 0.1V)

Measurement principle

Real root mean square measurement (both half waves)

Hysteresis

Adjustable 1...99 V

Accuracy asymmetry

± Asymmetry in % * 0.15

Hysteresis asymmetry

Fixed 1%

Measuring functions

3-phase with/without N, 1-phase against N, DC

Response time

Adjustable 0.05 (±15ms)...99.9 s

Reset time

Adjustable 0(>200ms) ... 999 s

Delay with Us on

4s + $\frac{R_{L8}}{R_{L8}}$ → $\frac{d_{oF8}}{d_{oF8}}$ for K1 ($\frac{R_{L8}}{R_{L8}}$ → $\frac{d_{oF8}}{d_{oF8}}$ for K2)

Test conditions

Rated impulse withstand voltage

EN 60255

Surge category III

6000 V

Pollution level 2

Rated insulation voltage U_i

AC 690 V

Insulation group

II

Operating time

100 %

Permissible ambient temperature

-20 °C... +55 °C

EN 60 068-2-1 dry heat

EMC - noise immunity

EN 61000-6-2

EMC - noise emission

EN 61000-6-4

Housing:

Mounting type

V4

Front-to-back size

55 mm

Dimensions (W x H x D)

90 x 70 x 58 mm

Wiring connection single strand

ea. 1 x 4 mm²

Finely stranded with wire end ferrule

ea. 1 x 2.5 mm²

Protection class, housing

IP 30

Protection class, terminals

IP 20

Mounting

Snap-on fastening on 35 mm mounting rail acc

EN 60 715 or with M4 screwed attachment

(additional bar not included in the scope of delivery)


Weight:

approx. 200 g

We reserve the right to make technical changes

13 Mounting type V4

Dimensions in mm

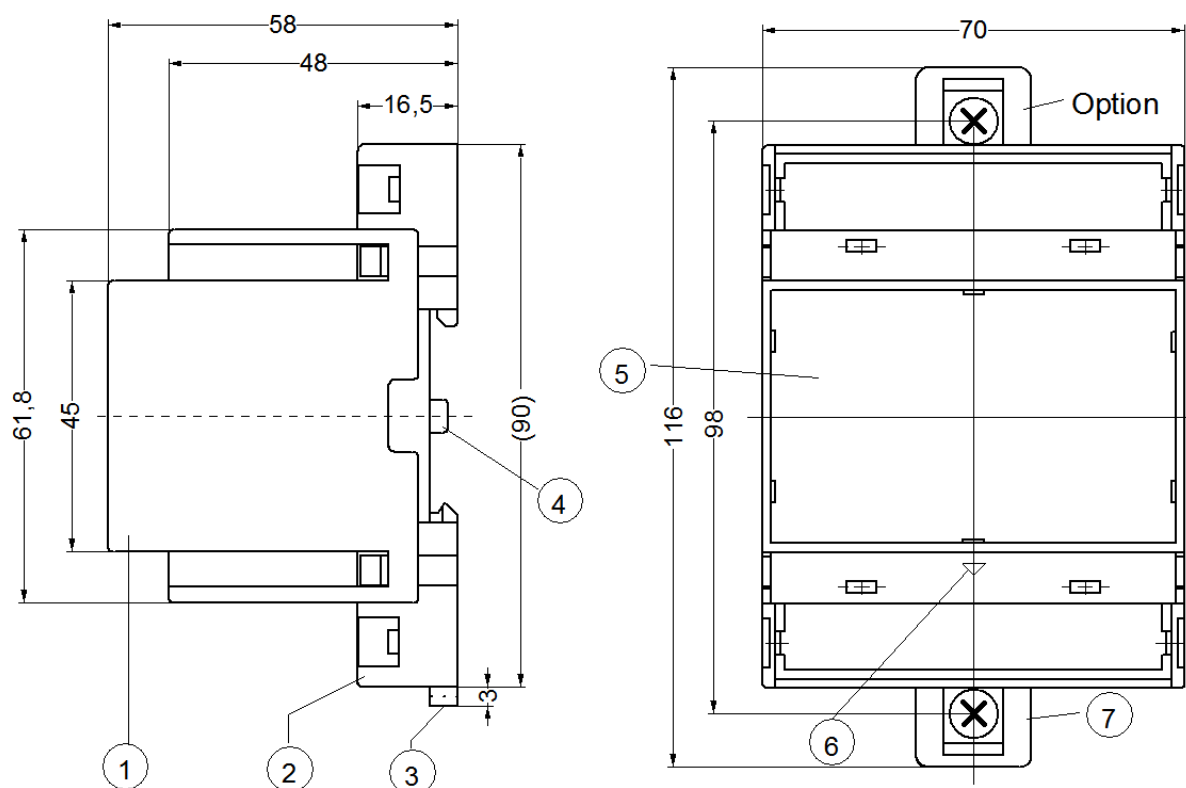

- 1 Cover
- 2 Base
- 3 Bar for snap mounting
- 4 Latch for sealing
- 5 Front panel
- 6 Identification for bottom / position downward
- 7 Bar for wall mounting with screws. Bar drill hole \varnothing 4.2 mm / for fixing to wall with screws, \varnothing 4.2 mm.

You can find it and additional operating instructions in the Internet at www.ziehl.com

You'll find this and other user manuals also written in English in the internet at www.ziehl.com